



# Using The Dual Mode Pad; Using Dual Mode - Toshiba P205-S6277 User Manual

P205-s6277 user's guide



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
Table Of Contents  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

 
68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167

168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202  
203  
204  
205  
206  
207  
208  
209  
210  
211  
212  
213  
214  
215  
216  
217



218  
219  
220  
221  
222  
223  
224  
225  
226  
227  
228  
229  
230  
231  
232  
233  
234  
235  
236  
237  
238  
239  
240  
241  
242



•

[Table of Contents](#)

•

## Bookmarks





# 66

## Getting Started

---

*Using the Dual Mode Pad*

## **Using the Dual Mode Pad** **(Available on certain models)**

### **Using Dual Mode**

The Dual Mode feature allows you to switch between Cursor

Mode

(the default mode) and Button Mode.

In Button Mode, you can use the virtual buttons on the Dual Mode Pad which provide convenient shortcuts to frequently used applications. You can also use the volume control bar to adjust the system volume quickly and easily.

### Using the Virtual Buttons

The Dual Mode Pad has six virtual buttons and a volume control bar. Each virtual button can be configured to start an application. The volume control bar is used to adjust the system volume level.

Virtual  
buttons  
Virtual  
buttons

*(Sample Illustration) Virtual buttons on the Dual Mode Pad*

### NOTE

The virtual buttons at the top of the Dual Mode Pad have the following default settings:



Left button: Opens the assigned email application




Middle button: Opens the ConfigFree utility (see the Toshiba online Help for more information)



Right button: Opens the Windows

The other three virtual buttons have no default settings. You must configure these buttons in the Mouse Properties dialog box before they can be used.

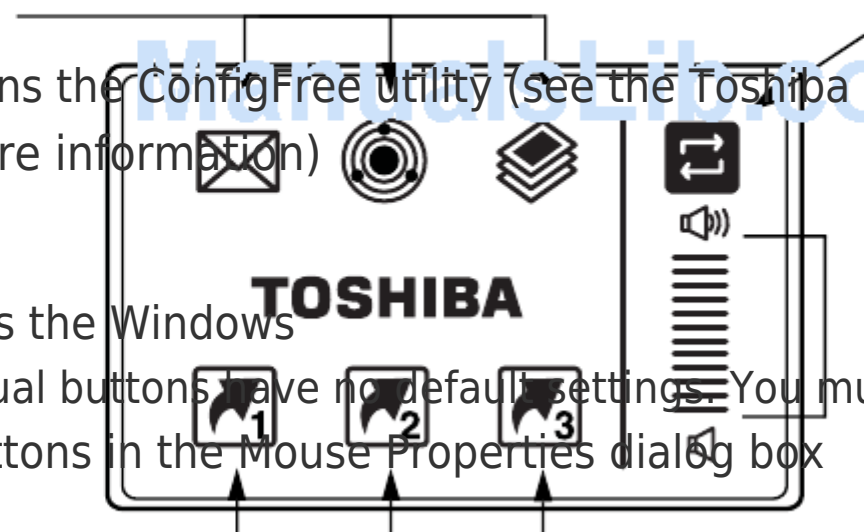

Activating the Dual Mode Pad will deactivate an external mouse.

Mode switch  
button

Volume  
control

bar

®

Photo Gallery

[Table of Contents](#)



1  
...  
63  
64  
65  
**66**  
67  
68  
69  
70

Quick Links:

[Your Computer's Features and Specifications](#)

## Related Manuals for Toshiba P205-S6277

[Laptop Toshiba Satellite P205-S6277 Specifications](#)

Toshiba satellite p205-s6277: specifications (4 pages)

[Laptop Toshiba Satellite P200 Maintenance Manual](#)

(251 pages)

[Laptop Toshiba Satellite P205D Maintenance Manual](#)

(249 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(238 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(220 pages)

[Laptop Toshiba Satellite Pro P200 Series User Manual](#)

(194 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

Toshiba laptop user's manual p200 (194 pages)

[Laptop Toshiba Satellite P200 Series Maintenance Manual](#)

(193 pages)

[Laptop Toshiba P200 Series User Manual](#)

Toshiba dvd video player user's manual (183 pages)

[Laptop Toshiba Satellite P205-S6267 Specifications](#)

Toshiba satellite p205-s6267: specifications (4 pages)

[Laptop Toshiba Satellite P205-S6337 Specifications](#)

Toshiba satellite p205-s6337: specifications (4 pages)

[Laptop Toshiba Satellite P205-S6347 Specifications](#)

Toshiba satellite p205-s6347: specifications (4 pages)

[Laptop Toshiba Satellite P205-S7402 Specifications](#)

Toshiba satellite p205-s7402: specifications (4 pages)

[Laptop Toshiba Satellite P205-S7457 Specifications](#)

Toshiba satellite p205-s7457: specifications (4 pages)

[Laptop Toshiba Satellite P205-S7469 Specifications](#)

Toshiba satellite p205-s7469: specifications (4 pages)

[Laptop Toshiba Satellite P205-S7476 Specifications](#)

Toshiba satellite p205-s7476: specifications (4 pages)

## Related Content for Toshiba P205-S6277

[Satellite A210 Series Dual Mode Pad Button Function \(Dual Mode Pad Is Provided With Some Models\)](#)

Toshiba Satellite A210 Series

[Satellite A200 Series Dual Mode Pad Button Function \(Dual Mode Pad Is Provided With Some Models\)](#)

TOSHIBA Satellite A200 Series

[A200 series Dual Mode Pad Button Function \(Dual Mode Pad Is Provided With Some Models\)](#)

Toshiba A200 series

[Satellite P200 Series Dual Mode Pad Button Function \(Dual Mode Pad Is Provided With Some Models\)](#)

Toshiba Satellite P200 Series

[PSPB0U-00W008 Dual Mode Pad Button Function \(Dual Mode Pad Is Provided With Some Models\)](#)

Toshiba PSPB0U-00W008

[PSAAKC-VA104C Using The Touch Pad/Dual Mode Pad](#)

Toshiba PSAAKC-VA104C

[P105 S6197 - Satellite - Core 2 Duo 1.6 GHz Using The Dual Mode Pad](#)

Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz  
[Satellite X200-AA3 Using The Dual Mode Pad](#)

Toshiba Satellite X200-AA3

This manual is also suitable for:

[P205-s7469P205-s7476P205-s7482P205-s6297P205-s7484P205-s8811](#) ... [Show all](#)