

Starting A Program From Windows Explorer - Toshiba P205-S6277 User Manual

P205-s6277 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
Table Of Contents
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242



•

[Table of Contents](#)

•

Bookmarks



92

Learning the Basics

Starting a program

NOTE

2

Click the program group, in this example, Accessories.

The Accessories menu is displayed.

3

Click the program, in this example, WordPad.

WordPad opens.

To close the program, click the Close button in the upper-right corner of the program's window.

Starting a program from Windows

If a program is not listed in the All Programs menu, you can start it from Windows

your computer's contents as a hierarchy or "tree." You can easily see the contents of each drive and folder on your computer. To use this method, you should know the file name and location of the program's executable file (this file ends with .exe).

This example opens WordPad using Windows

1

Click Start,  and then All Programs.

NOTE

2

Click Accessories.

3

Click Windows Explorer.

4

In the left part of the window, double-click Computer to expand the window.

5

In the left part of the window, click the line that ends in "Local Disk (C:)."

6

In the left part of the window, under the Local Disk C: icon, double-click the folder containing the program, in this case

Program Files.

Windows

folder on the right side of the window. The left side of the window shows all the folders contained within the Program Files folder.

7

In the left part of the window, double-click Windows NT. If you pause with your mouse on All Programs, it will open it up. You may need to scroll up or down to see the complete list.

®

Explorer. Windows

If you pause with your mouse on All Programs, it will open it up. You may need to scroll up or down to see the complete list.

®

Explorer shows the contents of the Program Files

®



Explorer

®

Explorer gives you a view of

®

Explorer.

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
89
90
91
92
93
94
95
96

Quick Links:

[Your Computer's Features and Specifications](#)

Related Manuals for Toshiba P205-S6277

[Laptop Toshiba Satellite P205-S6277 Specifications](#)

Toshiba satellite p205-s6277: specifications (4 pages)

[Laptop Toshiba Satellite P200 Maintenance Manual](#)

(251 pages)

[Laptop Toshiba Satellite P205D Maintenance Manual](#)

(249 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(238 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(220 pages)

[Laptop Toshiba Satellite Pro P200 Series User Manual](#)

(194 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

Toshiba laptop user's manual p200 (194 pages)

[Laptop Toshiba Satellite P200 Series Maintenance Manual](#)

(193 pages)

[Laptop Toshiba P200 Series User Manual](#)

Toshiba dvd video player user's manual (183 pages)

[Laptop Toshiba Satellite P205-S6267 Specifications](#)

Toshiba satellite p205-s6267: specifications (4 pages)

[Laptop Toshiba Satellite P205-S6337 Specifications](#)

Toshiba satellite p205-s6337: specifications (4 pages)

[Laptop Toshiba Satellite P205-S6347 Specifications](#)

Toshiba satellite p205-s6347: specifications (4 pages)

[Laptop Toshiba Satellite P205-S7402 Specifications](#)

Toshiba satellite p205-s7402: specifications (4 pages)

[Laptop Toshiba Satellite P205-S7457 Specifications](#)

Toshiba satellite p205-s7457: specifications (4 pages)

[Laptop Toshiba Satellite P205-S7469 Specifications](#)

Toshiba satellite p205-s7469: specifications (4 pages)

[Laptop Toshiba Satellite P205-S7476 Specifications](#)

Toshiba satellite p205-s7476: specifications (4 pages)

Related Content for Toshiba P205-S6277

[Satellite R10 Starting A Program From Windows Explorer](#)

Toshiba Satellite R10

[Satellite M45 Starting A Program From Windows Explorer](#)

Toshiba Satellite M45

[X305-Q705 - Qosmio - Core 2 Duo GHz Starting A Program From Windows Explorer](#)

Toshiba X305-Q705 - Qosmio - Core 2 Duo GHz

[U205-S5002 - Satellite - Core Duo 1.66 GHz Starting A Program From Windows Explorer](#)

Toshiba U205-S5002 - Satellite - Core Duo 1.66 GHz

[P105 S6197 - Satellite - Core 2 Duo 1.6 GHz Starting A Program From Windows Explorer](#)

Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz

[P505 S8970 - Satellite - Core 2 Duo 2.2 GHz Starting A Program From Windows Explorer](#)

Toshiba P505 S8970 - Satellite - Core 2 Duo 2.2 GHz

[R10 S4401 - Tecra - Core 2 Duo 2.26 GHz Starting A Program From Windows Explorer](#)

Toshiba R10 S4401 - Tecra - Core 2 Duo 2.26 GHz

[M45-S165 - Satellite - Celeron M 1.5 GHz Starting A Program From Windows Explorer](#)

Toshiba M45-S165 - Satellite - Celeron M 1.5 GHz

This manual is also suitable for:

[P205-s7469P205-s7476P205-s7482P205-s6297P205-s7484P205-s8811](#) ... [Show all](#)