

Recording Optical Media; Removing A Disc With The Computer On - Toshiba P300-ST3014 User Manual

P300-st3014 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231

•

Table of Contents

-

Bookmarks

--



Recording optical media

Depending on the configuration, your computer may come with an

optical drive that allows you to:

Play pre-recorded and recorded optical media.

Read/write data and multi-media files to recordable optical media.



For more information regarding supported optical media formats please refer to your computer's detailed specifications at



pcsupport.toshiba.com.

NOTE

For details on how to use the software, please refer to the respective Online Help menus.

Removing a disc with the computer on

To remove an optical disc with the computer turned on:

1

Press the eject button on the drive.

2

Pull the tray out until it is fully open, remove the disc, and place it in its protective cover.

3

Gently press the tray in to close it.

Due to manufacturing and quality variations in third party optical media (e.g., CD or DVD) or optical media players/recorders, in certain cases, your Toshiba optical drive may not record on certain optical media that bear the applicable logo, or play back optical media recorded by other computers or optical media recorders. Additionally, certain optical media recorded on your optical drive may not play back or operate properly on other computers or optical media players. These problems are not due to any defect in your Toshiba computer or optical drive. Please refer to your computer's product specification for listing of specific format compatibilities. Copy protection technology may also prevent or limit recording or viewing of certain optical media.

Do not press the eject button while the in-use indicator light is glowing. Doing so could damage the disc or the drive.

Also, if the disc is still spinning when you open the disc tray, wait for it to stop spinning before you remove it.

Learning the Basics

Using the optical drive

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

100

101

102

103

Quick Links:

[Adding Memory \(Optional\)](#)

Related Manuals for Toshiba P300-ST3014

[Desktop Toshiba Satellite P300 Maintenance Manual](#)

Personal computer (315 pages)

[Laptop Toshiba Satellite A305-S6839 User Manual](#)

Portable personal computer (226 pages)

[Laptop Toshiba SATELLITE P300 User Manual](#)

Portable personal computer (208 pages)

[Laptop Toshiba P300 User Manual](#)

Notebook computer (199 pages)

[Laptop Toshiba Satellite P300-0E2028 Resource Manual](#)

Toshiba satellite p300-0e2028: reference guide (52 pages)

[Laptop Toshiba Satellite P305-S8838 Specifications](#)

Toshiba satellite p305-s8838: specifications (4 pages)

[Laptop Toshiba Satellite P305-S8842 Specifications](#)

Toshiba satellite p305-s8842: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8828 Specifications](#)

Toshiba satellite p305d-s8828: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8829 Specifications](#)

Toshiba satellite p305d-s8829: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8900 Specifications](#)

Toshiba satellite p305d-s8900: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8903 Specifications](#)

Toshiba satellite p305d-s8903: specifications (4 pages)

[Laptop Toshiba Satellite P305-S8814 Product Specifications](#)

(3 pages)

[Laptop Toshiba Satellite P305-S8822 Specifications](#)

Toshiba satellite p305-s8822: specifications (3 pages)

[Laptop Toshiba Satellite P305-S8832 Specifications](#)

Toshiba satellite p305-s8832: specifications (3 pages)

[Laptop Toshiba Satellite P305D-S8818 Specifications](#)

Toshiba satellite p305d-s8818: specifications (3 pages)

[Laptop Toshiba Satellite P305D-S8834 Specifications](#)

Toshiba satellite p305d-s8834: specifications (3 pages)

Related Content for Toshiba P300-ST3014

[Satellite L550 Series Recording Optical Media](#)

Toshiba Satellite L550 Series

[TECRA A50 series Recording Optical Media](#)

Toshiba TECRA A50 series

[Qosmio X300 Series Recording Optical Media](#)

Toshiba Qosmio X300 Series

[Satellite Recording Optical Media](#)

Toshiba Satellite

[Portégé R830 Series Recording Optical Media](#)

Toshiba Portégé R830 Series

[Satellite Pro L40 Series Recording Optical Media](#)

Toshiba Satellite Pro L40 Series

[SatellitePro L700 Series Recording Optical Media](#)

Toshiba SatellitePro L700 Series

[Portégé R30-A Series Recording Optical Media](#)

Toshiba Portégé R30-A Series

This manual is also suitable for:

P305-s8830P305-s8832P305-s8837P305-s8838P305-s8842P305-s8844 ... [Show all](#)