

Removing A Disc With The Computer Off; Caring For Optical Discs; Toshiba's Online Resources - Toshiba P300-ST3014 User Manual

P300-st3014 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231


•

Table of Contents

-

Bookmarks

--

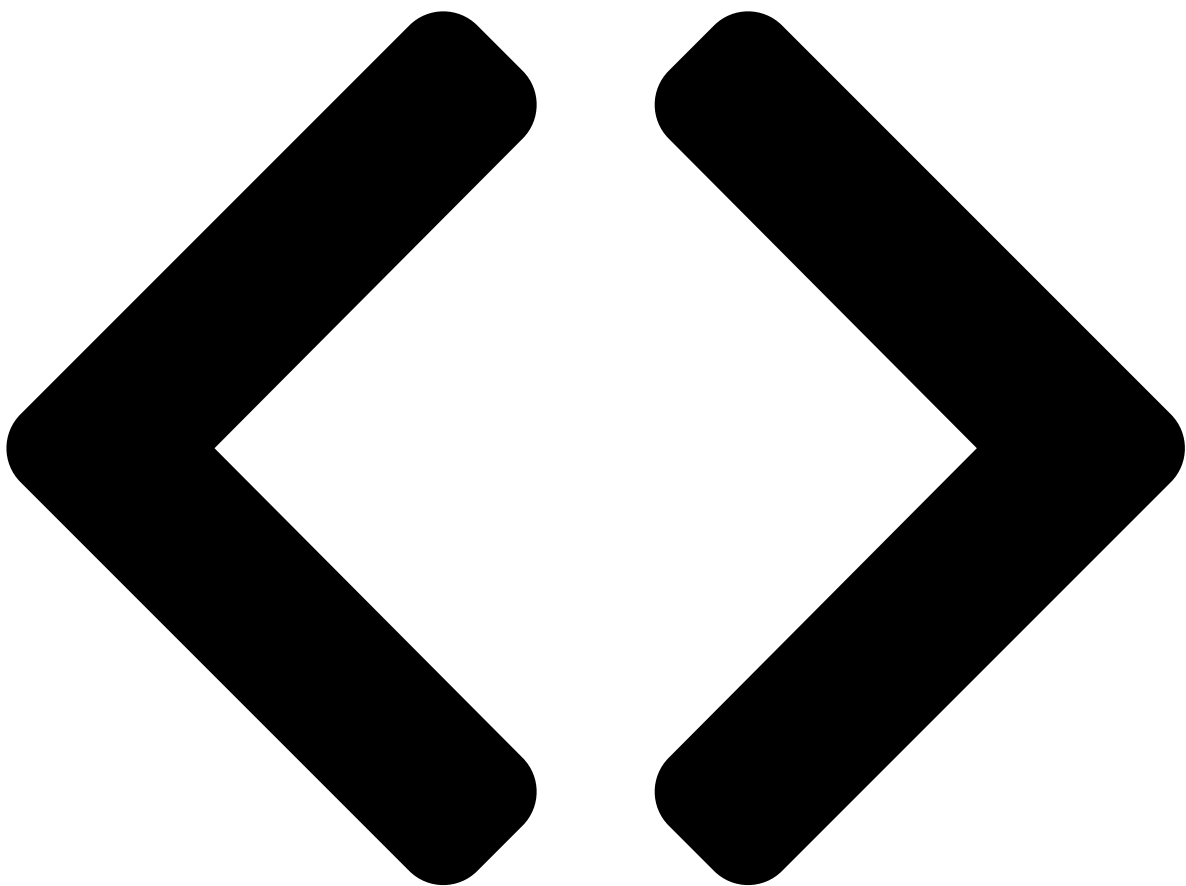

102

Learning the Basics

Toshiba's online resources

Removing a disc with the computer off

To remove a disc with the computer turned off:

1

Insert a slender object, such as a straightened paper clip, into

the manual eject hole.

The disc tray slides partially out of the drive (about 1 inch).

2

Pull the tray out until it is fully open, remove the disc, and place it in its protective cover.

3

Gently press the tray in to close it.

Caring for optical discs

Store your discs in their original containers to protect them from scratches and keep them clean.

Do not bend a disc or place heavy objects on top of it.

CAUTION

Do not apply a label to, or otherwise mar the surface of, a disc.

Hold a disc by its outside edge. Fingerprints on the surface can prevent the optical drive from reading the data properly.

Do not expose discs to direct sunlight or extreme heat or cold.

To clean a disc that is dirty, wipe it with a clean, dry cloth. The most efficient method to clean it is to start from the center of the disc and wipe toward the outward edge (not in a circle). If necessary, moisten the cloth with water or a neutral cleaner (not benzine or rubbing alcohol). Let the disc dry completely before inserting it in the drive.

Toshiba's online resources

Toshiba maintains a number of online sites to which you can connect. These sites provide information about Toshiba products,

give help with technical questions and keep you up to date with future upgrades. For more information, see

[on page](#)

Never use a pencil to press the manual eject button. Pencil lead can break off inside the computer and damage it.

193.

"Contacting Toshiba"

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

101

102

103

104

Quick Links:

[Adding Memory \(Optional\)](#)

Related Manuals for Toshiba P300-ST3014

[Desktop Toshiba Satellite P300 Maintenance Manual](#)

Personal computer (315 pages)

[Laptop Toshiba Satellite A305-S6839 User Manual](#)

Portable personal computer (226 pages)

[Laptop Toshiba SATELLITE P300 User Manual](#)

Portable personal computer (208 pages)

[Laptop Toshiba P300 User Manual](#)

Notebook computer (199 pages)

[Laptop Toshiba Satellite P300-0E2028 Resource Manual](#)

Toshiba satellite p300-0e2028: reference guide (52 pages)

[Laptop Toshiba Satellite P305-S8838 Specifications](#)

Toshiba satellite p305-s8838: specifications (4 pages)

[Laptop Toshiba Satellite P305-S8842 Specifications](#)

Toshiba satellite p305-s8842: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8828 Specifications](#)

Toshiba satellite p305d-s8828: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8829 Specifications](#)

Toshiba satellite p305d-s8829: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8900 Specifications](#)

Toshiba satellite p305d-s8900: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8903 Specifications](#)

Toshiba satellite p305d-s8903: specifications (4 pages)

[Laptop Toshiba Satellite P305-S8814 Product Specifications](#)

(3 pages)

[Laptop Toshiba Satellite P305-S8822 Specifications](#)

Toshiba satellite p305-s8822: specifications (3 pages)

[Laptop Toshiba Satellite P305-S8832 Specifications](#)

Toshiba satellite p305-s8832: specifications (3 pages)

[Laptop Toshiba Satellite P305D-S8818 Specifications](#)

Toshiba satellite p305d-s8818: specifications (3 pages)

[Laptop Toshiba Satellite P305D-S8834 Specifications](#)

Toshiba satellite p305d-s8834: specifications (3 pages)

Related Content for Toshiba P300-ST3014

[Satellite A35 Series Removing A Disc With The Computer On](#)

Toshiba Satellite A35 Series

[Satellite A35 Series Removing A Disc With The Computer On](#)

Toshiba Satellite A35 Series

[C50 Series Removing A Disc With The Computer On](#)

Toshiba C50 Series

[Qosmio X70-A series Removing A Disc With The Computer On](#)

Toshiba Qosmio X70-A series

[Satellite L40 series Removing A Disc With The Computer On](#)

Toshiba Satellite L40 series

[Satellite L550 Series Removing A Disc With The Computer On](#)

Toshiba Satellite L550 Series

[TECRA A50 series Removing A Disc With The Computer On](#)

Toshiba TECRA A50 series

[Satellite P200 Series Removing A Disc With The Computer On](#)

Toshiba Satellite P200 Series

This manual is also suitable for:

P305-s8830P305-s8832P305-s8837P305-s8838P305-s8842P305-s8844 ... [Show all](#)