

Monitoring Main Battery Power - Toshiba P300-ST3014 User Manual

P300-st3014 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231

•

Table of Contents

-

Bookmarks

--



If the RTC battery is low, the real-time clock and calendar may display the incorrect time and date, or stop working.

To recharge the RTC battery, plug the computer into a live electrical

outlet and leave the computer powered on for 24 hours.

NOTE

The computer can be used while the RTC battery is being charged, although the charging status of the RTC battery cannot be monitored.

Monitoring main battery power

The computer's main battery light gives you an indication of the main battery's current charge. The following also applies to the secondary battery (available on certain models) if installed.

Glows amber while the main battery is being charged (AC adaptor connected).

Glows white when the main battery is fully charged.

Is unlit when the battery has discharged, the battery is not charging, or the AC adaptor is not plugged into the computer or AC outlet.

NOTE

Flashes amber when the main battery charge is low and it is time to recharge the main battery or plug in the AC adaptor.

NOTE

Monitoring main battery power

It is seldom necessary to charge the RTC battery because it charges while the computer is on. If the RTC battery is low, the real-time clock and calendar may display the incorrect time and date or stop working.

When Hibernation mode is enabled and the RTC battery is completely discharged, a warning prompts you to reset the real-time clock.

Battery life and charge time may vary, depending upon power management settings, applications and features used.

If the AC power light flashes amber during charging, either a battery pack is malfunctioning, or it is not receiving correct input from the AC power supply. ❖

Disconnect the AC power cord/cable and remove the battery pack.

See

["Changing the main battery" on page 113](#)

replacing the main battery.

Mobile Computing ❖

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

106

107

108

109

Quick Links:

[Adding Memory \(Optional\)](#)

Related Manuals for Toshiba P300-ST3014

[Desktop Toshiba Satellite P300 Maintenance Manual](#)

Personal computer (315 pages)

[Laptop Toshiba Satellite A305-S6839 User Manual](#)

Portable personal computer (226 pages)

[Laptop Toshiba SATELLITE P300 User Manual](#)

Portable personal computer (208 pages)

[Laptop Toshiba P300 User Manual](#)

Notebook computer (199 pages)

[Laptop Toshiba Satellite P300-0E2028 Resource Manual](#)

Toshiba satellite p300-0e2028: reference guide (52 pages)

[Laptop Toshiba Satellite P305-S8838 Specifications](#)

Toshiba satellite p305-s8838: specifications (4 pages)

[Laptop Toshiba Satellite P305-S8842 Specifications](#)

Toshiba satellite p305-s8842: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8828 Specifications](#)

Toshiba satellite p305d-s8828: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8829 Specifications](#)

Toshiba satellite p305d-s8829: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8900 Specifications](#)

Toshiba satellite p305d-s8900: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8903 Specifications](#)

Toshiba satellite p305d-s8903: specifications (4 pages)

[Laptop Toshiba Satellite P305-S8814 Product Specifications](#)

(3 pages)

[Laptop Toshiba Satellite P305-S8822 Specifications](#)

Toshiba satellite p305-s8822: specifications (3 pages)

[Laptop Toshiba Satellite P305-S8832 Specifications](#)

Toshiba satellite p305-s8832: specifications (3 pages)

[Laptop Toshiba Satellite P305D-S8818 Specifications](#)

Toshiba satellite p305d-s8818: specifications (3 pages)

[Laptop Toshiba Satellite P305D-S8834 Specifications](#)

Toshiba satellite p305d-s8834: specifications (3 pages)

Related Content for Toshiba P300-ST3014

[Portégé R830 Series Monitoring Main Battery Power](#)

Toshiba Portégé R830 Series

[SatellitePro L700 Series Monitoring Main Battery Power](#)

Toshiba SatellitePro L700 Series

[Satellite A200 Series Monitoring Main Battery Power](#)

TOSHIBA Satellite A200 Series

[X305-Q705 - Qosmio - Core 2 Duo GHz Monitoring Main Battery Power](#)

Toshiba X305-Q705 - Qosmio - Core 2 Duo GHz

[U205-S5002 - Satellite - Core Duo 1.66 GHz Monitoring Main Battery Power](#)

Toshiba U205-S5002 - Satellite - Core Duo 1.66 GHz

[Tecra M6-EZ6612 Monitoring Main Battery Power](#)

Toshiba Tecra M6-EZ6612

[Tecra A8-EZ8411 Monitoring Main Battery Power](#)

Toshiba Tecra A8-EZ8411

[Tecra A7-ST5112 Monitoring Main Battery Power](#)

Toshiba Tecra A7-ST5112

This manual is also suitable for:

P305-s8830P305-s8832P305-s8837P305-s8838P305-s8842P305-s8844 ... [Show all](#)