

Setting Passwords; Using An Instant Password - Toshiba P300-ST3014 User Manual

P300-st3014 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
Table Of Contents
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231

•

Table of Contents

-

Bookmarks

--



142

Utilities

Setting passwords

Setting passwords

Setting a password lets you walk away from your computer while providing additional protection for your files. When you set a password, you must enter the password before you can work on

your computer again.

Toshiba supports several types of passwords on your computer:

An instant password—Secures your open programs and files when leaving the computer temporarily.

NOTE

A power-on password—Prevents unauthorized users from starting or restarting the computer.

A supervisor password—Prohibits unauthorized users from accessing certain functions such as TOSHIBA Hardware Setup. This is useful if more than one person uses the computer. ❖

When setting up passwords, keep the following in mind:

The user password can be set up under the supervisor password.

The supervisor password must be set before the user password, or the user password must be deleted and then re-entered after the supervisor password is set. ❖

Using an instant password

An instant password secures your system with a single keystroke.

Use this feature when you leave your desk for a few minutes and do not want to turn off the computer.

To use an instant password, press

To unlock your system, press any key or touch the pointing device and the Windows and enter your password, if any. ❖

You need to have created a password for your Windows use an instant password. ❖

®

Logon screen will appear. Select your user name

+

.

Fn

F1

®

account to

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1

...

141

142

143

144

Quick Links:

[Adding Memory \(Optional\)](#)

Related Manuals for Toshiba P300-ST3014

[Desktop Toshiba Satellite P300 Maintenance Manual](#)

Personal computer (315 pages)

[Laptop Toshiba Satellite A305-S6839 User Manual](#)

Portable personal computer (226 pages)

[Laptop Toshiba SATELLITE P300 User Manual](#)

Portable personal computer (208 pages)

[Laptop Toshiba P300 User Manual](#)

Notebook computer (199 pages)

[Laptop Toshiba Satellite P300-0E2028 Resource Manual](#)

Toshiba satellite p300-0e2028: reference guide (52 pages)

[Laptop Toshiba Satellite P305-S8838 Specifications](#)

Toshiba satellite p305-s8838: specifications (4 pages)

[Laptop Toshiba Satellite P305-S8842 Specifications](#)

Toshiba satellite p305-s8842: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8828 Specifications](#)

Toshiba satellite p305d-s8828: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8829 Specifications](#)

Toshiba satellite p305d-s8829: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8900 Specifications](#)

Toshiba satellite p305d-s8900: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8903 Specifications](#)

Toshiba satellite p305d-s8903: specifications (4 pages)

[Laptop Toshiba Satellite P305-S8814 Product Specifications](#)

(3 pages)

[Laptop Toshiba Satellite P305-S8822 Specifications](#)

Toshiba satellite p305-s8822: specifications (3 pages)

[Laptop Toshiba Satellite P305-S8832 Specifications](#)

Toshiba satellite p305-s8832: specifications (3 pages)

[Laptop Toshiba Satellite P305D-S8818 Specifications](#)

Toshiba satellite p305d-s8818: specifications (3 pages)

[Laptop Toshiba Satellite P305D-S8834 Specifications](#)

Toshiba satellite p305d-s8834: specifications (3 pages)

Related Content for Toshiba P300-ST3014

[Satellite M45 Setting User Passwords](#)

Toshiba Satellite M45

[Satellite A200 Series Setting Passwords](#)

TOSHIBA Satellite A200 Series

[X305-Q705 - Qosmio - Core 2 Duo GHz Setting Passwords](#)

Toshiba X305-Q705 - Qosmio - Core 2 Duo GHz

[U205-S5002 - Satellite - Core Duo 1.66 GHz Setting Passwords](#)

Toshiba U205-S5002 - Satellite - Core Duo 1.66 GHz

[Portege Z930-Landis-PT235U-05U0CWG1 Setting Passwords](#)

Toshiba Portege Z930-Landis-PT235U-05U0CWG1

[Portege ORACLER930A Setting Passwords](#)

Toshiba Portege ORACLER930A

[P105 S6197 - Satellite - Core 2 Duo 1.6 GHz Setting Passwords](#)

Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz

[Portege R930-Landis-PT331U-023002 Setting Passwords](#)

Toshiba Portege R930-Landis-PT331U-023002

This manual is also suitable for:

P305-s8830P305-s8832P305-s8837P305-s8838P305-s8842P305-s8844 ... [Show all](#)