

Cd/Dvd Drive Acoustic Silencer - Toshiba P300-ST3014 User Manual

P300-st3014 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231


•

Table of Contents

-

Bookmarks

--

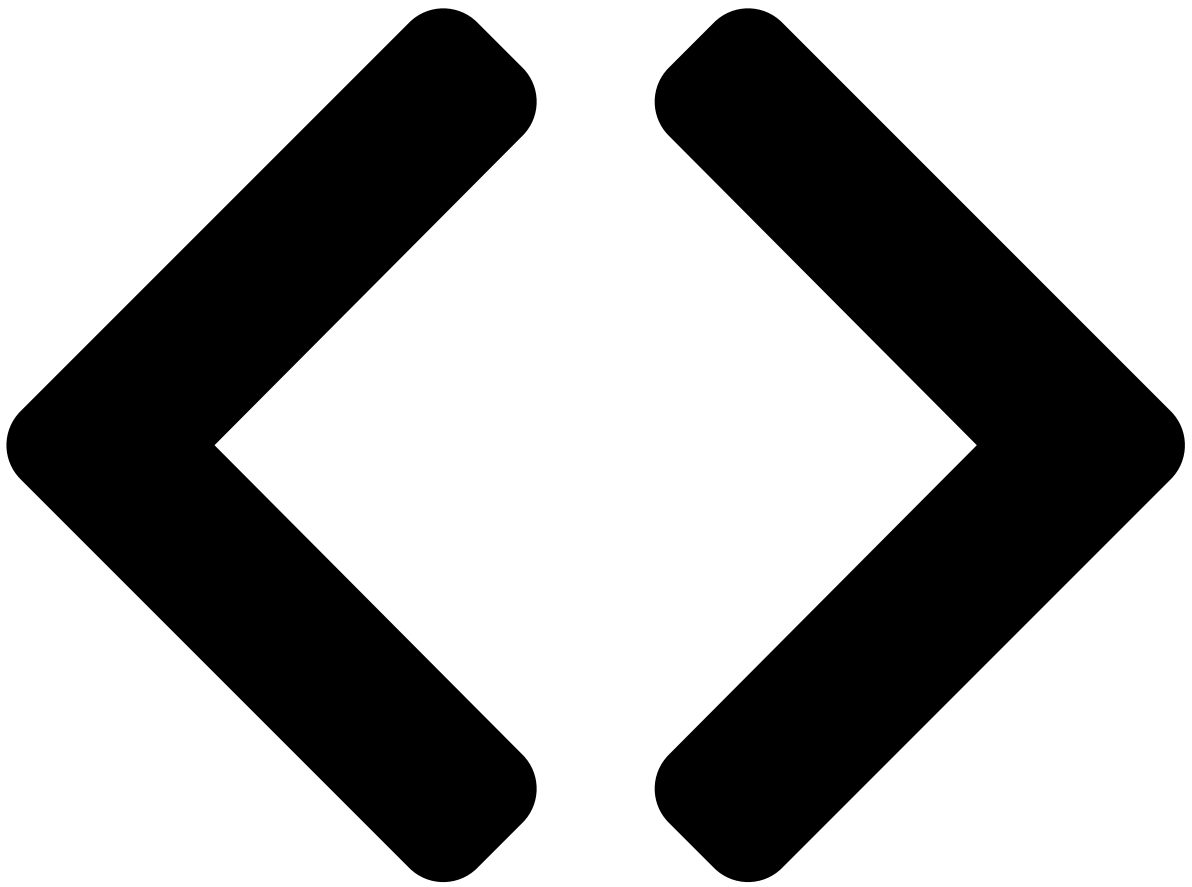

CD/DVD Drive Acoustic Silencer

This utility can slow the speed of your optical drive to make it run more quietly. You can use this utility to make listening to music CDs more enjoyable.

NOTE

(Sample Image) CD/DVD Drive Acoustic Silencer screen

To access the utility:

1

Click the CD/DVD Drive Acoustic Silencer icon in the **Optimize tab of**

The CD/DVD Drive Acoustic Silencer screen appears.

2

Click Silence Mode to make the drive run more slowly and quietly for listening to music or audio files on a CD.

3

Click Normal Mode to run the drive at normal speed for transferring data.

CD/DVD Drive Acoustic Silencer

When you change the optical drive to "Silence" mode, the setting is only valid for the current Windows restart, log off, or resume from Hibernation, the setting will revert back to Normal speed. The setting can also be changed by CD burning software or other applications that can set the drive speed.

TOSHIBA

Utilities

®
session. If you shut down,
Assist.

155



[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

154

155

156

157

Quick Links:

[Adding Memory \(Optional\)](#)

Related Manuals for Toshiba P300-ST3014

[Desktop Toshiba Satellite P300 Maintenance Manual](#)

Personal computer (315 pages)

[Laptop Toshiba Satellite A305-S6839 User Manual](#)

Portable personal computer (226 pages)

[Laptop Toshiba SATELLITE P300 User Manual](#)

Portable personal computer (208 pages)

[Laptop Toshiba P300 User Manual](#)

Notebook computer (199 pages)

[Laptop Toshiba Satellite P300-0E2028 Resource Manual](#)

Toshiba satellite p300-0e2028: reference guide (52 pages)

[Laptop Toshiba Satellite P305-S8838 Specifications](#)

Toshiba satellite p305-s8838: specifications (4 pages)

[Laptop Toshiba Satellite P305-S8842 Specifications](#)

Toshiba satellite p305-s8842: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8828 Specifications](#)

Toshiba satellite p305d-s8828: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8829 Specifications](#)

Toshiba satellite p305d-s8829: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8900 Specifications](#)

Toshiba satellite p305d-s8900: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8903 Specifications](#)

Toshiba satellite p305d-s8903: specifications (4 pages)

[Laptop Toshiba Satellite P305-S8814 Product Specifications](#)

(3 pages)

[Laptop Toshiba Satellite P305-S8822 Specifications](#)

Toshiba satellite p305-s8822: specifications (3 pages)

[Laptop Toshiba Satellite P305-S8832 Specifications](#)

Toshiba satellite p305-s8832: specifications (3 pages)

[Laptop Toshiba Satellite P305D-S8818 Specifications](#)

Toshiba satellite p305d-s8818: specifications (3 pages)

[Laptop Toshiba Satellite P305D-S8834 Specifications](#)

Toshiba satellite p305d-s8834: specifications (3 pages)

Related Content for Toshiba P300-ST3014

[P105 S6197 - Satellite - Core 2 Duo 1.6 GHz Cd/Dvd Drive Acoustic Silencer](#)

Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz

[S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz Cd/Dvd Drive Acoustic Silencer](#)

Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz

[R10 S4401 - Tecra - Core 2 Duo 2.26 GHz Cd/Dvd Drive Acoustic Silencer](#)

Toshiba R10 S4401 - Tecra - Core 2 Duo 2.26 GHz

[M115 S1061 - Satellite - Celeron M 1.6 GHz Cd/Dvd Drive Acoustic Silencer](#)

Toshiba M115 S1061 - Satellite - Celeron M 1.6 GHz

[M105-S1021 - Satellite - Celeron M 1.46 GHz Cd/Dvd Drive Acoustic Silencer](#)

Toshiba M105-S1021 - Satellite - Celeron M 1.46 GHz

[L45-S7423 - Satellite - Pentium Dual Core 1.46 GHz Cd/Dvd Drive Acoustic Silencer](#)

Toshiba L45-S7423 - Satellite - Pentium Dual Core 1.46 GHz

[M400 - Portege - Core 2 Duo 1.83 GHz Cd/Dvd Drive Acoustic Silencer](#)

Toshiba M400 - Portege - Core 2 Duo 1.83 GHz

[M200 - Portege - Pentium M 1.5 GHz Cd/Dvd Drive Acoustic Silencer](#)

Toshiba M200 - Portege - Pentium M 1.5 GHz

This manual is also suitable for:

P305-s8830P305-s8832P305-s8837P305-s8838P305-s8842P305-s8844 ... [Show all](#)