

Keyboard Problems - Toshiba P300-ST3014 User Manual

P300-st3014 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
Table Of Contents
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231


•

Table of Contents

-

Bookmarks

--

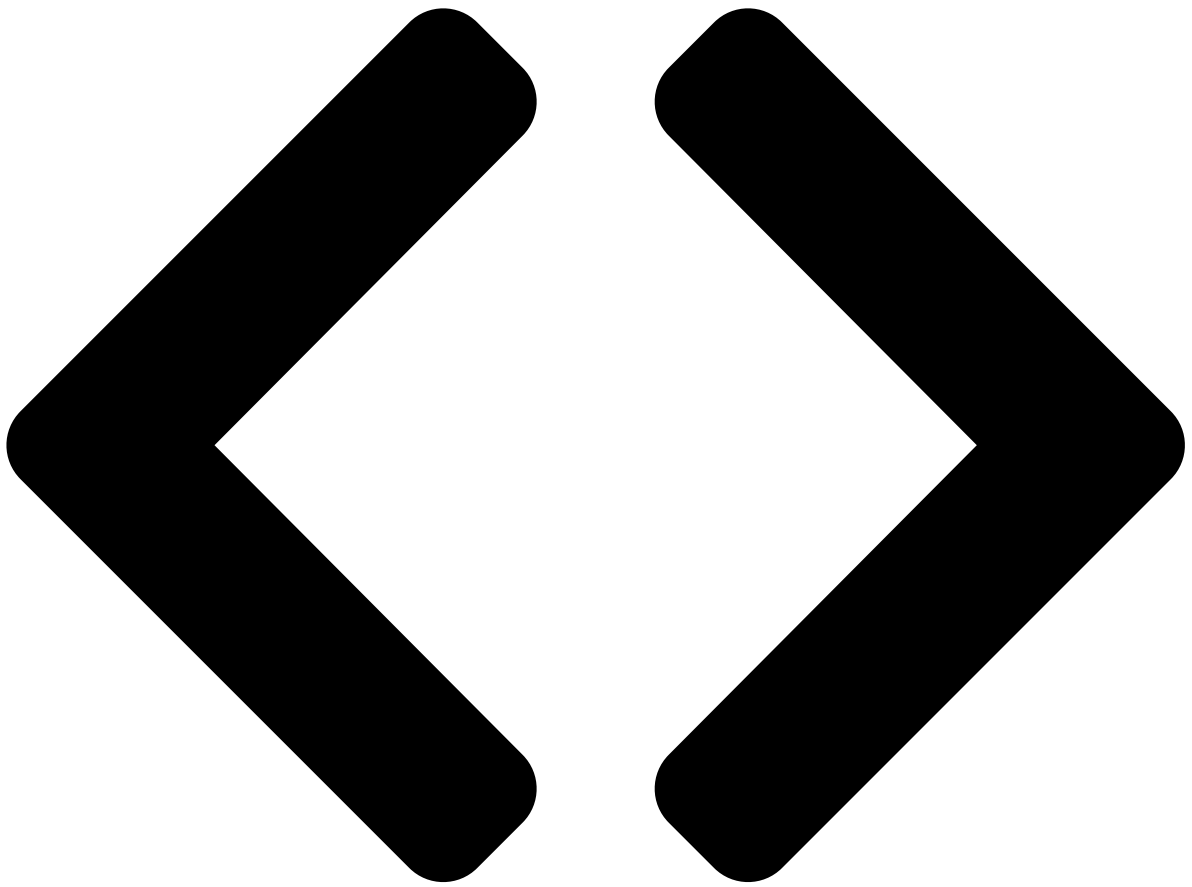

174

If Something Goes Wrong

Resolving a hardware conflict

The battery appears not to power the computer for as long as it usually does.

If you frequently repeat shallow charge and discharge, the battery

meter may become inaccurate. Let the battery discharge completely, then try charging it again.

Check the power options via your Power Plans (see [on page](#)

memory module, that takes its power from the battery? Is your software using the hard disk more? Is the display power set to turn off automatically? Was the battery fully charged to begin with?

All

these conditions affect how long the charge lasts.

After a period of time, the battery will lose its ability to perform at

maximum capacity and will need to be replaced. This is normal for

all batteries. To purchase a new battery pack, see your accessories information included with your computer, or visit the Toshiba

Web

site at

accessories.toshiba.com.

current on the most recent software and hardware options for your computer, and for other product information.

For more information on maintaining battery power, see [batteries" on page](#)

Keyboard problems

If, when you type, strange things happen or nothing happens, the problem may be related to the keyboard itself.

You have connected an external keyboard and the operating system displays one or more keyboard error messages.

The keyboard you connected may be defective or incompatible

ManualsLib.com

with

the computer. Try using a different make of keyboard.

Nothing happens when you press the keys on the external keyboard.

You may have plugged the external keyboard in while the computer was turned on. Using the computer's TouchPad:

1

Click Start, and then click the arrow next to the Lock button in the lower-right part of the Start menu.

The Shut Down menu appears.

2

Click Restart.

The computer will restart and recognize the device.

111). Have you added a device, such as an ExpressCard 105.

Refer to this site often to stay

["Power Plans"](#)

®

or

["Charging"](#)

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

173

174

175

176

Quick Links:

[Adding Memory \(Optional\)](#)

Related Manuals for Toshiba P300-ST3014

[Desktop Toshiba Satellite P300 Maintenance Manual](#)

Personal computer (315 pages)

[Laptop Toshiba Satellite A305-S6839 User Manual](#)

Portable personal computer (226 pages)

[Laptop Toshiba SATELLITE P300 User Manual](#)

Portable personal computer (208 pages)

[Laptop Toshiba P300 User Manual](#)

Notebook computer (199 pages)

[Laptop Toshiba Satellite P300-0E2028 Resource Manual](#)

Toshiba satellite p300-0e2028: reference guide (52 pages)

[Laptop Toshiba Satellite P305-S8838 Specifications](#)

Toshiba satellite p305-s8838: specifications (4 pages)

[Laptop Toshiba Satellite P305-S8842 Specifications](#)

Toshiba satellite p305-s8842: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8828 Specifications](#)

Toshiba satellite p305d-s8828: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8829 Specifications](#)

Toshiba satellite p305d-s8829: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8900 Specifications](#)

Toshiba satellite p305d-s8900: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8903 Specifications](#)

Toshiba satellite p305d-s8903: specifications (4 pages)

[Laptop Toshiba Satellite P305-S8814 Product Specifications](#)

(3 pages)

[Laptop Toshiba Satellite P305-S8822 Specifications](#)

Toshiba satellite p305-s8822: specifications (3 pages)

[Laptop Toshiba Satellite P305-S8832 Specifications](#)

Toshiba satellite p305-s8832: specifications (3 pages)

[Laptop Toshiba Satellite P305D-S8818 Specifications](#)

Toshiba satellite p305d-s8818: specifications (3 pages)

[Laptop Toshiba Satellite P305D-S8834 Specifications](#)

Toshiba satellite p305d-s8834: specifications (3 pages)

Related Content for Toshiba P300-ST3014

[Portege 2010 Keyboard Problems](#)

Toshiba Portege 2010

[Satellite A35 Series Keyboard Problems](#)

Toshiba Satellite A35 Series

[Qosmio X70-A series Keyboard Problems](#)

Toshiba Qosmio X70-A series

[Satellite L550 Series Keyboard Problems](#)

Toshiba Satellite L550 Series

[TECRA A50 series Keyboard Problems](#)

Toshiba TECRA A50 series

[Satellite T210 Series Keyboard Problems](#)

Toshiba Satellite T210 Series

[Satellite P200 Series Keyboard Problems](#)

Toshiba Satellite P200 Series

[Qosmio X300 Series Keyboard Problems](#)

Toshiba Qosmio X300 Series

This manual is also suitable for:

P305-s8830P305-s8832P305-s8837P305-s8838P305-s8842P305-s8844 ... [Show all](#)