

Using The Hot Key Cards - Toshiba P300-ST3014 User Manual

P300-st3014 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231


•

Table of Contents

-

Bookmarks

--

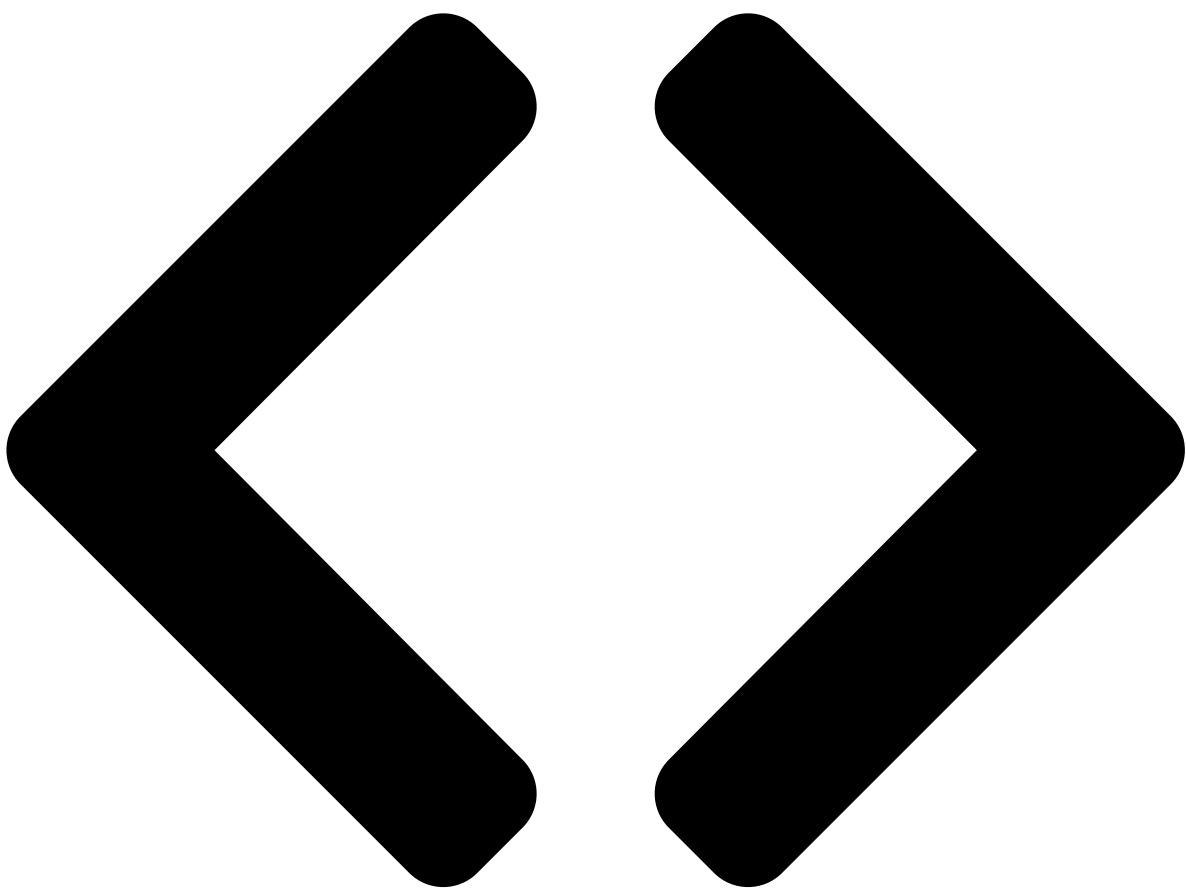

Using the Hot Key Cards

The Hot Key Cards are normally hidden from view. The Cards appear when you press the

NOTE

To use the Hot Key Cards:

1

Press and hold the

The TOSHIBA Cards appear along the top of the screen.

(Sample Image) Hot Key Card display

2

Double-click the Card for the system function to be modified.
The selected Card is displayed full-size with its available options below it. All other Cards are again hidden from view.

3

Click the desired option.

To use a Hot Key Card using a hot key:

1

Press and hold the

2

Press the hot key associated with the desired function.

The associated hot key card appears at the top of the screen with its available options below it.

3

To cycle through the displayed options, hold down the hot key repeatedly. Release the option is selected.

Hot keys are keys that, when pressed in combination with the turn system functions on and off. Hot keys have a legend on the key indicating the option or feature the key controls.



Fn

Fn

Hot Keys/TOSHIBA Cards

Hot Key Cards

Fn

key.

key.

key.

Fn

Fn

and press

ManualsLib.com

key when the desired

197

key,
Fn

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

196

197

198

199

Quick Links:

[Adding Memory \(Optional\)](#)

Related Manuals for Toshiba P300-ST3014

[Desktop Toshiba Satellite P300 Maintenance Manual](#)

Personal computer (315 pages)

[Laptop Toshiba Satellite A305-S6839 User Manual](#)

Portable personal computer (226 pages)

[Laptop Toshiba SATELLITE P300 User Manual](#)

Portable personal computer (208 pages)

[Laptop Toshiba P300 User Manual](#)

Notebook computer (199 pages)

[Laptop Toshiba Satellite P300-0E2028 Resource Manual](#)

Toshiba satellite p300-0e2028: reference guide (52 pages)

[Laptop Toshiba Satellite P305-S8838 Specifications](#)

Toshiba satellite p305-s8838: specifications (4 pages)

[Laptop Toshiba Satellite P305-S8842 Specifications](#)

Toshiba satellite p305-s8842: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8828 Specifications](#)

Toshiba satellite p305d-s8828: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8829 Specifications](#)

Toshiba satellite p305d-s8829: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8900 Specifications](#)

Toshiba satellite p305d-s8900: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8903 Specifications](#)

Toshiba satellite p305d-s8903: specifications (4 pages)

[Laptop Toshiba Satellite P305-S8814 Product Specifications](#)

(3 pages)

[Laptop Toshiba Satellite P305-S8822 Specifications](#)

Toshiba satellite p305-s8822: specifications (3 pages)

[Laptop Toshiba Satellite P305-S8832 Specifications](#)

Toshiba satellite p305-s8832: specifications (3 pages)

[Laptop Toshiba Satellite P305D-S8818 Specifications](#)

Toshiba satellite p305d-s8818: specifications (3 pages)

[Laptop Toshiba Satellite P305D-S8834 Specifications](#)

Toshiba satellite p305d-s8834: specifications (3 pages)

Related Content for Toshiba P300-ST3014

[Qosmio X300 Series Hot Key Cards](#)

Toshiba Qosmio X300 Series

[Portégé R830 Series Hot Key Cards](#)

Toshiba Portégé R830 Series

[SatellitePro L700 Series Hot Key Cards](#)

Toshiba SatellitePro L700 Series

[L835 Hot Key Cards](#)

Toshiba L835

[Satellite R850 Series Hot Key Cards](#)

Toshiba Satellite R850 Series

[Qosmio F750 Series Hot Key Cards](#)

Toshiba Qosmio F750 Series

[Satellite A200 Series Hot Key Cards](#)

TOSHIBA Satellite A200 Series

[X870 Hot Key Cards](#)

Toshiba X870

This manual is also suitable for:

P305-s8830P305-s8832P305-s8837P305-s8838P305-s8842P305-s8844 ... [Show all](#)