

Using The Application Cards; Card Case - Toshiba P300-ST3014 User Manual

P300-st3014 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231


•

Table of Contents

-

Bookmarks

--

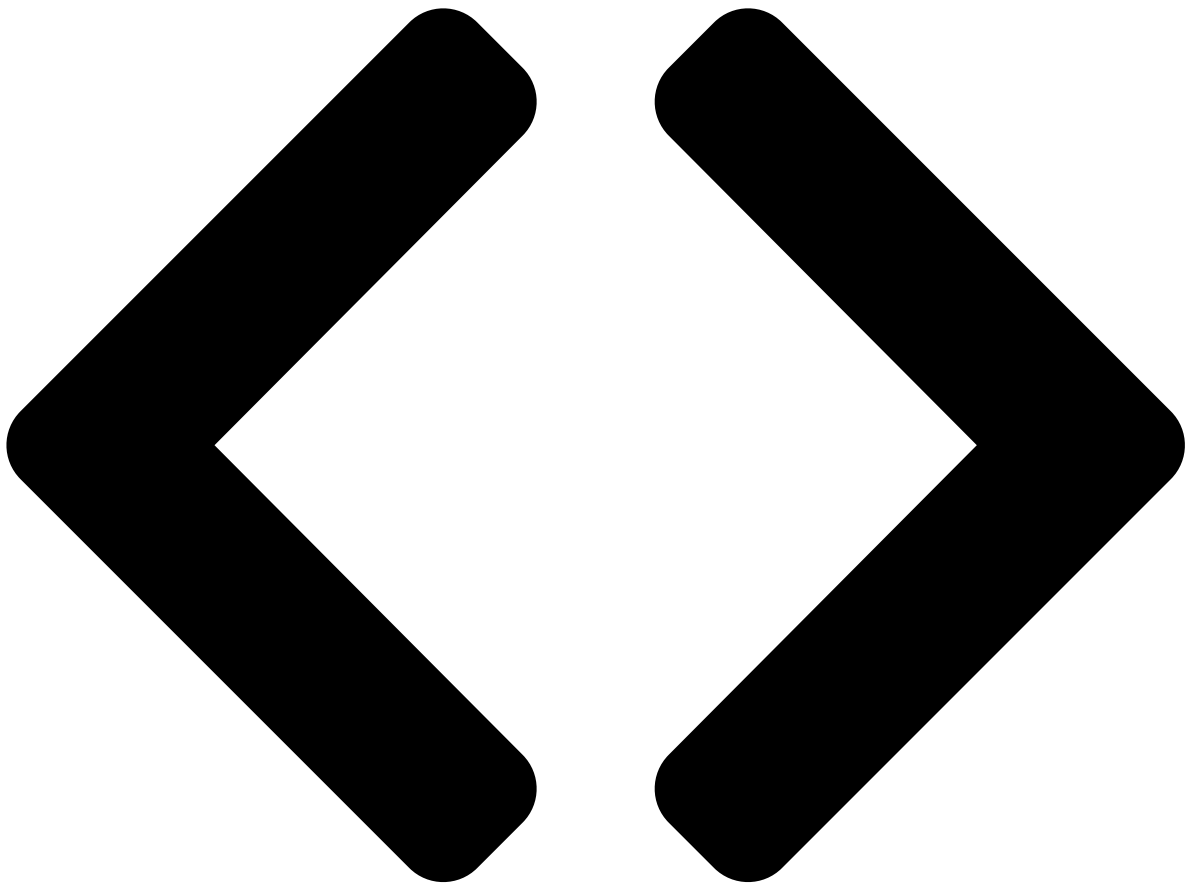

Using the Application Cards

To launch an application using the Application Cards:

1

Press and hold the

The TOSHIBA Cards display at the top of the screen.

(Sample Image) TOSHIBA Card display

2

Click the "stacked" card on the far right of the display. The

Application Cards are hidden under this card.



The Application Cards appear, and the Hot Key Cards are stacked under the Card on the far left.

(Sample Image) Application Card display

3

Click the Card for the application Card to appear.

4

Click the full-size Card to launch the application.

Card Case

The Card Case feature allows you to choose which cards appear on the Application Card display.

page



199). To use the Card Case:

1

Click Start, All Programs, Toshiba, Utilities, and then

Settings for Flash Cards.

(Sample Image) Enabling and Disabling Application Cards

2

Click the Open cards case button.

Hot Keys/TOSHIBA Cards

Application Cards



Fn

key.

"Using the Application Cards" on

199

"stacked" Card

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

198

199

200

201

Quick Links:

[Adding Memory \(Optional\)](#)

Related Manuals for Toshiba P300-ST3014

[Desktop Toshiba Satellite P300 Maintenance Manual](#)

Personal computer (315 pages)

[Laptop Toshiba Satellite A305-S6839 User Manual](#)

Portable personal computer (226 pages)

[Laptop Toshiba SATELLITE P300 User Manual](#)

Portable personal computer (208 pages)

[Laptop Toshiba P300 User Manual](#)

Notebook computer (199 pages)

[Laptop Toshiba Satellite P300-0E2028 Resource Manual](#)

Toshiba satellite p300-0e2028: reference guide (52 pages)

[Laptop Toshiba Satellite P305-S8838 Specifications](#)

Toshiba satellite p305-s8838: specifications (4 pages)

[Laptop Toshiba Satellite P305-S8842 Specifications](#)

Toshiba satellite p305-s8842: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8828 Specifications](#)

Toshiba satellite p305d-s8828: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8829 Specifications](#)

Toshiba satellite p305d-s8829: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8900 Specifications](#)

Toshiba satellite p305d-s8900: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8903 Specifications](#)

Toshiba satellite p305d-s8903: specifications (4 pages)

[Laptop Toshiba Satellite P305-S8814 Product Specifications](#)

(3 pages)

[Laptop Toshiba Satellite P305-S8822 Specifications](#)

Toshiba satellite p305-s8822: specifications (3 pages)

[Laptop Toshiba Satellite P305-S8832 Specifications](#)

Toshiba satellite p305-s8832: specifications (3 pages)

[Laptop Toshiba Satellite P305D-S8818 Specifications](#)

Toshiba satellite p305d-s8818: specifications (3 pages)

[Laptop Toshiba Satellite P305D-S8834 Specifications](#)

Toshiba satellite p305d-s8834: specifications (3 pages)

Related Content for Toshiba P300-ST3014

[S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz Application Cards](#)

Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz

[R10 S4401 - Tecra - Core 2 Duo 2.26 GHz Application Cards](#)

Toshiba R10 S4401 - Tecra - Core 2 Duo 2.26 GHz

[M400 - Portege - Core 2 Duo 1.83 GHz Application Cards](#)

Toshiba M400 - Portege - Core 2 Duo 1.83 GHz

[Qosmio X305-Q701 Application Cards](#)

Toshiba Qosmio X305-Q701

[Portege M750-S7221 Application Cards](#)

Toshiba Portege M750-S7221

[R10-S4421 Application Cards](#)

Toshiba R10-S4421

[M11-S3410 Application Cards](#)

Toshiba M11-S3410

[M10-S3451 Application Cards](#)

Toshiba M10-S3451

This manual is also suitable for:

P305-s8830P305-s8832P305-s8837P305-s8838P305-s8842P305-s8844 ... [Show all](#)