

Function Keys; Special Windows ® Keys; Starting A Program - Toshiba P300-ST3014 User Manual

P300-st3014 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
Table Of Contents
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231


•

Table of Contents

-

Bookmarks

--

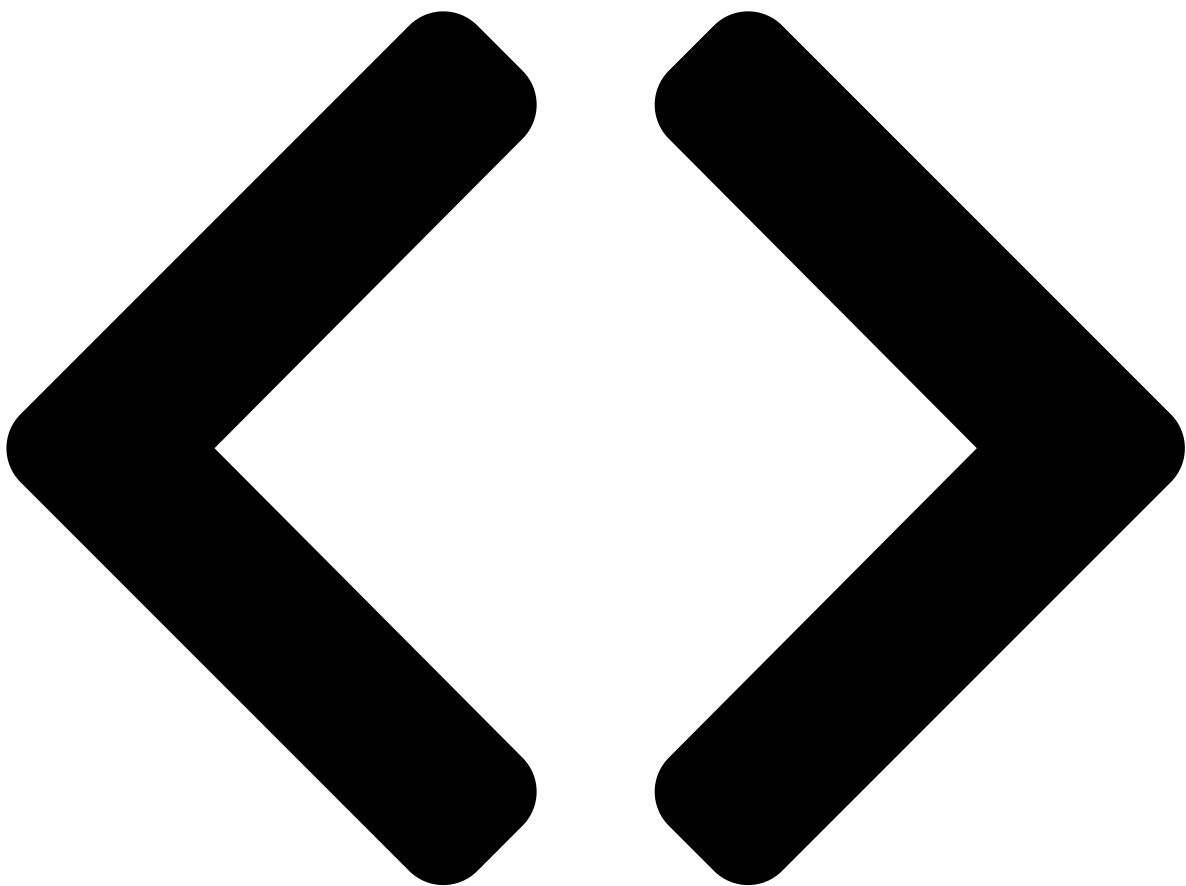

90

Learning the Basics

Starting a program

Function keys

The function keys (not to be confused with the keys at the top of the keyboard)

(Sample Illustration) Function keys



through

F1

programmed functions when pressed. Used in combination with the

Fn

key, function keys marked with icons execute specific functions on the computer. For example, more information, see

Special Windows

(Sample Illustration) Special Windows

Your computer's keyboard has one key and one button that have special functions in Windows

Windows

Application key—Has a similar function as the secondary mouse button

Starting a program

The easiest way to start a program is to double-click the name of the file that contains the information you want to work on. To find the file, use the Start menu or Windows

If you prefer to open the program first, you have four options. You can:
Double-click the icon for the program on your desktop

Use the Start menu

Use Windows

program file


Use the Search or Start Search field in the Start menu

The next three sections explain how to start a program from the Start menu, Windows

are called function keys because they execute

F12

"Hot key functions" on page

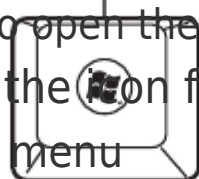

ManualsLib.com

keys

®
button—Opens the Start menu

®
Explorer or the Start menu to locate the

®
Explorer and the Start Search field.
turns off the TouchPad. For

Fn+F9

®
Windows
button

Application key



®
keys

®
:
®
Explorer.
key) are the 12

Fn

200.

[Previous Page](#)
[Next Page](#)

1
...
87
88
89
90
91
92
93
94

Quick Links:

[Adding Memory \(Optional\)](#)

Related Manuals for Toshiba P300-ST3014

[Desktop Toshiba Satellite P300 Maintenance Manual](#)

Personal computer (315 pages)

[Laptop Toshiba Satellite A305-S6839 User Manual](#)

Portable personal computer (226 pages)

[Laptop Toshiba SATELLITE P300 User Manual](#)

Portable personal computer (208 pages)

[Laptop Toshiba P300 User Manual](#)

Notebook computer (199 pages)

[Laptop Toshiba Satellite P300-0E2028 Resource Manual](#)

Toshiba satellite p300-0e2028: reference guide (52 pages)

[Laptop Toshiba Satellite P305-S8838 Specifications](#)

Toshiba satellite p305-s8838: specifications (4 pages)

[Laptop Toshiba Satellite P305-S8842 Specifications](#)

Toshiba satellite p305-s8842: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8828 Specifications](#)

Toshiba satellite p305d-s8828: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8829 Specifications](#)

Toshiba satellite p305d-s8829: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8900 Specifications](#)

Toshiba satellite p305d-s8900: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8903 Specifications](#)

Toshiba satellite p305d-s8903: specifications (4 pages)

[Laptop Toshiba Satellite P305-S8814 Product Specifications](#)

(3 pages)

[Laptop Toshiba Satellite P305-S8822 Specifications](#)

Toshiba satellite p305-s8822: specifications (3 pages)

[Laptop Toshiba Satellite P305-S8832 Specifications](#)

Toshiba satellite p305-s8832: specifications (3 pages)

[Laptop Toshiba Satellite P305D-S8818 Specifications](#)

Toshiba satellite p305d-s8818: specifications (3 pages)

[Laptop Toshiba Satellite P305D-S8834 Specifications](#)

Toshiba satellite p305d-s8834: specifications (3 pages)

Related Content for Toshiba P300-ST3014

[Satellite L650D Series Function Keys: F1](#)

Toshiba Satellite L650D Series

[Satellite Pro A300D Series Function Keys: F1](#)

Toshiba Satellite Pro A300D Series

[Portege X20W-D Function Keys](#)

Toshiba Portege X20W-D

[Portege 2010 F1 ... F12 Function Keys](#)

TOSHIBA Portege 2010

[NB100 Series Function Keys](#)

Toshiba NB100 Series

[Tecra X40-D Function Keys](#)

Toshiba Tecra X40-D

[PORTÉGÉ X20W-D Function Keys](#)

Toshiba PORTÉGÉ X20W-D

[AC100 Function Keys](#)

Toshiba AC100

This manual is also suitable for:

P305-s8830P305-s8832P305-s8837P305-s8838P305-s8842P305-s8844 ... [Show all](#)