

Starting A Program Using The Start Search Field - Toshiba P300-ST3014 User Manual

P300-st3014 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

 
19
20
21
22
23
24
25
26
27
28
Table Of Contents
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231



•

Table of Contents

-

Bookmarks

--



92

Learning the Basics

Starting a program

5

In the left part of the window, click the line that ends in "Local Disk (C:)."

6

In the left part of the window, under the Local Disk C: icon,

double-click the folder containing the program, in this case **Program Files.**

Windows

folder on the right side of the window. The left side of the window shows all the folders contained within the Program Files folder.

7

In the left part of the window, double-click Windows NT.

8

In the left part of the window, double-click Accessories.

Windows

folder on the right side of the window.

9

In the right part of the window, double-click wordpad.

The operating system opens WordPad.

To close the program, click the Close button in the upper-right corner of the program's window.

Starting a program using the Start Search field

This example uses the Start menu's Start Search field to start WordPad:

1



Click Start to display the Start menu.

The Start Search field appears at the bottom of the Start menu.

Start

Search

field

(Sample Image) Start Search field in Start menu

2

Start typing the program's name (



field.

As you type, all matching files and programs are displayed in the Start menu.

3

Click WordPad under Programs at the top left of the Start menu.

®

Explorer shows the contents of the Program Files

®

Explorer shows the contents of the Accessories

wordpad

) in the Start Search

Arrow

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
89
90
91
92
93
94
95
96

Quick Links:

[Adding Memory \(Optional\)](#)

Related Manuals for Toshiba P300-ST3014

[Desktop Toshiba Satellite P300 Maintenance Manual](#)

Personal computer (315 pages)

[Laptop Toshiba Satellite A305-S6839 User Manual](#)

Portable personal computer (226 pages)

[Laptop Toshiba SATELLITE P300 User Manual](#)

Portable personal computer (208 pages)

[Laptop Toshiba P300 User Manual](#)

Notebook computer (199 pages)

[Laptop Toshiba Satellite P300-0E2028 Resource Manual](#)

Toshiba satellite p300-0e2028: reference guide (52 pages)

[Laptop Toshiba Satellite P305-S8838 Specifications](#)

Toshiba satellite p305-s8838: specifications (4 pages)

[Laptop Toshiba Satellite P305-S8842 Specifications](#)

Toshiba satellite p305-s8842: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8828 Specifications](#)

Toshiba satellite p305d-s8828: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8829 Specifications](#)

Toshiba satellite p305d-s8829: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8900 Specifications](#)

Toshiba satellite p305d-s8900: specifications (4 pages)

[Laptop Toshiba Satellite P305D-S8903 Specifications](#)

Toshiba satellite p305d-s8903: specifications (4 pages)

[Laptop Toshiba Satellite P305-S8814 Product Specifications](#)

(3 pages)

[Laptop Toshiba Satellite P305-S8822 Specifications](#)

Toshiba satellite p305-s8822: specifications (3 pages)

[Laptop Toshiba Satellite P305-S8832 Specifications](#)

Toshiba satellite p305-s8832: specifications (3 pages)

[Laptop Toshiba Satellite P305D-S8818 Specifications](#)

Toshiba satellite p305d-s8818: specifications (3 pages)

[Laptop Toshiba Satellite P305D-S8834 Specifications](#)

Toshiba satellite p305d-s8834: specifications (3 pages)

Related Content for Toshiba P300-ST3014

[R10 S4401 - Tecra - Core 2 Duo 2.26 GHz Starting A Program Using The Start Search Field](#)

Toshiba R10 S4401 - Tecra - Core 2 Duo 2.26 GHz

[L45-S7423 - Satellite - Pentium Dual Core 1.46 GHz Starting A Program Using The Start Search Field](#)

Toshiba L45-S7423 - Satellite - Pentium Dual Core 1.46 GHz

[M400 - Portege - Core 2 Duo 1.83 GHz Starting A Program Using The Start Search Field](#)

Toshiba M400 - Portege - Core 2 Duo 1.83 GHz

[Qosmio X305-Q701 Starting A Program Using The Start Search Field](#)

Toshiba Qosmio X305-Q701

[Portege M750-S7221 Starting A Program Using The Start Search Field](#)

Toshiba Portege M750-S7221

[R10-S4421 Starting A Program Using The Start Search Field](#)

Toshiba R10-S4421

[M10-S3451 Starting A Program Using The Start Search Field](#)

Toshiba M10-S3451

[M10-S3401 Starting A Program Using The Start Search Field](#)

This manual is also suitable for:

[P305-s8830P305-s8832P305-s8837P305-s8838P305-s8842P305-s8844](#) ... [Show all](#)