

Inserting An Optical Disc (Tray-Type Drive) - Toshiba P500-ST5801 User Manual

P500-st5801 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254

--


•

[Table of Contents](#)

•

Bookmarks

--

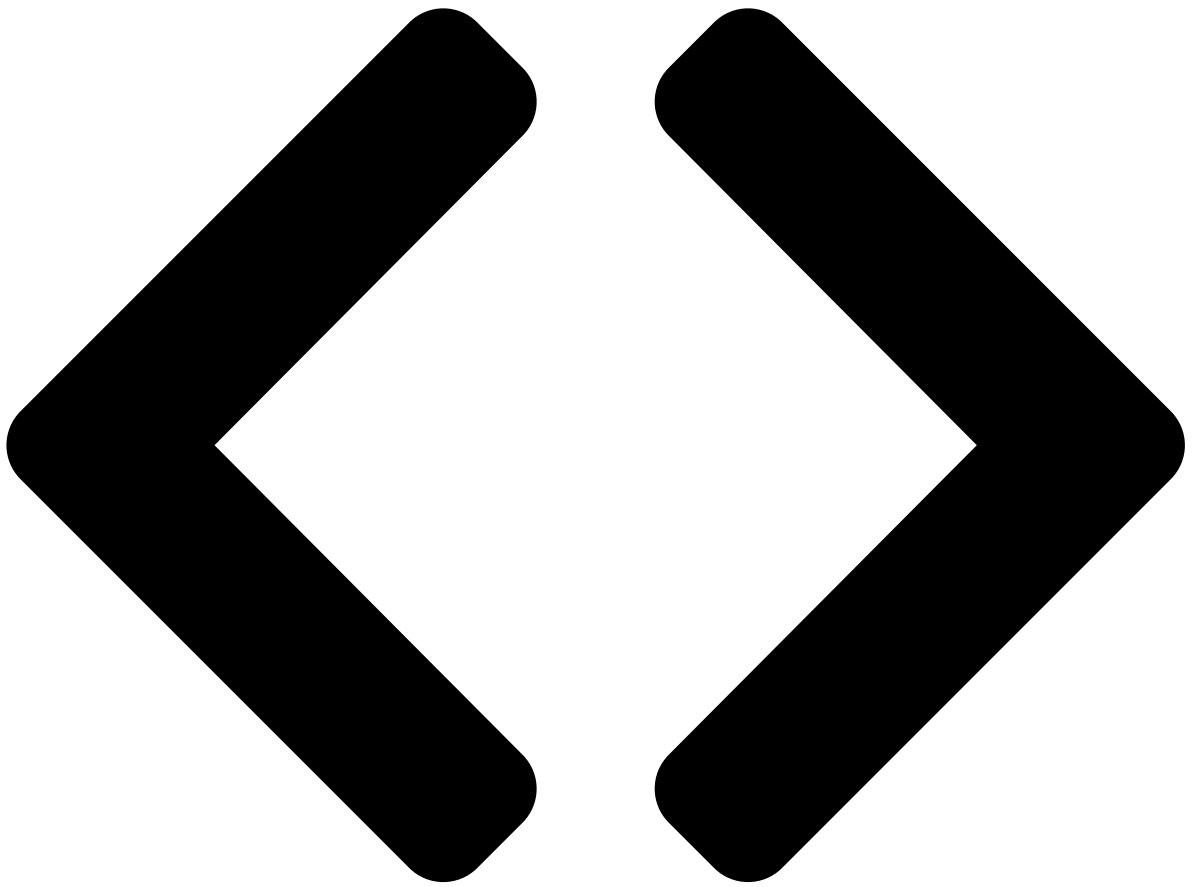

108

Learning the Basics

Using the optical drive

Inserting an optical disc (tray-type drive)

(Available on certain models)

Your optical drive may look like this:

Drive in-use indicator light

Eject button



Manual eject hole

(Sample Illustration) Optical drive


Drive in-use indicator light—Indicates when the drive is in use.

Eject button—Press to release the disc tray.

Manual eject hole—Use if you need to release the disc tray when

the power is off. Use a straightened paper clip or other narrow object to press the manual eject button located inside the hole.

To insert an optical disc into the drive:

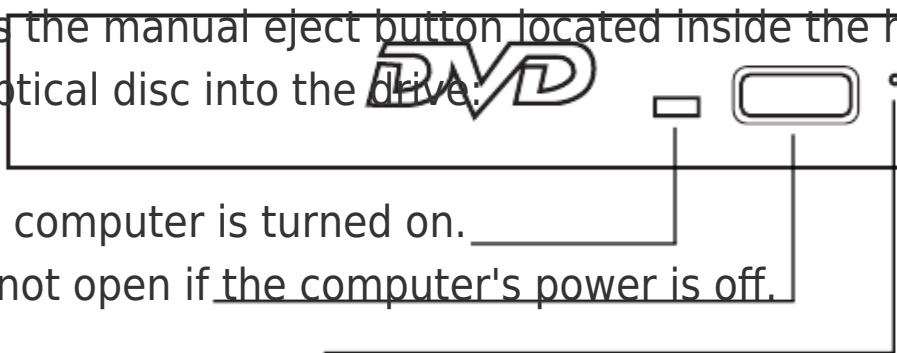

1

Make sure the computer is turned on.

The drive will not open if the computer's power is off.

2

Make sure the drive's in-use indicator light is off.

3

Press the drive's eject button.

The disc tray slides partially out of the drive (about 1 inch).

Do not press the eject button or turn off the computer while the drive in-use indicator light is glowing. Doing so could damage the disc or the drive.

CAUTION

When the disc tray is open, be careful not to touch the lens or the area around it. Doing so could cause the drive to malfunction.

Never use a pencil to press the manual eject button. Pencil lead can break off inside the computer and damage it.

[Previous Page](#)
[Next Page](#)

1

...

107

108

109

110

Quick Links:

[Your Computer's Features and Specifications](#)

[Adding Memory \(Optional\)](#)

Related Manuals for Toshiba P500-ST5801

[Laptop Toshiba Satellite P500 Maintenance Manual](#)

Personal computer (288 pages)

[Laptop Toshiba Satellite P500 Maintenance Manual](#)

(288 pages)

[Laptop Toshiba P505 S8970 - Satellite - Core 2 Duo 2.2 GHz User Manual](#)

User's guide for satellite p500/p505 series (253 pages)

[Laptop Toshiba M500-ST54E2 User Manual](#)

M500-st54e2 user's guide (252 pages)

[Laptop Toshiba Satellite P500 User Manual](#)

(227 pages)

[Laptop Toshiba Satellite P500 User Manual](#)

Portable personal computer (223 pages)

[Laptop Toshiba Satellite P500-BT2G22 User Manual](#)

Portable personal computer (213 pages)

[Laptop Toshiba Satellite P5001 User Manual](#)

(208 pages)

[Laptop TOSHIBA Satellite P500 User Manual](#)

Portable personal computer (208 pages)

[Laptop TOSHIBA P500 User Manual](#)

Portable personal computer (202 pages)

[Laptop Toshiba Satellite P500-BT2G22 Resource Manual](#)

Toshiba satellite p500-bt2g22: reference guide (60 pages)

[Laptop Toshiba Satellite P505D-S8935 Specifications](#)

Toshiba satellite p505d-s8935: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8940 Specifications](#)

Toshiba satellite p505-s8940: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8945 Specifications](#)

Toshiba satellite p505-s8945: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8950 Specifications](#)

Toshiba satellite p505-s8950: specifications (4 pages)

[Laptop Toshiba Satellite P500-ST68X2 Specifications](#)

Toshiba satellite p500-st68x2: specifications (4 pages)

Related Content for Toshiba P500-ST5801

[Satellite L40-A Series Optical Disc Drive Safety Instructions](#)

Toshiba Satellite L40-A Series

[Qosmio F750 Series Using The Optical Disc Drive](#)

Toshiba Qosmio F750 Series

[PORTEGE R30t-D Series Optical Disc Drive Safety Instructions](#)

Toshiba PORTEGE R30t-D Series

[Portege 6545A Optical Disc Drive](#)

Toshiba Portege 6545A

[Satellite Pro R50-C Series Optical Disc Drive Safety Instructions](#)

Toshiba Satellite Pro R50-C Series

[PORTEGE R35-C Optical Disc Drive Safety Instructions](#)

Toshiba PORTEGE R35-C

[Satellite Pro R50-D Series Optical Disc Drive Safety Instructions](#)

Toshiba Satellite Pro R50-D Series

[Satellite Pro L70-B Series Inserting An Optical Disc](#)

Toshiba Satellite Pro L70-B Series

This manual is also suitable for:

P500-st6821P505-s8940P505-s8941P505-s8945P505-s8946P505-s8950 ... [Show all](#)