

Using Toshiba Eco Mode - Toshiba P500-ST5801 User Manual

P500-st5801 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254

--

•

[Table of Contents](#)

•

Bookmarks

--



2

While continuing to press
desired Power Plan.

The Power Plan options are: Balanced, eco, and High
Performance.

3

Release the

The hot key card disappears. You are now in the selected mode.

Using TOSHIBA eco Mode

This computer is equipped with TOSHIBA eco Mode. Operating the computer in this mode reduces electrical power consumption by slightly lowering system performance. For example, in eco Mode the brightness of the display is reduced and the interval before Sleep mode takes effect is shortened. To turn on eco Mode, press the eco utility button.

(Sample Illustration) Locating the eco utility button

The TOSHIBA eco Utility monitors your power savings from using eco Mode by tracking real-time power consumption and accumulated savings over time. To learn how to access the utility, see

["TOSHIBA eco Utility" on page](#)

For more information on eco Mode, please see the Help file in the eco Utility.

Using TOSHIBA eco Mode

Fn

key.

Fn

eco button

Mobile Computing

, press

F2


until you select the

eco utility

button

174.

123

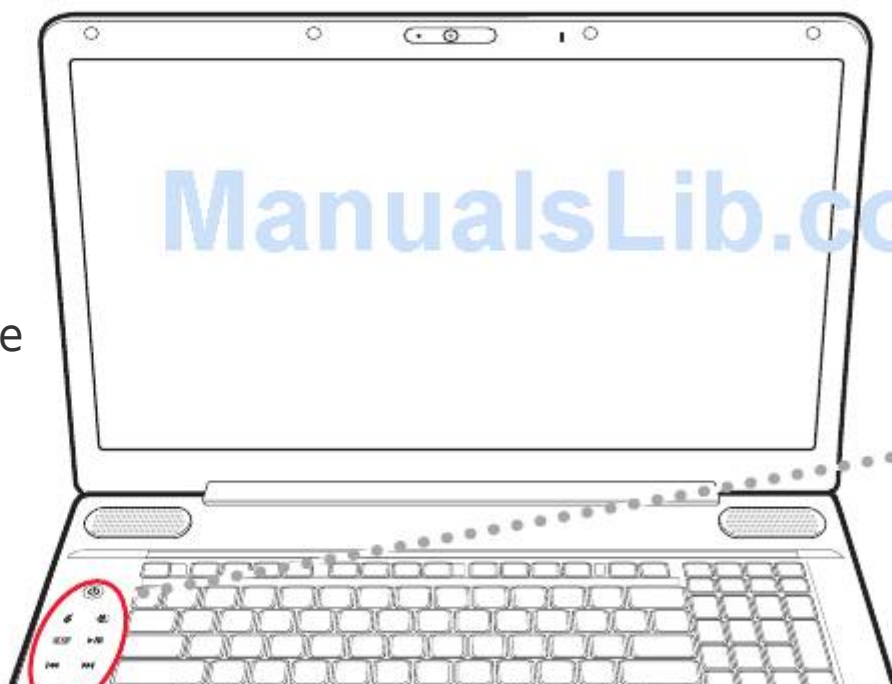

[Previous Page](#)
[Next Page](#)

1

...

122

123

124

125

Quick Links:

[Your Computer's Features and Specifications](#)

[Adding Memory \(Optional\)](#)

Related Manuals for Toshiba P500-ST5801

[Laptop Toshiba Satellite P500 Maintenance Manual](#)

Personal computer (288 pages)

[Laptop Toshiba Satellite P500 Maintenance Manual](#)

(288 pages)

[Laptop Toshiba P505 S8970 - Satellite - Core 2 Duo 2.2 GHz User Manual](#)

User's guide for satellite p500/p505 series (253 pages)

[Laptop Toshiba M500-ST54E2 User Manual](#)

M500-st54e2 user's guide (252 pages)

[Laptop Toshiba Satellite P500 User Manual](#)

(227 pages)

[Laptop Toshiba Satellite P500 User Manual](#)

Portable personal computer (223 pages)

[Laptop Toshiba Satellite P500-BT2G22 User Manual](#)

Portable personal computer (213 pages)

[Laptop Toshiba Satellite P5001 User Manual](#)

(208 pages)

[Laptop TOSHIBA Satellite P500 User Manual](#)

Portable personal computer (208 pages)

[Laptop TOSHIBA P500 User Manual](#)

Portable personal computer (202 pages)

[Laptop Toshiba Satellite P500-BT2G22 Resource Manual](#)

Toshiba satellite p500-bt2g22: reference guide (60 pages)

[Laptop Toshiba Satellite P505D-S8935 Specifications](#)

Toshiba satellite p505d-s8935: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8940 Specifications](#)

Toshiba satellite p505-s8940: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8945 Specifications](#)

Toshiba satellite p505-s8945: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8950 Specifications](#)

Toshiba satellite p505-s8950: specifications (4 pages)

[Laptop Toshiba Satellite P500-ST68X2 Specifications](#)

Toshiba satellite p500-st68x2: specifications (4 pages)

Related Content for Toshiba P500-ST5801

[Portégé R830 Series Using The Toshiba Eco Power Plan](#)

Toshiba Portégé R830 Series

[SatellitePro L700 Series Toshiba Eco Utility](#)

Toshiba SatellitePro L700 Series

[T115 S1100 - Satellite - Celeron 1.3 GHz Toshiba Eco Utility](#)

Toshiba T115 S1100 - Satellite - Celeron 1.3 GHz

[Satellite M645-S4116 Toshiba Eco Utility](#)

Toshiba Satellite M645-S4116

[Satellite U505-SP2990A Uso De Modo Eco De Toshiba](#)

Toshiba Satellite U505-SP2990A

[Satellite L655 Toshiba Eco Utility](#)

Toshiba Satellite L655

[Satellite L505 Uso Del Modo Eco De Toshiba](#)

Toshiba Satellite L505

[PORTÉGÉ Z930 Press Function Button \(Toshiba Eco Button\)](#)

Toshiba PORTÉGÉ Z930

This manual is also suitable for:

P500-st6821P505-s8940P505-s8941P505-s8945P505-s8946P505-s8950 ... [Show all](#)