

Using The I.link ® Port; Using The Esata/Usb Combo Port - Toshiba P500-ST5801 User Manual

P500-st5801 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254

--

•

[Table of Contents](#)

•

Bookmarks

--



Using the i.LINK

The i.LINK

extremely fast data transfer rate.

In addition to high speed, the i.LINK

isochronous data transfer (the delivery of data at a guaranteed rate).

This makes it ideal for devices that transfer high levels of data in real-time, such as video devices.

As with USB ports, the i.LINK

(automatic configuration) and hot swapping (the ability to connect and disconnect devices while the computer is on).

Using the eSATA/USB combo port

CAUTION

Your computer includes an eSATA/USB combo port, which can be used with both eSATA (external Serial Advanced Technology Attachment) devices and USB devices. The eSATA interface supports fast data transfer rates, which is especially useful for transferring and storing large files such as digital photo, music or

video files. Like the USB interface, the eSATA interface supports hot swapping (connecting and disconnecting devices while the computer is on). eSATA devices require an external power source.

NOTE

Exploring Your Computer's Features

Do not remove memory media while data is being written or read.

Even when the Windows

to the media might still be in progress and your data could be destroyed. Wait for the indicator light to go out.

®

port

®

port on the side of the computer provides an

Your eSATA interface supports USB Sleep and Charge. For more information about USB Sleep and Charge, please see

[and Charge Utility" on page](#)

Using the i.LINK

®

message "copying..." disappears, writing

®

port also supports

®

ManualsLib.com

port supports both Plug-and-Play
165.

145

®

CAUTION

port

"USB Sleep

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

[1](#)

...

[144](#)

145

[146](#)

[147](#)

Quick Links:

[Your Computer's Features and Specifications](#)

[Adding Memory \(Optional\)](#)

Related Manuals for Toshiba P500-ST5801

[Laptop Toshiba Satellite P500 Maintenance Manual](#)

Personal computer (288 pages)

[Laptop Toshiba Satellite P500 Maintenance Manual](#)

(288 pages)

[Laptop Toshiba P505 S8970 - Satellite - Core 2 Duo 2.2 GHz User Manual](#)

User's guide for satellite p500/p505 series (253 pages)

[Laptop Toshiba M500-ST54E2 User Manual](#)

M500-st54e2 user's guide (252 pages)

[Laptop Toshiba Satellite P500 User Manual](#)

(227 pages)

[Laptop Toshiba Satellite P500 User Manual](#)

Portable personal computer (223 pages)

[Laptop Toshiba Satellite P500-BT2G22 User Manual](#)

Portable personal computer (213 pages)

[Laptop Toshiba Satellite P5001 User Manual](#)

(208 pages)

[Laptop TOSHIBA Satellite P500 User Manual](#)

Portable personal computer (208 pages)

[Laptop TOSHIBA P500 User Manual](#)

Portable personal computer (202 pages)

[Laptop Toshiba Satellite P500-BT2G22 Resource Manual](#)

Toshiba satellite p500-bt2g22: reference guide (60 pages)

[Laptop Toshiba Satellite P505D-S8935 Specifications](#)

Toshiba satellite p505d-s8935: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8940 Specifications](#)

Toshiba satellite p505-s8940: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8945 Specifications](#)

Toshiba satellite p505-s8945: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8950 Specifications](#)

Toshiba satellite p505-s8950: specifications (4 pages)

[Laptop Toshiba Satellite P500-ST68X2 Specifications](#)

Toshiba satellite p500-st68x2: specifications (4 pages)

Related Content for Toshiba P500-ST5801

[P105 S6197 - Satellite - Core 2 Duo 1.6 GHz Using The I.link ® Port](#)

Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz

[P505 S8970 - Satellite - Core 2 Duo 2.2 GHz Using The I.link ® Port](#)

Toshiba P505 S8970 - Satellite - Core 2 Duo 2.2 GHz

[S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz Using The I.link ® Port](#)

Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz

[M400 - Portege - Core 2 Duo 1.83 GHz Using The I.link ® Port](#)

Toshiba M400 - Portege - Core 2 Duo 1.83 GHz

[M200 - Portege - Pentium M 1.5 GHz Using The I.link ® Port](#)

Toshiba M200 - Portege - Pentium M 1.5 GHz

[A8 S8514 - Tecra - Core 2 Duo GHz Using The I.link ® Port](#)

Toshiba A8 S8514 - Tecra - Core 2 Duo GHz

[A105-S4004 - Satellite - Core Duo 1.66 GHz Using The I.link Port](#)

Toshiba A105-S4004 - Satellite - Core Duo 1.66 GHz

[Tecra M5 Using The I.link ® Port](#)

Toshiba Tecra M5

This manual is also suitable for:

P500-st6821P505-s8940P505-s8941P505-s8945P505-s8946P505-s8950 ... [Show all](#)