

Care And Maintenance Of Your Fingerprint Reader - Toshiba P500- ST5801 User Manual

P500-st5801 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254

--


•

[Table of Contents](#)

•

Bookmarks

--

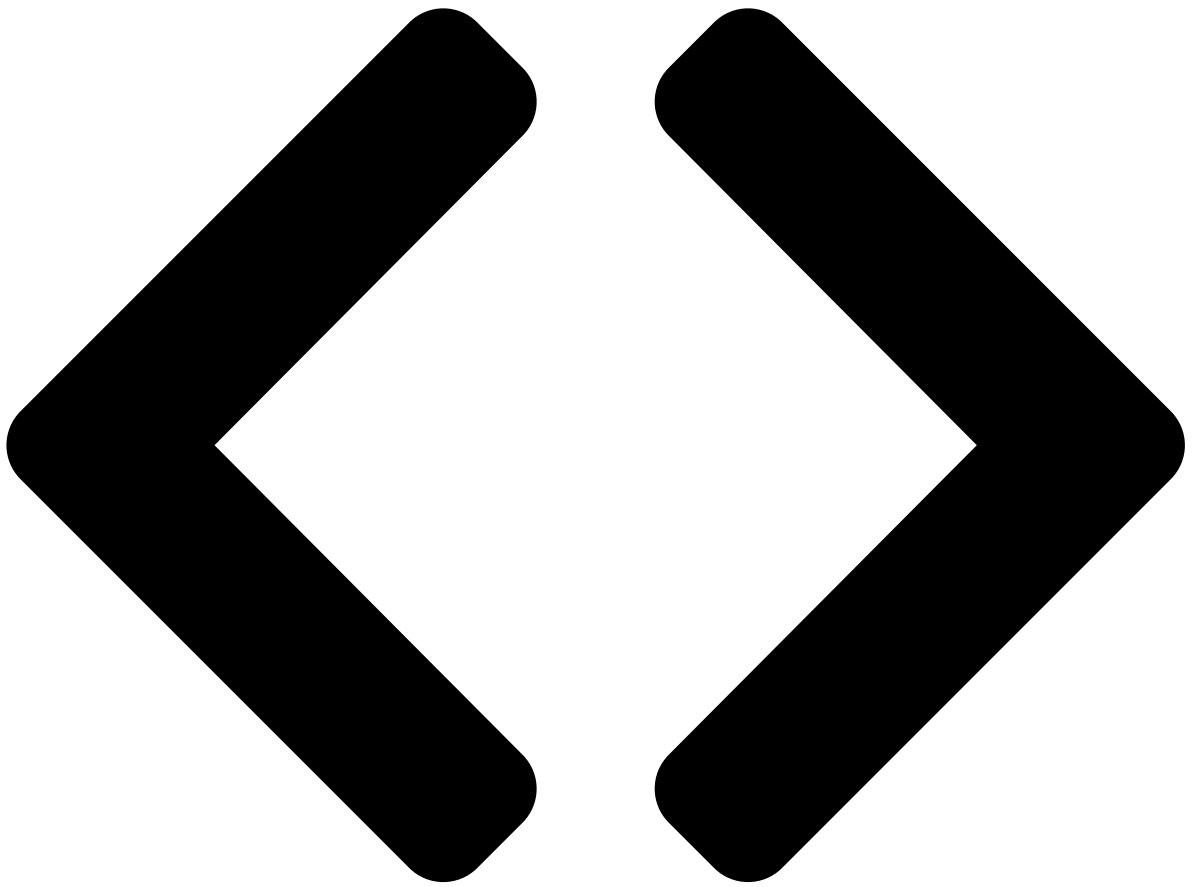

172

Utilities

Fingerprint Authentication Utility

The Fast User Switching feature of the Windows is also supported. If user A is logged on and the fingerprint utility verifies the fingerprint of user B (who is already enrolled), the utility recognizes the fingerprint and switches the users.

If your system supports power-on security, existing fingerprint

samples can be used also for power-on authentication.

Care and maintenance of your fingerprint reader

Failure to follow these guidelines and/or procedures might result in

damage to the reader or cause reader failure, finger recognition problems, or lower finger recognition success rate.

Do not scratch or poke the reader with your nails or any hard or sharp objects.

Do not press the reader with too much pressure.

Do not touch the reader with a wet finger or any wet objects.

Keep reader surface dry and free of water vapor.

Do not touch the reader with a soiled finger. Minute foreign particles on a soiled or dirty finger may scratch the reader.

Do not paste stickers or write on the reader.

Do not touch the reader with a finger or any object with built-up static electricity.

Observe the following before you swipe your finger on the reader,

whether for fingerprint enrollment/registration or recognition.

Wash and dry your hands thoroughly.

Remove static electricity from your fingers by touching any metal surface. Static electricity is a common cause of reader failures, especially during dry seasons such as winter.

Clean the reader with a lint-free cloth. Do not use detergent to clean the reader.

Avoid the following finger conditions for enrollment or recognition as they may result in fingerprint enrollment errors or a drop in the fingerprint recognition success rate.

Soaked or swollen finger (e.g., after taking bath)

Injured finger

Wet finger
Soiled or oily finger
Extremely dry skin condition on finger
®
operating system

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

171

172

173

174

Quick Links:

[Your Computer's Features and Specifications](#)

[Adding Memory \(Optional\)](#)

Related Manuals for Toshiba P500-ST5801

[Laptop Toshiba Satellite P500 Maintenance Manual](#)

Personal computer (288 pages)

[Laptop Toshiba Satellite P500 Maintenance Manual](#)

(288 pages)

[Laptop Toshiba P505 S8970 - Satellite - Core 2 Duo 2.2 GHz User Manual](#)

User's guide for satellite p500/p505 series (253 pages)

[Laptop Toshiba M500-ST54E2 User Manual](#)

M500-st54e2 user's guide (252 pages)

[Laptop Toshiba Satellite P500 User Manual](#)

(227 pages)

[Laptop Toshiba Satellite P500 User Manual](#)

Portable personal computer (223 pages)

[Laptop Toshiba Satellite P500-BT2G22 User Manual](#)

Portable personal computer (213 pages)

[Laptop Toshiba Satellite P5001 User Manual](#)

(208 pages)

[Laptop TOSHIBA Satellite P500 User Manual](#)

Portable personal computer (208 pages)

[Laptop TOSHIBA P500 User Manual](#)

Portable personal computer (202 pages)

[Laptop Toshiba Satellite P500-BT2G22 Resource Manual](#)

Toshiba satellite p500-bt2g22: reference guide (60 pages)

[Laptop Toshiba Satellite P505D-S8935 Specifications](#)

Toshiba satellite p505d-s8935: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8940 Specifications](#)

Toshiba satellite p505-s8940: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8945 Specifications](#)

Toshiba satellite p505-s8945: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8950 Specifications](#)

Toshiba satellite p505-s8950: specifications (4 pages)

[Laptop Toshiba Satellite P500-ST68X2 Specifications](#)

Toshiba satellite p500-st68x2: specifications (4 pages)

Related Content for Toshiba P500-ST5801

[Tecra Z40-A Series Care And Maintenance Of Your Fingerprint Reader](#)

Toshiba Tecra Z40-A Series

[Portégé Z30-A Series Care And Maintenance Of Your Fingerprint Reader](#)

Toshiba Portégé Z30-A Series

[Satellite A200 Series Care And Maintenance Of Your Fingerprint Reader](#)

TOSHIBA Satellite A200 Series

[X305-Q705 - Qosmio - Core 2 Duo GHz Care And Maintenance Of Your Fingerprint Reader](#)

Toshiba X305-Q705 - Qosmio - Core 2 Duo GHz

[Portege Z930-Landis-PT235U-05U0CWG1 Care And Maintenance Of Your Fingerprint Reader](#)

Toshiba Portege Z930-Landis-PT235U-05U0CWG1

[Portege ORACLER930A Care And Maintenance Of Your Fingerprint Reader](#)

Toshiba Portege ORACLER930A

[Portege R930-Landis-PT331U-023002 Care And Maintenance Of Your Fingerprint Reader](#)

Toshiba Portege R930-Landis-PT331U-023002

[P505 S8970 - Satellite - Core 2 Duo 2.2 GHz Care And Maintenance Of Your Fingerprint Reader](#)

Toshiba P505 S8970 - Satellite - Core 2 Duo 2.2 GHz

This manual is also suitable for:

[P500-st6821P505-s8940P505-s8941P505-s8945P505-s8946P505-s8950](#) ... [Show all](#)