

Card Case; Hot Key Functions - Toshiba P500-ST5801 User Manual

P500-st5801 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254

--

-

[Table of Contents](#)

•

Bookmarks

--



220

Hot Keys/TOSHIBA Cards

Hot key functions

Card Case

The Card Case feature allows you to choose which cards appear in the Application Card display (see [page](#)

219). To use the Card Case:

1

Click Start, All Programs, Toshiba, Utilities, and then

Settings for Flash Cards.

(Sample Image) Enabling and Disabling Application Cards

2

Click the Open cards case button.

3

The Card Case displays two rows of Cards.

Cards that appear solid (not transparent) in the bottom row are enabled and can be selected when the Application Cards are displayed. The top row contains all of the disabled cards.

4

To enable a card, drag it from the top row to the bottom row.

To disable the card, drag it from the bottom row to the top row.

5

To close the Card Case, click the  the screen.

Hot key functions

Hot key functions are performed using either the Hot Key Cards or by pressing the associated hot key. This section lists the available hot key functions.

NOTE


Hot keys are keys that, when pressed in combination with the turn system functions on and off. Hot keys have a legend on the key indicating the option or feature the key controls.

"Using the Application Cards" on

icon in the top corner of

key,

Fn

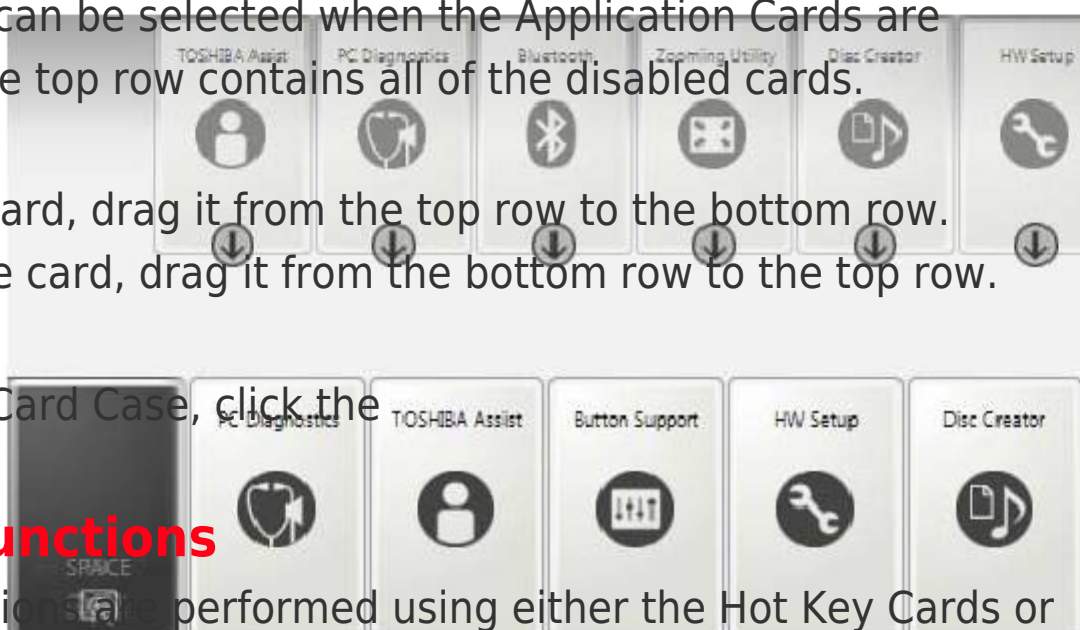

ManualsLib.com

[Previous Page](#)
[Next Page](#)

[1](#)

...

[219](#)

220

[221](#)

[222](#)

Quick Links:

[Your Computer's Features and Specifications](#)

[Adding Memory \(Optional\)](#)

Related Manuals for Toshiba P500-ST5801

[Laptop Toshiba Satellite P500 Maintenance Manual](#)

Personal computer (288 pages)

[Laptop Toshiba Satellite P500 Maintenance Manual](#)

(288 pages)

[Laptop Toshiba P505 S8970 - Satellite - Core 2 Duo 2.2 GHz User Manual](#)

User's guide for satellite p500/p505 series (253 pages)

[Laptop Toshiba M500-ST54E2 User Manual](#)

M500-st54e2 user's guide (252 pages)

[Laptop Toshiba Satellite P500 User Manual](#)

(227 pages)

[Laptop Toshiba Satellite P500 User Manual](#)

Portable personal computer (223 pages)

[Laptop Toshiba Satellite P500-BT2G22 User Manual](#)

Portable personal computer (213 pages)

[Laptop Toshiba Satellite P5001 User Manual](#)

(208 pages)

[Laptop TOSHIBA Satellite P500 User Manual](#)

Portable personal computer (208 pages)

[Laptop TOSHIBA P500 User Manual](#)

Portable personal computer (202 pages)

[Laptop Toshiba Satellite P500-BT2G22 Resource Manual](#)

Toshiba satellite p500-bt2g22: reference guide (60 pages)

[Laptop Toshiba Satellite P505D-S8935 Specifications](#)

Toshiba satellite p505d-s8935: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8940 Specifications](#)

Toshiba satellite p505-s8940: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8945 Specifications](#)

Toshiba satellite p505-s8945: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8950 Specifications](#)

Toshiba satellite p505-s8950: specifications (4 pages)

[Laptop Toshiba Satellite P500-ST68X2 Specifications](#)

Toshiba satellite p500-st68x2: specifications (4 pages)

Related Content for Toshiba P500-ST5801

[X305-Q705 - Qosmio - Core 2 Duo GHz Card Case](#)

Toshiba X305-Q705 - Qosmio - Core 2 Duo GHz

[P505 S8970 - Satellite - Core 2 Duo 2.2 GHz Card Case](#)

Toshiba P505 S8970 - Satellite - Core 2 Duo 2.2 GHz

[S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz Card Case](#)

Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz

[R10 S4401 - Tecra - Core 2 Duo 2.26 GHz Card Case](#)

Toshiba R10 S4401 - Tecra - Core 2 Duo 2.26 GHz

[M400 - Portege - Core 2 Duo 1.83 GHz Card Case](#)

Toshiba M400 - Portege - Core 2 Duo 1.83 GHz

[Qosmio X305-Q701 Card Case](#)

Toshiba Qosmio X305-Q701

[Portege M750-S7221 Card Case](#)

Toshiba Portege M750-S7221

[R10-S4421 Card Case](#)

Toshiba R10-S4421

This manual is also suitable for:

P500-st6821P505-s8940P505-s8941P505-s8945P505-s8946P505-s8950 ... [Show all](#)