



# Output (Display Switch) - Toshiba P500-ST5801 User Manual

P500-st5801 user's guide



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

Table Of Contents

 
68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167

168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202  
203  
204  
205  
206  
207  
208  
209  
210  
211  
212  
213  
214  
215  
216  
217



218  
219  
220  
221  
222  
223  
224  
225  
226  
227  
228  
229  
230  
231  
232  
233  
234  
235  
236  
237  
238  
239  
240  
241  
242  
243  
244  
245  
246  
247  
248  
249  
250  
251  
252  
253  
254



•

[Table of Contents](#)

•

## Bookmarks





# 226

## Hot Keys/TOSHIBA Cards

---

*Hot key functions*

### Output (Display switch)

or  
Fn  
+



This TOSHIBA Card or hot key cycles through the power-

on display options (only the first option is available when you do not have an external monitor attached) (the last option is available only if you are in Extended Display Mode).

## NOTE

Built-in display only

Built-in display and external monitor simultaneously

External monitor only

TV (or other external video device) only

Built-in display and TV (or other external video device) simultaneously

Built-in display and external monitor (extended desktop)

Built-in display and TV (extended desktop)

Swap—Switch primary display between internal display and external monitor when using extended desktop

To use a simultaneous mode, you must set the resolution of the internal display panel to match the resolution of the external display device.

Selecting this Card or pressing the hot key displays the following options:

*(Sample Image) Display mode options window*

Some modes are only available with the appropriate device attached and turned on.

[Previous Page](#)  
[Next Page](#)



1

...

225

226

227

228

Quick Links:

[Your Computer's Features and Specifications](#)

[Adding Memory \(Optional\)](#)

## Related Manuals for Toshiba P500-ST5801

[Laptop Toshiba Satellite P500 Maintenance Manual](#)

Personal computer (288 pages)

[Laptop Toshiba Satellite P500 Maintenance Manual](#)

(288 pages)

[Laptop Toshiba P505 S8970 - Satellite - Core 2 Duo 2.2 GHz User Manual](#)

User's guide for satellite p500/p505 series (253 pages)

[Laptop Toshiba M500-ST54E2 User Manual](#)

M500-st54e2 user's guide (252 pages)

[Laptop Toshiba Satellite P500 User Manual](#)

(227 pages)

[Laptop Toshiba Satellite P500 User Manual](#)

Portable personal computer (223 pages)

[Laptop Toshiba Satellite P500-BT2G22 User Manual](#)

Portable personal computer (213 pages)

[Laptop Toshiba Satellite P5001 User Manual](#)

(208 pages)

[Laptop TOSHIBA Satellite P500 User Manual](#)

Portable personal computer (208 pages)

[Laptop TOSHIBA P500 User Manual](#)

Portable personal computer (202 pages)

[Laptop Toshiba Satellite P500-BT2G22 Resource Manual](#)

Toshiba satellite p500-bt2g22: reference guide (60 pages)

[Laptop Toshiba Satellite P505D-S8935 Specifications](#)

Toshiba satellite p505d-s8935: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8940 Specifications](#)

Toshiba satellite p505-s8940: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8945 Specifications](#)

Toshiba satellite p505-s8945: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8950 Specifications](#)

Toshiba satellite p505-s8950: specifications (4 pages)

[Laptop Toshiba Satellite P500-ST68X2 Specifications](#)

Toshiba satellite p500-st68x2: specifications (4 pages)

## Related Content for Toshiba P500-ST5801

[Satellite CL10 Series Output \(Display Switch\)](#)

Toshiba Satellite CL10 Series

[Portege Z20-B Series Output \(Display Switch\)](#)

Toshiba Portege Z20-B Series

[Satellite S70-B Series Output \(Display Switch\)](#)

Toshiba Satellite S70-B Series

[Satellite Click 2 PRO Output \(Display Switch\)](#)

Toshiba Satellite Click 2 PRO

[Satellite CL40 Series Output \(Display Switch\)](#)

Toshiba Satellite CL40 Series

[Satellite E40-A Output \(Display Switch\)](#)

Toshiba Satellite E40-A

[C50 Series Output \(Display Switch\)](#)

Toshiba C50 Series

[Qosmio X70-A series Output \(Display Switch\)](#)

Toshiba Qosmio X70-A series

This manual is also suitable for:

[P500-st6821P505-s8940P505-s8941P505-s8945P505-s8946P505-s8950 ... Show all](#)