

Disabling Or Enabling Wireless Devices - Toshiba P500-ST5801 User Manual

P500-st5801 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254

--

•

[Table of Contents](#)

•

Bookmarks

--



228

Hot Keys/TOSHIBA Cards

Hot key functions

Disabling or enabling wireless devices

or
Fn
+



This TOSHIBA Card or hot key enables/disables the

optional wireless devices installed in your computer.
The wireless modes are:


®

Wi-Fi

enabled—Enables just the Wi-Fi

®*

Bluetooth module.

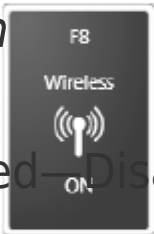

All disabled—Disables the Bluetooth modules.

All enabled—Enables the Bluetooth modules.



Selecting this Card or pressing the hot key displays the following options:

(Sample Image) Wireless communication options

To enable Wi-Fi

To enable Bluetooth

To enable all, select

To disable all, select

To cancel, select

***Available on certain models.**

enabled—Enables just the Bluetooth

®, select

•

•

®, select

•

•

•

•

®,



module.

®*

®*

and Wi-Fi

®*

and Wi-Fi

▪

®

®



[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

[1](#)

...

[227](#)

228

[229](#)

[230](#)

Quick Links:

[Your Computer's Features and Specifications](#)

[Adding Memory \(Optional\)](#)

Related Manuals for Toshiba P500-ST5801

[Laptop Toshiba Satellite P500 Maintenance Manual](#)

Personal computer (288 pages)

[Laptop Toshiba Satellite P500 Maintenance Manual](#)

(288 pages)

[Laptop Toshiba P505 S8970 - Satellite - Core 2 Duo 2.2 GHz User Manual](#)

User's guide for satellite p500/p505 series (253 pages)

[Laptop Toshiba M500-ST54E2 User Manual](#)

M500-st54e2 user's guide (252 pages)

[Laptop Toshiba Satellite P500 User Manual](#)

(227 pages)

[Laptop Toshiba Satellite P500 User Manual](#)

Portable personal computer (223 pages)

[Laptop Toshiba Satellite P500-BT2G22 User Manual](#)

Portable personal computer (213 pages)

[Laptop Toshiba Satellite P5001 User Manual](#)

(208 pages)

[Laptop TOSHIBA Satellite P500 User Manual](#)

Portable personal computer (208 pages)

[Laptop TOSHIBA P500 User Manual](#)

Portable personal computer (202 pages)

[Laptop Toshiba Satellite P500-BT2G22 Resource Manual](#)

Toshiba satellite p500-bt2g22: reference guide (60 pages)

[Laptop Toshiba Satellite P505D-S8935 Specifications](#)

Toshiba satellite p505d-s8935: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8940 Specifications](#)

Toshiba satellite p505-s8940: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8945 Specifications](#)

Toshiba satellite p505-s8945: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8950 Specifications](#)

Toshiba satellite p505-s8950: specifications (4 pages)

[Laptop Toshiba Satellite P500-ST68X2 Specifications](#)

Toshiba satellite p500-st68x2: specifications (4 pages)

Related Content for Toshiba P500-ST5801

[satellite fusion 15 series Disabling Or Enabling Wireless Devices](#)

Toshiba satellite fusion 15 series

[Satellite CL10 Series Disabling Or Enabling Wireless Devices](#)

Toshiba Satellite CL10 Series

[Portege Z20-B Series Disabling Or Enabling Wireless Devices](#)

Toshiba Portege Z20-B Series

[Satellite S70-B Series Disabling Or Enabling Wireless Devices](#)

Toshiba Satellite S70-B Series

[Satellite Click 2 PRO Disabling Or Enabling Wireless Devices](#)

Toshiba Satellite Click 2 PRO

[Satellite CL40 Series Disabling Or Enabling Wireless Devices](#)

Toshiba Satellite CL40 Series

[Satellite E40-A Disabling Or Enabling Wireless Devices](#)

Toshiba Satellite E40-A

[C50 Series Disabling Or Enabling Wireless Devices](#)

Toshiba C50 Series

This manual is also suitable for:

P500-st6821P505-s8940P505-s8941P505-s8945P505-s8946P505-s8950 ... [Show all](#)