

Turning On The Power - Toshiba P500-ST5801 User Manual

P500-st5801 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254

--


•

[Table of Contents](#)

•

Bookmarks

--

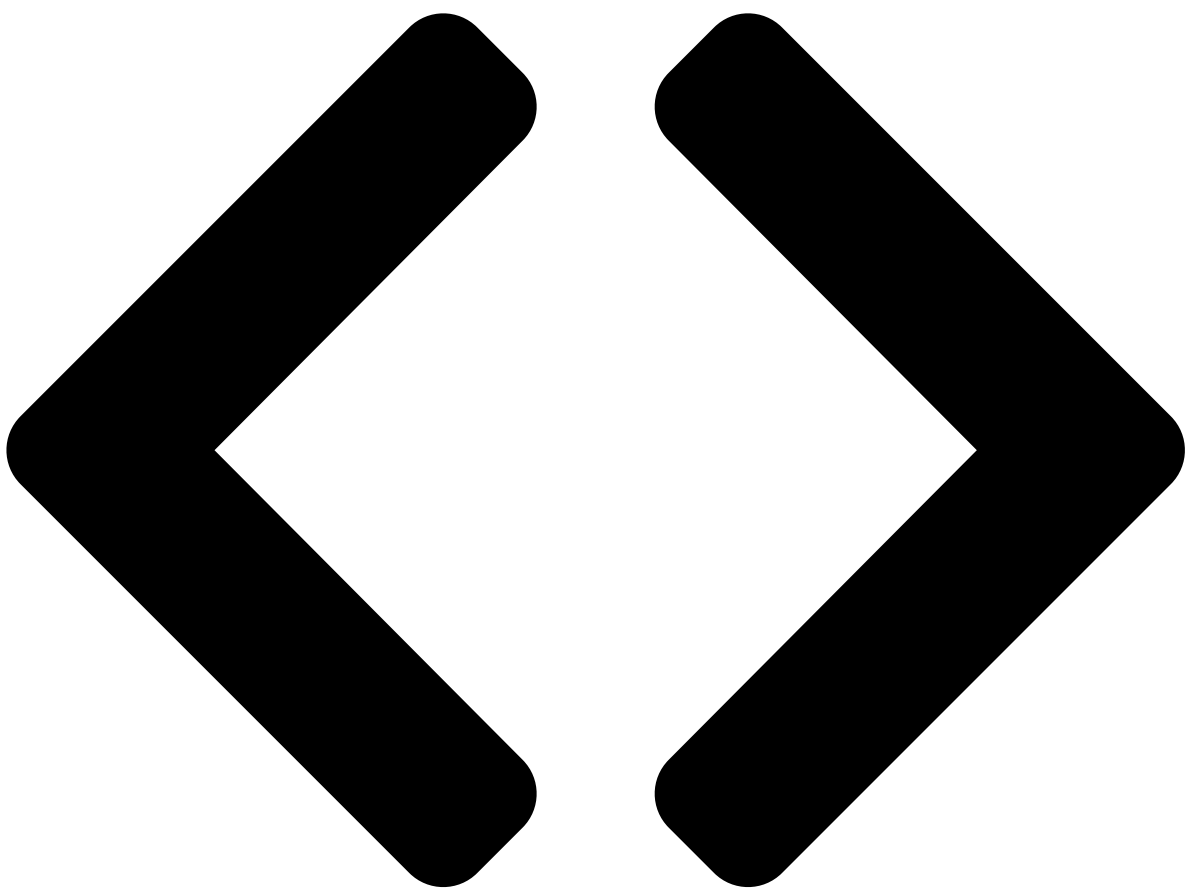

Small bright dots may appear on your screen display when you turn on your computer. Your display contains an extremely large number

of thin-film transistors (TFT) and is manufactured using high-precision technology. Any small bright dots that may appear on your display are an intrinsic characteristic of the TFT manufacturing technology. Over a period of time, and depending on the usage of the computer, the brightness of the screen will deteriorate. This is also an intrinsic characteristic of the screen technology. When the computer is operated on battery power, the

screen will dim and you may not be able to increase the brightness of the screen while on battery power.

Turning on the power

To turn on the computer:

1

Make sure any external devices (such as the AC adaptor, if you plan to use AC power rather than battery power) are properly connected and ready.

2

Check to ensure that all drives and slots are empty.

3

Press and release the power button. The ON/OFF light glows white.

(Sample Illustration) Turning on the power

The preinstalled operating system will load automatically.

Using the computer for the first time

When you turn on the computer for the first time, do not turn off the power again until the operating system has loaded completely.

Getting Started

51

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

[1](#)
[...](#)
[48](#)
[49](#)
[50](#)
51
[52](#)
[53](#)
[54](#)
[55](#)

Quick Links:

[Your Computer's Features and Specifications](#)

[Adding Memory \(Optional\)](#)

Related Manuals for Toshiba P500-ST5801

[Laptop Toshiba Satellite P500 Maintenance Manual](#)

Personal computer (288 pages)

[Laptop Toshiba Satellite P500 Maintenance Manual](#)

(288 pages)

[Laptop Toshiba P505 S8970 - Satellite - Core 2 Duo 2.2 GHz User Manual](#)

User's guide for satellite p500/p505 series (253 pages)

[Laptop Toshiba M500-ST54E2 User Manual](#)

M500-st54e2 user's guide (252 pages)

[Laptop Toshiba Satellite P500 User Manual](#)

(227 pages)

[Laptop Toshiba Satellite P500 User Manual](#)

Portable personal computer (223 pages)

[Laptop Toshiba Satellite P500-BT2G22 User Manual](#)

Portable personal computer (213 pages)

[Laptop Toshiba Satellite P5001 User Manual](#)

(208 pages)

[Laptop TOSHIBA Satellite P500 User Manual](#)

Portable personal computer (208 pages)

[Laptop TOSHIBA P500 User Manual](#)

Portable personal computer (202 pages)

[Laptop Toshiba Satellite P500-BT2G22 Resource Manual](#)

Toshiba satellite p500-bt2g22: reference guide (60 pages)

[Laptop Toshiba Satellite P505D-S8935 Specifications](#)

Toshiba satellite p505d-s8935: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8940 Specifications](#)

Toshiba satellite p505-s8940: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8945 Specifications](#)

Toshiba satellite p505-s8945: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8950 Specifications](#)

Toshiba satellite p505-s8950: specifications (4 pages)

[Laptop Toshiba Satellite P500-ST68X2 Specifications](#)

Toshiba satellite p500-st68x2: specifications (4 pages)

Related Content for Toshiba P500-ST5801

[Satellite U930 Series Turning Off The Power](#)

Toshiba Satellite U930 Series

[Satellite Radius 15 P50W-C Turning Off The Power](#)

Toshiba Satellite Radius 15 P50W-C

[PT930 Turning On The Power](#)

Toshiba PT930

[Satellite Pro R50-D Series Turning Off The Power](#)

Toshiba Satellite Pro R50-D Series

[Satellite Radius 12 P20W-C Turning Off The Power](#)

Toshiba Satellite Radius 12 P20W-C

[PORTEGE Z30-E Turning Off The Power](#)

Toshiba PORTEGE Z30-E

[L70-B Turning Off The Power](#)

Toshiba L70-B

[PORTEGE R30-A Series Turning Off The Power](#)

Toshiba PORTEGE R30-A Series

This manual is also suitable for:

P500-st6821P505-s8940P505-s8941P505-s8945P505-s8946P505-s8950 ... [Show all](#)