

Removing A Memory Module - Toshiba P500-ST5801 User Manual

P500-st5801 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254

--


•

[Table of Contents](#)

•

Bookmarks

--

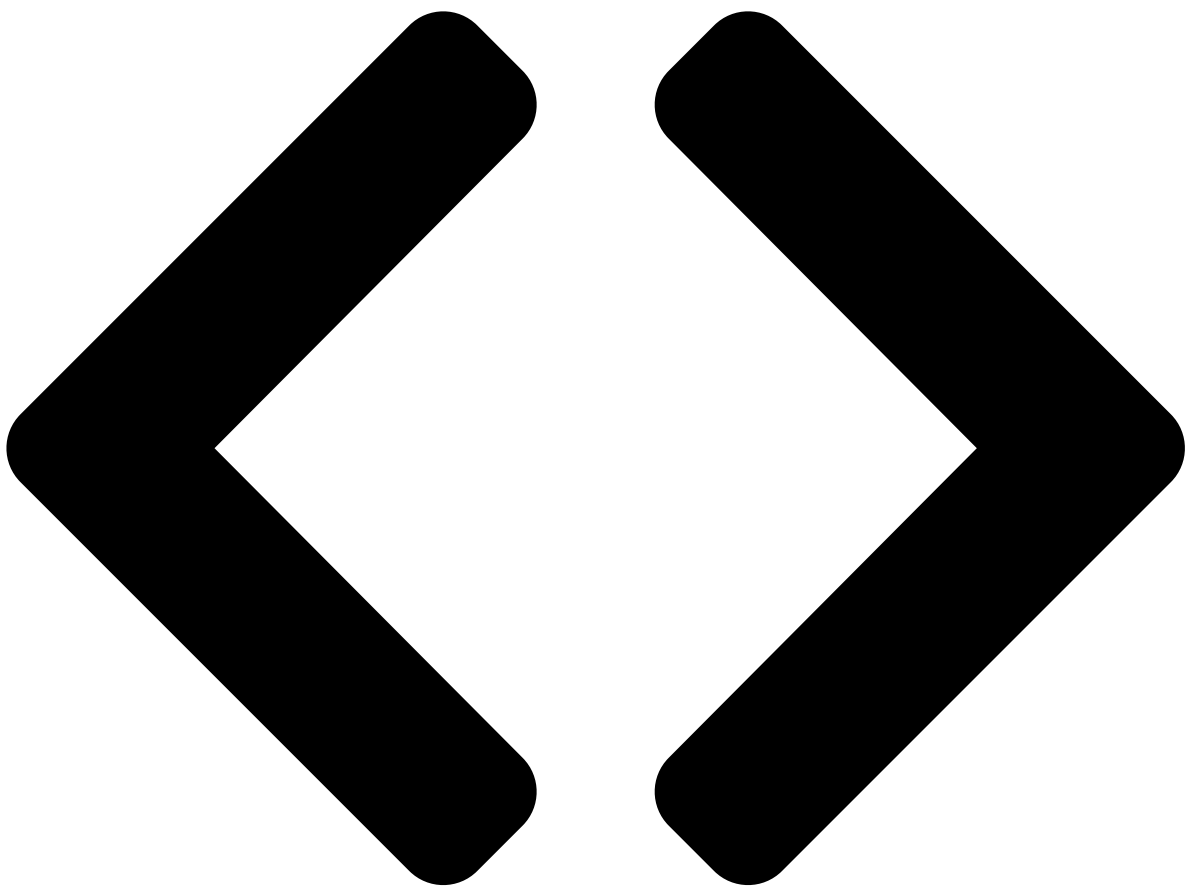

NOTE

14

Replace the memory module slot cover and secure it using the screws.

15

Re-insert the main battery. For more information on inserting the main battery, see

16

Turn the computer right side up.

17

Reconnect the cables.

18

Restart the computer.

You can now continue setting up the computer. When the operating system has loaded, you can verify that the computer has recognized

the additional memory module.

If you are adding extra memory after setting up the computer, verify

that the computer has recognized it correctly as described in ["Checking total memory" on page](#)

Removing a memory module

If you need to remove a memory module:

1

Complete steps

[page 54](#)

module slot cover.



For this model, Slot A is the bottom slot. Slot B is the top slot. If only one memory module is to be installed, it must be installed in Slot A.

TECHNICAL NOTE: You must have at least one memory module installed for the computer to work.

1-8

to shut down the computer and open the memory

Do not try to remove a memory module with the computer turned on.

You can damage the computer and the memory module.

Do not remove the memory module while the computer is in Sleep or Hibernation mode. The computer could hang up the next time you turn it on and data in memory will be lost. In either of the above cases, the Sleep configuration will not be saved.

Getting Started

Adding memory (optional)

"Inserting a charged battery" on page

61.

in

"Installing a memory module" on

59

125.

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
56
57
58
59
60
61
62
63

Quick Links:

[Your Computer's Features and Specifications](#)

[Adding Memory \(Optional\)](#)

Related Manuals for Toshiba P500-ST5801

[Laptop Toshiba Satellite P500 Maintenance Manual](#)

Personal computer (288 pages)

[Laptop Toshiba Satellite P500 Maintenance Manual](#)

(288 pages)

[Laptop Toshiba P505 S8970 - Satellite - Core 2 Duo 2.2 GHz User Manual](#)

User's guide for satellite p500/p505 series (253 pages)

[Laptop Toshiba M500-ST54E2 User Manual](#)

M500-st54e2 user's guide (252 pages)

[Laptop Toshiba Satellite P500 User Manual](#)

(227 pages)

[Laptop Toshiba Satellite P500 User Manual](#)

Portable personal computer (223 pages)

[Laptop Toshiba Satellite P500-BT2G22 User Manual](#)

Portable personal computer (213 pages)

[Laptop Toshiba Satellite P5001 User Manual](#)

(208 pages)

[Laptop TOSHIBA Satellite P500 User Manual](#)

Portable personal computer (208 pages)

[Laptop TOSHIBA P500 User Manual](#)

Portable personal computer (202 pages)

[Laptop Toshiba Satellite P500-BT2G22 Resource Manual](#)

Toshiba satellite p500-bt2g22: reference guide (60 pages)

[Laptop Toshiba Satellite P505D-S8935 Specifications](#)

Toshiba satellite p505d-s8935: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8940 Specifications](#)

Toshiba satellite p505-s8940: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8945 Specifications](#)

Toshiba satellite p505-s8945: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8950 Specifications](#)

Toshiba satellite p505-s8950: specifications (4 pages)

[Laptop Toshiba Satellite P500-ST68X2 Specifications](#)

Toshiba satellite p500-st68x2: specifications (4 pages)

Related Content for Toshiba P500-ST5801

[Satellite C50-C Removing A Memory Module](#)

Toshiba Satellite C50-C

[Satellite A205 Series Removing A Memory Module](#)

Toshiba Satellite A205 Series

[SATELLITE R850 Removing A Memory Module](#)

Toshiba SATELLITE R850

[NB500 Removing A Memory Module](#)

Toshiba NB500

[Satellite L630 Series Removing Memory Module](#)

Toshiba Satellite L630 Series

[Satellite Removing A Memory Module](#)

Toshiba Satellite

[Satellite P500 Removing A Memory Module](#)

Toshiba Satellite P500

[R30-C Removing A Memory Module](#)

Toshiba R30-C

This manual is also suitable for:

P500-st6821P505-s8940P505-s8941P505-s8945P505-s8946P505-s8950 ... [Show all](#)