

Directing The Display Output When You Turn On The Computer - Toshiba P500-ST5801 User Manual

P500-st5801 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

 
19
20
21
22
23
24
25
26
27
28
29
Table Of Contents
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254



•

[Table of Contents](#)

•

Bookmarks



6

Click OK.

NOTE

Directing the display output when you turn on the computer

Once you have connected an external display device, you can choose to use the internal display only, the external device only, or both simultaneously.

NOTE

The quickest way to change the display output settings is to use the display hot key (

1

Press

2

While holding down

you want takes effect. Briefly pause each time you press the key to allow time for the display to change.

This hot key cycles through the settings in the following order:

Using external display devices

In the future you can change the display settings by pressing or by configuring the display properties settings.

Some modes are only available with the appropriate device attached and turned on.

Fn

+

F5

):

and

simultaneously.

Fn

F5

Built-in display only

Built-in display and external monitor simultaneously

External monitor only

TV (or other external video device) only

Built-in display and TV (or other external video device) simultaneously

Built-in display and external monitor (extended desktop)

Built-in display and TV (extended desktop)

Getting Started

Fn

, press

F5

repeatedly until the setting

79

,

Fn+F5

F5

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
76
77
78
79
80
81
82
83

Quick Links:

[Your Computer's Features and Specifications](#)

[Adding Memory \(Optional\)](#)

Related Manuals for Toshiba P500-ST5801

[Laptop Toshiba Satellite P500 Maintenance Manual](#)

Personal computer (288 pages)

[Laptop Toshiba Satellite P500 Maintenance Manual](#)

(288 pages)

[Laptop Toshiba P505 S8970 - Satellite - Core 2 Duo 2.2 GHz User Manual](#)

User's guide for satellite p500/p505 series (253 pages)

[Laptop Toshiba M500-ST54E2 User Manual](#)

M500-st54e2 user's guide (252 pages)

[Laptop Toshiba Satellite P500 User Manual](#)

(227 pages)

[Laptop Toshiba Satellite P500 User Manual](#)

Portable personal computer (223 pages)

[Laptop Toshiba Satellite P500-BT2G22 User Manual](#)

Portable personal computer (213 pages)

[Laptop Toshiba Satellite P5001 User Manual](#)

(208 pages)

[Laptop TOSHIBA Satellite P500 User Manual](#)

Portable personal computer (208 pages)

[Laptop TOSHIBA P500 User Manual](#)

Portable personal computer (202 pages)

[Laptop Toshiba Satellite P500-BT2G22 Resource Manual](#)

Toshiba satellite p500-bt2g22: reference guide (60 pages)

[Laptop Toshiba Satellite P505D-S8935 Specifications](#)

Toshiba satellite p505d-s8935: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8940 Specifications](#)

Toshiba satellite p505-s8940: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8945 Specifications](#)

Toshiba satellite p505-s8945: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8950 Specifications](#)

Toshiba satellite p505-s8950: specifications (4 pages)

[Laptop Toshiba Satellite P500-ST68X2 Specifications](#)

Toshiba satellite p500-st68x2: specifications (4 pages)

Related Content for Toshiba P500-ST5801

[Satellite CL10 Series Directing The Display Output When You Turn On The Computer](#)

Toshiba Satellite CL10 Series

[Satellite S70-B Series Directing The Display Output When You Turn On The Computer](#)

Toshiba Satellite S70-B Series

[Satellite CL40 Series Directing The Display Output When You Turn On The Computer](#)

Toshiba Satellite CL40 Series

[Satellite E40-A Directing The Display Output When You Turn On The Computer](#)

Toshiba Satellite E40-A

[Satellite A35 Series Directing The Display Output When You Turn On The Computer](#)

Toshiba Satellite A35 Series

[C50 Series Directing The Display Output When You Turn On The Computer](#)

Toshiba C50 Series

[Qosmio X70-A series Directing The Display Output When You Turn On The Computer](#)

Toshiba Qosmio X70-A series

[Satellite L40 series Directing The Display Output When You Turn On The Computer](#)

Toshiba Satellite L40 series

This manual is also suitable for:

[P500-st6821P505-s8940P505-s8941P505-s8945P505-s8946P505-s8950](#) ... [Show all](#)