

Starting A Program From The Start Menu; Starting A Program From Windows Explorer - Toshiba P500-ST5801 User Manual

P500-st5801 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254

--


•

[Table of Contents](#)

•

Bookmarks

--

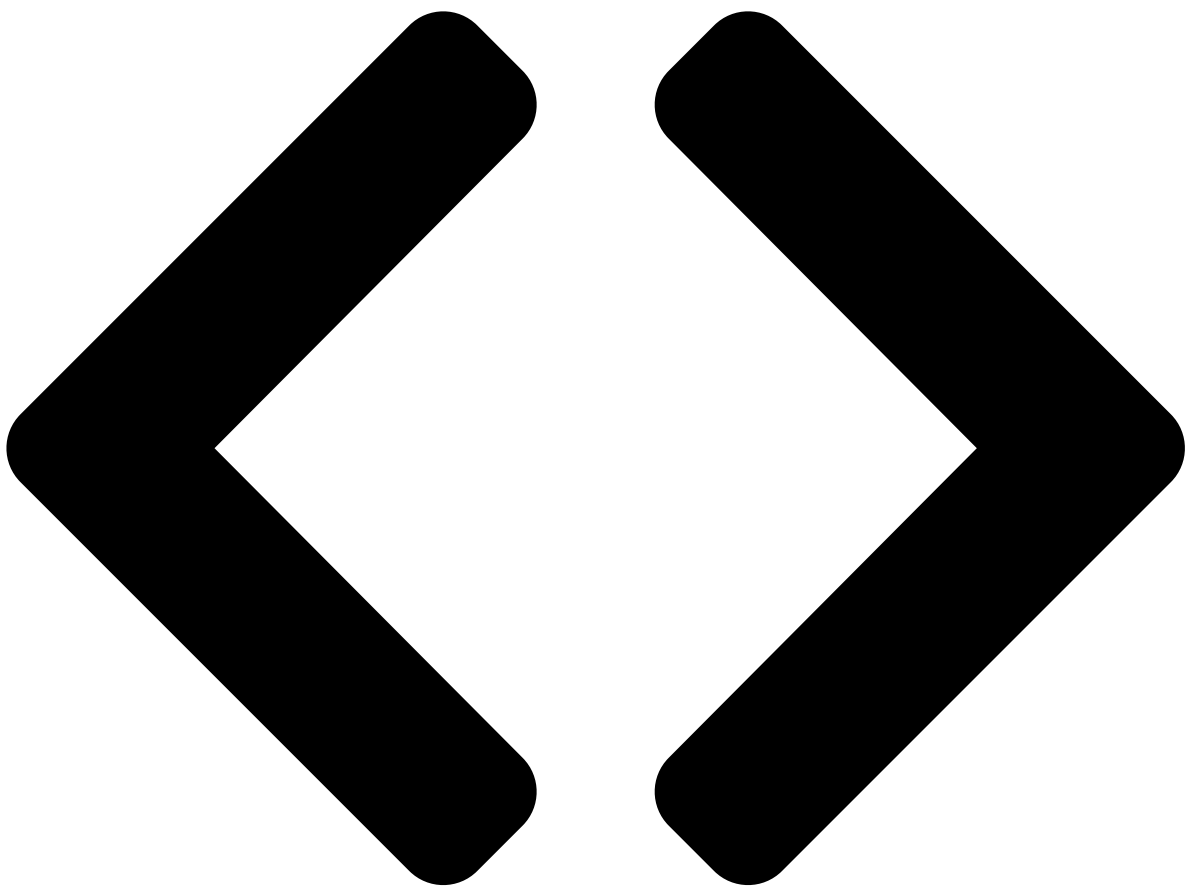

Starting a program from the Start menu

When you install a program, the operating system usually puts an icon in the All Programs menu. To start a program that has an icon in the All Programs menu, follow these steps, which use the Windows

1

Click Start, and then All Programs.

The Windows

menu, which lists programs and program groups. If your

program is listed, go to step 3, otherwise, continue with step 2.

NOTE

2

Click the program group, in this example, Accessories.
The Accessories menu is displayed.

3

Click the program, in this example, WordPad.
WordPad opens.

To close the program, click the Close button in the upper-right corner of the program's window.

Starting a program from Windows

If a program is not listed in the All Programs menu, you can start it from Windows

your computer's contents as a hierarchy or "tree." You can easily see the contents of each drive and folder on your computer. To use this method, you should know the file name and location of the program's executable file (this file ends with .exe).

This example opens WordPad using Windows

1

 
Click Start, and then All Programs.

NOTE

2

Click Accessories.

3



Click Windows Explorer.

4

In the left part of the window, double-click Computer to expand the window.

®

WordPad program as an example:

ManualsLib.com

®

operating system displays the All Programs

If you pause with your mouse on All Programs, it will open it up. You may need to scroll up or down to see the complete list.

®

Explorer. Windows

If you pause with your mouse on All Programs, it will open it up. You may need to scroll up or down to see the complete list.

Learning the Basics

Starting a program

®

Explorer

®

Explorer gives you a view of

®

Explorer.

99

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

[1](#)

...

[96](#)

[97](#)

[98](#)

[99](#)

[100](#)

[101](#)

[102](#)

[103](#)

Quick Links:

[Your Computer's Features and Specifications](#)

[Adding Memory \(Optional\)](#)

Related Manuals for Toshiba P500-ST5801

[Laptop Toshiba Satellite P500 Maintenance Manual](#)

Personal computer (288 pages)

[Laptop Toshiba Satellite P500 Maintenance Manual](#)

(288 pages)

[Laptop Toshiba P505 S8970 - Satellite - Core 2 Duo 2.2 GHz User Manual](#)

User's guide for satellite p500/p505 series (253 pages)

[Laptop Toshiba M500-ST54E2 User Manual](#)

M500-st54e2 user's guide (252 pages)

[Laptop Toshiba Satellite P500 User Manual](#)

(227 pages)

[Laptop Toshiba Satellite P500 User Manual](#)

Portable personal computer (223 pages)

[Laptop Toshiba Satellite P500-BT2G22 User Manual](#)

Portable personal computer (213 pages)

[Laptop Toshiba Satellite P5001 User Manual](#)

(208 pages)

[Laptop TOSHIBA Satellite P500 User Manual](#)

Portable personal computer (208 pages)

[Laptop TOSHIBA P500 User Manual](#)

Portable personal computer (202 pages)

[Laptop Toshiba Satellite P500-BT2G22 Resource Manual](#)

Toshiba satellite p500-bt2g22: reference guide (60 pages)

[Laptop Toshiba Satellite P505D-S8935 Specifications](#)

Toshiba satellite p505d-s8935: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8940 Specifications](#)

Toshiba satellite p505-s8940: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8945 Specifications](#)

Toshiba satellite p505-s8945: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8950 Specifications](#)

Toshiba satellite p505-s8950: specifications (4 pages)

[Laptop Toshiba Satellite P500-ST68X2 Specifications](#)

Toshiba satellite p500-st68x2: specifications (4 pages)

Related Content for Toshiba P500-ST5801

[Satellite R10 Starting A Program From The Start Menu](#)

Toshiba Satellite R10

[Satellite M45 Starting A Program From The Start Menu](#)

Toshiba Satellite M45

[Satellite A200 Series Starting A Program From The Start Menu](#)

TOSHIBA Satellite A200 Series

[X305-Q705 - Qosmio - Core 2 Duo GHz Starting A Program From The Start Menu](#)

Toshiba X305-Q705 - Qosmio - Core 2 Duo GHz

[U205-S5002 - Satellite - Core Duo 1.66 GHz Starting A Program From The Start Menu](#)

Toshiba U205-S5002 - Satellite - Core Duo 1.66 GHz

[P105 S6197 - Satellite - Core 2 Duo 1.6 GHz Starting A Program From The Start Menu](#)

Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz

[P505 S8970 - Satellite - Core 2 Duo 2.2 GHz Starting A Program From The Start Menu](#)

[Toshiba P505 S8970 - Satellite - Core 2 Duo 2.2 GHz](#)

[S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz Starting A Program From The Start Menu](#)

[Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz](#)

This manual is also suitable for:

[P500-st6821P505-s8940P505-s8941P505-s8945P505-s8946P505-s8950](#) ... [Show all](#)