



Asus RP-AC51 Quick Start Manual

Wi-fi ac repeater

1
2

--


•

Bookmarks

--

[Download this manual](#)

Quick Links

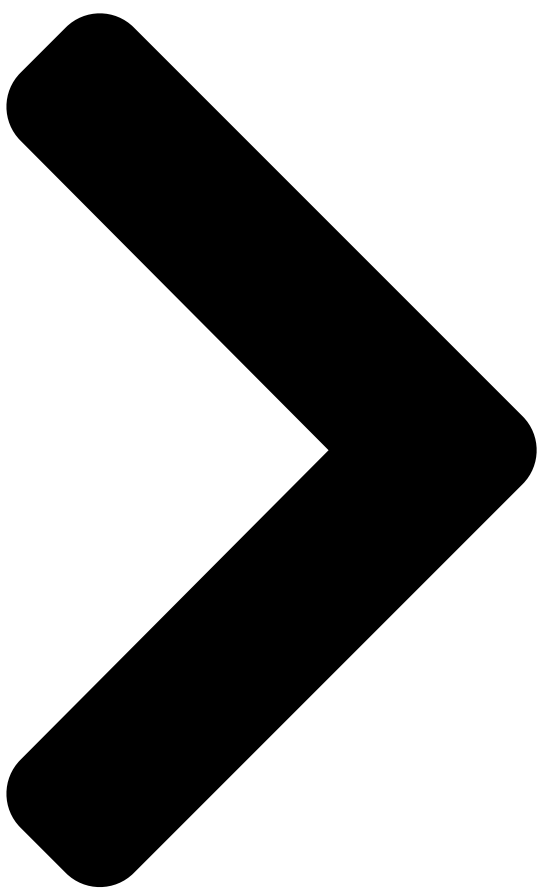

Quick

Start Guide

RP-AC51

ASUS
IN SEARCH OF INCREDIBLE

Wi-Fi AC Repeater

E16302 / Third Edition / January 2020

BEFORE SETUP

 
Placing your RP-AC51

01


Place your RP-AC51 near your

router/AP.

SETUP METHODS

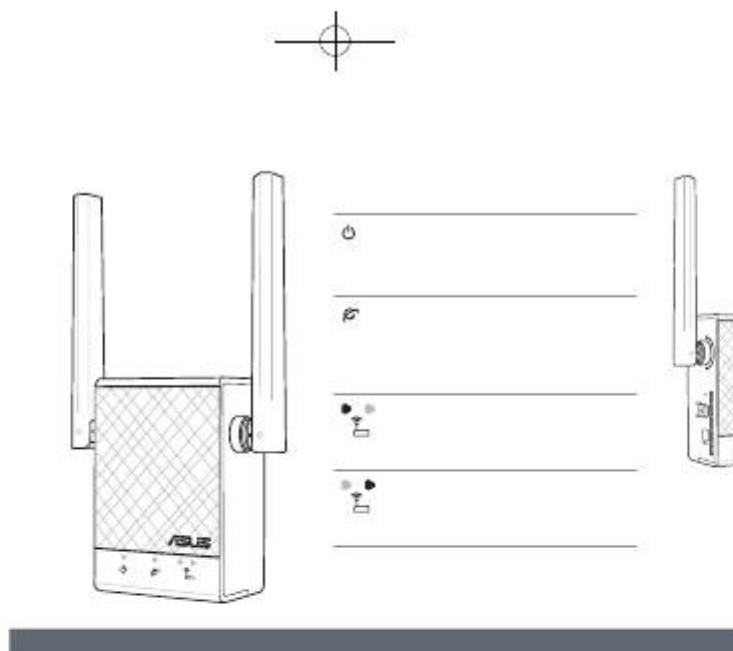

1

 

METHOD **ASUS**
IN SEARCH OF INCREDIBLE

01

Download the app

2

METHOD

Connect via WPS

01

Press the WPS button on your router/AP.

3

METHOD

Connect

01

NOTE: The screenshot below is from a desktop PC.

 
ASUS_RPAC51
ASUS_RPAC51_5G

Disconnect your Ethernet (wired) connection from your computer. Click the Wi-Fi icon on the taskbar and connect to RP-AC51's network:

ASUS_RPAC51

or ASUS_RPAC51_5G.

E16302_RP-AC51_QSG_Special_A3_V3.indd 1

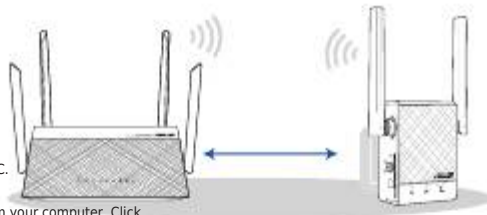

Check the LEDs and see the LED explanations.

around 2 meters

Use the app

02

Press the WPS button on your RP-AC51 for more than two (2) seconds until the power LED starts to blink.

NOTE: Wait until the existing network LED blinks for about two (2) minutes, then turns solid blue, indicating the WPS process is completed.



Extend

02

On a web browser, enter <http://repeater.asus.com>.

 
Set a unique repeater login name and password.

Select the existing network you want to extend.

LED explanations

POWER

On: RP-AC51 is power on.

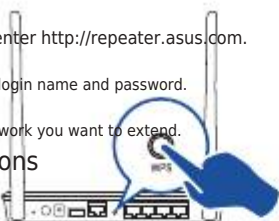

Off: RP-AC51 is power off.
EXISTING NETWORK

On: Connected to the router/AP.

Off: Not connected to the router/AP.

MOVE CLOSER

Need to move RP-AC51 closer to the router/AP.

MOVE AWAY SLIGHTLY

Need to move RP-AC51 slightly away from the router/AP.

Power On

02

Plug your RP-AC51 to a

power outlet.

Turn on the power switch.

Tap SET UP EXTENDER.

Open your phone Wi-Fi,

and connect to your RP-AC51's SSID.

Follow the Quick Extender Setup instructions.

Assign a unique network name (SSID) for your extended

network.

Wait until the setup is completed.

Enjoy Wi-Fi

02

Your RP-AC51's wireless network name (SSID) changes to your existing Wi-Fi network name, ending with _RPT or _RPT5G and shares your router/AP's Wireless Password.

03

Button explanations

POWER SWITCH

Switch this button on/off to turn RP-AC51 on/off.

WPS BUTTON

Press this button to quickly connect to the router/AP via the WPS method.

RESET

BUTTON

Use a pin to push this button to push this button to reset RP-AC51 to its factory default settings.

Wait until the power LED turns blue, indicating that your RP-AC51 is ready to connect to your existing router/AP.

Configure

Tick

 
 
Same with Parent AP SSID/Password

the router/AP's SSID and password for your extended network. You could also set a unique SSID and password for your extended network by typing in the text box. When done, click

Apply.

to copy

2020/1/9 16:25:24

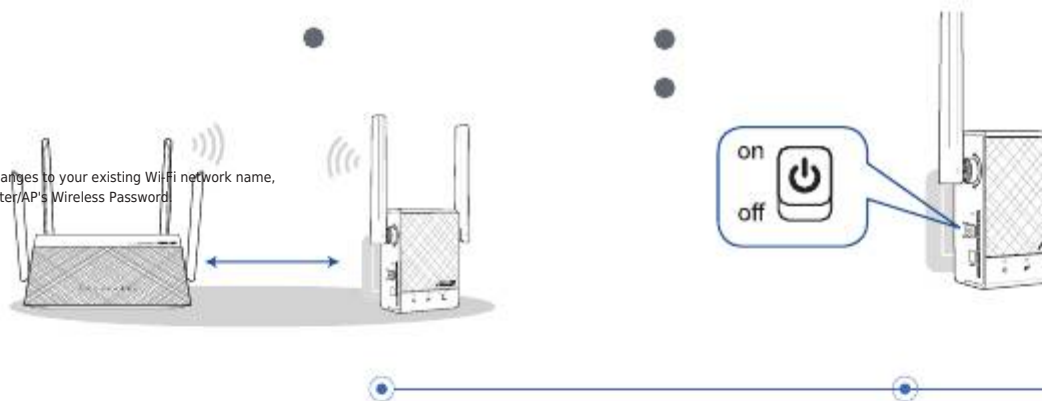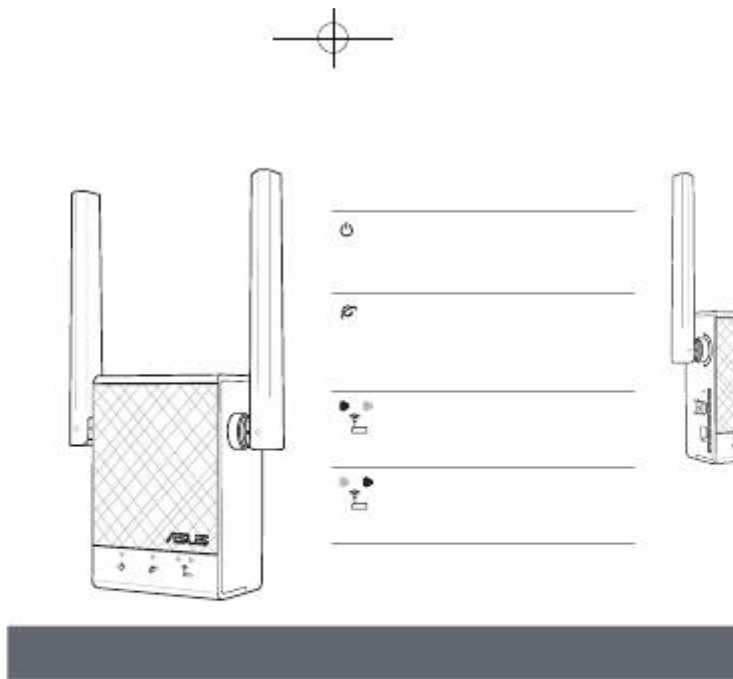

[Next Page](#)

1
2

Related Manuals for Asus RP-AC51

[Repeater Asus RP-AC51 Quick Start Manual](#)

Wi-fi ac repeater (2 pages)

[Repeater Asus RP-AC51 Quick Start Manual](#)

Wi-fi ac repeater (2 pages)

[Repeater Asus RP-AC68U Quick Start Manual](#)

Dual-band wireless repeater (176 pages)

[Repeater Asus RP-AC66 Quick Start Manual](#)

Dual-band wireless-ac1750 repeater (2 pages)

[Repeater Asus RP-AC66 Quick Start Manual](#)

Dual-band wireless-ac1750 repeater (21 pages)

[Repeater Asus RP-AC53 Quick Start Manual](#)

Dual-band (180 pages)

[Repeater Asus RP-AC53 Quick Start Manual](#)

Dual-band wireless repeater (2 pages)

[Repeater Asus RP-AC53 Quick Start Manual](#)

Dual-band wireless repeater (156 pages)

[Repeater Asus RP-AC55 Quick Start Manual](#)

Wireless ac1200 repeater (52 pages)

[Repeater Asus RP-AC55 Quick Start Manual](#)

Wireless-ac1200 dual-band repeater for easy setup (3 pages)

[Repeater Asus RP-AC55 Quick Start Manual](#)

Wireless ac1200 repeater (7 pages)

[Repeater Asus RP-AC55 Quick Start Manual](#)

Wireless ac1200 repeater (212 pages)

[Repeater Asus RP-AC55 Quick Start Manual](#)

Wireless ac1200 repeater (2 pages)

[Repeater Asus RP-AC87 Quick Start Manual](#)

Dual - band wireless repeater (2 pages)

[Repeater Asus RP-AC87 Quick Start Manual](#)

Dual-band wireless repeater (173 pages)

[Repeater Asus RP-AC1900 Quick Start Manual](#)

Dual-band wireless repeater (2 pages)

Summary of Contents for Asus RP-AC51

[Page 1](#) NOTE: Wait until the existing network LED blinks Your RP-AC51's wireless network name (SSID) changes to your existing Wi-Fi network name, for about two (2) minutes, then turns solid blue, ending with _RPT or _RPT5G and shares your router/AP's Wireless Password.

[Page 2](#) AC51, enter the correct password, and try to set up your RP-AC51 again. Press the RESET button on the side of RP-AC51 for about two (2) seconds. Wait for about five (5) seconds until the existing network LED blinks slowly.

This manual is also suitable for:

Msq-rpac4200