

Removing Memory Media - Toshiba NB205-N230 User Manual

Nb205-n230 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19

Table Of Contents

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

 
66

67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210



•

[Table of Contents](#)

•

Bookmarks



120

Exploring Your Computer's Features

Using the Memory card reader

2

Push the media into the adapter until it locks in place.

(Sample Illustration) Inserting memory media

Removing memory media

1



Prepare the card for removal by clicking on the Show hidden icons (selecting the Safely Remove Hardware icon.

If the system is unable to prepare the media for safe removal, a message will tell you to try again later. If the media can be removed now, the system displays Safe to Remove Hardware. If the computer has a spring-loaded adapter slot, see step 2; otherwise, skip to step 3.

2

Gently press the card inward to release it. The card pops out slightly.



3

Grasp the card and pull it straight out.

(Sample Illustration) Removing memory media

When inserting memory media, do not touch the metal contacts. You could expose the storage area to static electricity, which can destroy data.

CAUTION

), if necessary, in the notification area and then

Do not remove memory media while data is being written or read.

Even when the Windows

to the media might still be in progress and your data could be destroyed. Wait for the indicator light to go out.

®

message "copying..." disappears, writing

[Previous Page](#)
[Next Page](#)

1
...
119
120
121
122

Quick Links:

[Your Computer's Features and Specifications](#)

Related Manuals for Toshiba NB205-N230

[Laptop Toshiba NB205-N313 User Manual](#)

Toshiba nb205-n313: user guide (144 pages)

[Laptop Toshiba NB205-N230 Detailed Product Specification](#)

Mini nb205 series (3 pages)

[Laptop Toshiba NB205-N310/BN User Manual](#)

Nb205-n310/bn user's guide (207 pages)

[Laptop Toshiba NB200-SP2904A Manual Del Usuario](#)

Nb200-sp2904a user's guide (204 pages)
[Laptop Toshiba NB200 Maintenance Manual](#)
(202 pages)
[Laptop Toshiba NB200 Series User Manual](#)
(143 pages)
[Laptop Toshiba NB205 Series User Manual](#)
(139 pages)
[Laptop Toshiba mini NB200 series User Manual](#)
(138 pages)
[Laptop Toshiba NB205-N311 User Manual](#)
Toshiba nb205-n311: user guide (136 pages)
[Laptop Toshiba NB205-N210 Specifications](#)
Toshiba nb205-n210: specifications (4 pages)
[Laptop Toshiba NB205-N330 Specifications](#)
Toshiba nb205-n330: specifications (4 pages)
[Laptop Toshiba NB205-N325 Specifications](#)
Toshiba nb205-n325: specifications (3 pages)
[Laptop Toshiba NB205-N312 Specifications](#)
Toshiba nb205-n312: specifications (4 pages)
[Laptop Toshiba NB205-N313 Specifications](#)
Toshiba nb205-n313: specifications (4 pages)
[Laptop Toshiba NB255-N240 User Manual](#)
Nb255-n240 user's guide (197 pages)
[Laptop Toshiba NB250 series User Manual](#)
(142 pages)

Related Content for Toshiba NB205-N230

[Satellite A205 Series Removing Memory Media](#)
Toshiba Satellite A205 Series
[SATELLITE R850 Removing A Memory Media](#)
Toshiba SATELLITE R850
[NB500 Removing A Memory Media](#)
Toshiba NB500
[Satellite L630 Series Removing A Memory Media](#)
Toshiba Satellite L630 Series
[Satellite Removing Memory Media](#)
Toshiba Satellite
[Satellite Pro R50-B Series Removing Memory Media](#)
Toshiba Satellite Pro R50-B Series
[Satellite Pro Series Removing Memory Media](#)
Toshiba Satellite Pro Series
[Portégé Z30-C Series Removing Memory Media](#)
Toshiba Portégé Z30-C Series

This manual is also suitable for:

[Nb205-n323bnNb205-n324blNb205-n324whNb205-n325blNb205-n325bnNb205-n325pk ... Show all](#)