

Setting Up A Pc Card For Your Computer; Using The Bridge Media Adapter Slot - Toshiba S300-EZ1511 User Manual

S300-ez1511 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
Table Of Contents
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251



•

[Table of Contents](#)

•

Bookmarks



136

Exploring Your Computer's Features

Using the Bridge Media Adapter Slot

2

Locate the PC Card eject button.

3

Press the PC Card eject button once to pop it out slightly, and push it in to remove the PC Card.

The PC Card ejects slightly from the slot.

4

Grasp the edges of the PC Card and slide it out of the slot.

(Sample Illustration) Removing a PC Card

Setting up a PC Card for your computer

Some PC Cards are ready to use as soon as you install them. Others, such as hard disk cards, network cards, and SCSI adapters, may need to be set up to work with your computer. To set up your PC Card, refer to the documentation that came with the card or refer to

your operating system manual or online Help.

Using the Bridge Media Adapter Slot

The Bridge Media Adapter slot supports the use of Memory Stick

®

MMC

media can be used with a variety of digital products: digital music

players, cellular phones, PDAs, digital cameras, digital video camcorders, etc.

The Bridge Media Adapter slot may also support other types of media. For a complete list of supported media, visit Toshiba's Web site at accessories.toshiba.com.

NOTE

®


, Memory Stick PRO

(MultiMediaCard

Do not use the Copy Disk function for this type of media. To copy data from one media to another, use the drag-and-drop feature of the

®

Windows

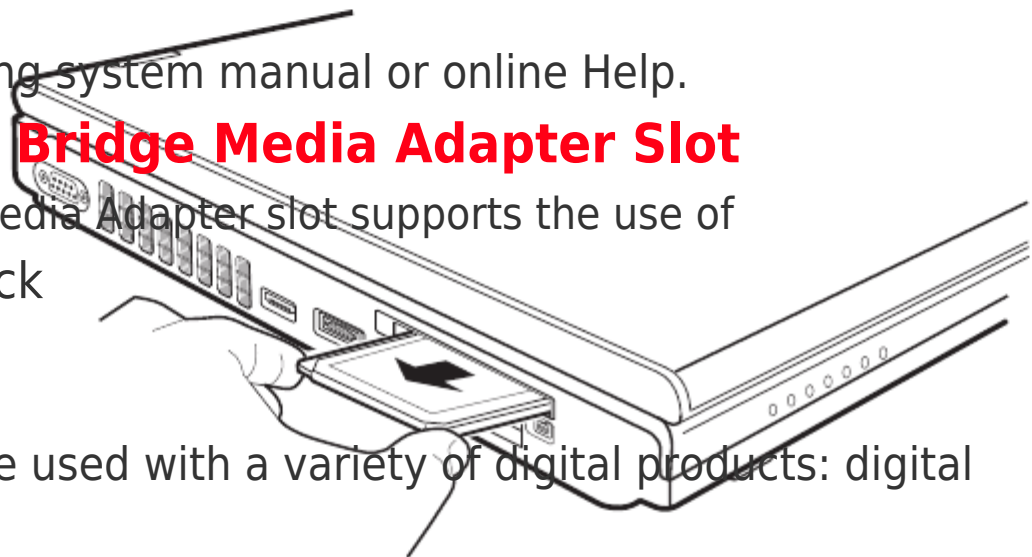

operating system.

™

, Secure Digital

®

), or xD-Picture Card

™

™

(SD

),

™

media. These

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

135

136

137

138

Quick Links:

[If Problems Arise](#)

[Adding Memory \(Optional\)](#)

[Power and the Batteries](#)

Related Manuals for Toshiba S300-EZ1511

[Laptop Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz User Manual](#)

Toshiba user's guide for satellite s300/s300m (windows vista) (242 pages)

[Laptop Toshiba TECRA A10/S10/M10/SATELLITEPRO S300 TECRA S10 User Manual](#)

Vizio mouse user manual (240 pages)

[Laptop Toshiba SATELLITEPRO S300 User Manual](#)

Toshiba laptop user manual (56 pages)

[Laptop Toshiba Satellite Pro S300 Maintenance Manual](#)

(464 pages)

[Laptop Toshiba PTMB3U-00X00X User Manual](#)

User manual (242 pages)

[Laptop Toshiba TECRA A10 Satellite Pro S300 Series User Manual](#)

(242 pages)

[Laptop Toshiba Satellite Pro S300L-SP5919C Manual Del Usuario](#)

User's guide for satellite pro s300l (spanish) (español) (240 pages)

[Laptop Toshiba Satellite Pro S300L Series User Manual](#)

(209 pages)

[Laptop Toshiba Satellite Pro S300-EZ1512 Specifications](#)

Toshiba satellite pro s300-ez1512: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1513 Specifications](#)

Toshiba satellite pro s300-ez1513: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1514 Specifications](#)

Toshiba satellite pro s300-ez1514: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ2501 Specifications](#)

Toshiba satellite pro s300-ez2501: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-S2503 Specifications](#)

Toshiba satellite pro s300-s2503: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-S2504 Specifications](#)

Toshiba satellite pro s300-s2504: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300M-EZ2402 Specifications](#)

Toshiba satellite pro s300m-ez2402: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300M-S2403 Specifications](#)

Toshiba satellite pro s300m-s2403: specifications (5 pages)

Related Content for Toshiba S300-EZ1511

[P105 S6197 - Satellite - Core 2 Duo 1.6 GHz Setting Up A Pc Card For Your Computer](#)

Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz

[S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz Setting Up A Pc Card For Your Computer](#)

Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz

[M45-S165 - Satellite - Celeron M 1.5 GHz Setting Up A Pc Card For Your Computer](#)

Toshiba M45-S165 - Satellite - Celeron M 1.5 GHz

[M45 S169 - Satellite - Celeron M 1.6 GHz Setting Up A Pc Card For Your Computer](#)

Toshiba M45 S169 - Satellite - Celeron M 1.6 GHz

[M115 S1061 - Satellite - Celeron M 1.6 GHz Setting Up A Pc Card For Your Computer](#)

Toshiba M115 S1061 - Satellite - Celeron M 1.6 GHz

[M105-S1021 - Satellite - Celeron M 1.46 GHz Setting Up A Pc Card For](#)

[Your Computer](#)

Toshiba M105-S1021 - Satellite - Celeron M 1.46 GHz

[L45-S7423 - Satellite - Pentium Dual Core 1.46 GHz Setting Up A Pc Card For Your Computer](#)

Toshiba L45-S7423 - Satellite - Pentium Dual Core 1.46 GHz

[M400 - Portege - Core 2 Duo 1.83 GHz Setting Up A Pc Card For Your Computer](#)

Toshiba M400 - Portege - Core 2 Duo 1.83 GHz

This manual is also suitable for:

[S300-ez1512S300-ez1513S300-ez2511S300-ez1514S300-s2503S300-ez2502](#) ... [Show all](#)