

Cd/Dvd Drive Acoustic Silencer - Toshiba S300-EZ1511 User Manual

S300-ez1511 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
Table Of Contents
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251



•

[Table of Contents](#)

•

Bookmarks



166

Utilities

CD/DVD Drive Acoustic Silencer

CD/DVD Drive Acoustic Silencer

This utility can slow the speed of your optical drive to make it run more quietly. You can use this utility to make listening to music CDs more enjoyable.

NOTE

(Sample Image) CD/DVD Drive Acoustic Silencer screen

To access the utility:

1

Click the CD/DVD Drive Acoustic Silencer icon in the **Optimize tab of**

The CD/DVD Drive Acoustic Silencer screen appears.

2

Click Silence Mode to make the drive run more slowly and quietly for listening to music or audio files on a CD.

3

Click Normal Mode to run the drive at normal speed for transferring data.

When you change the optical drive to "Silence" mode, the setting is only valid for the current Windows


restart, log off, or resume from Hibernation, the setting will revert back to Normal speed. The setting can also be changed by CD burning software or other applications that can set the drive speed.

TOSHIBA

®

session. If you shut down,

Assist.

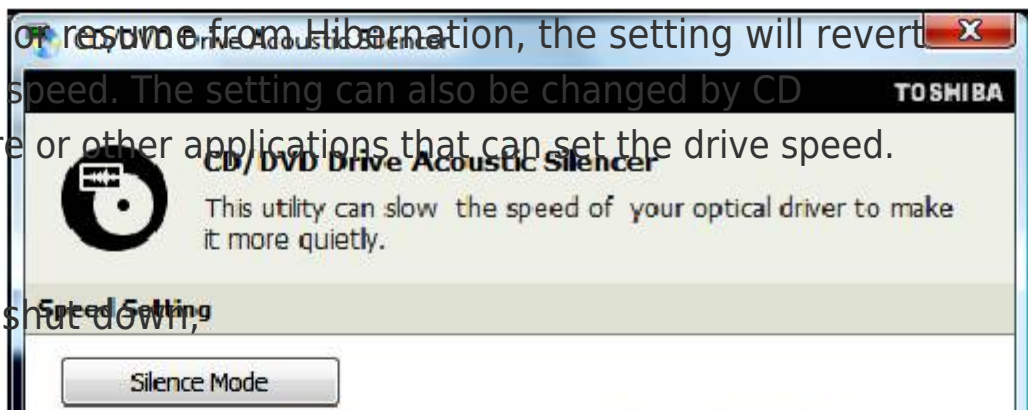

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

165

166

167

168

Quick Links:

[If Problems Arise](#)

[Adding Memory \(Optional\)](#)

[Power and the Batteries](#)

Related Manuals for Toshiba S300-EZ1511

[Laptop Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz User Manual](#)

Toshiba user's guide for satellite s300/s300m (windows vista) (242 pages)

[Laptop Toshiba TECRA A10/S10/M10/SATELLITEPRO S300 TECRA S10 User Manual](#)

Vizio mouse user manual (240 pages)

[Laptop Toshiba SATELLITEPRO S300 User Manual](#)

Toshiba laptop user manual (56 pages)

[Laptop Toshiba Satellite Pro S300 Maintenance Manual](#)

(464 pages)

[Laptop Toshiba PTMB3U-00X00X User Manual](#)

User manual (242 pages)

[Laptop Toshiba TECRA A10 Satellite Pro S300 Series User Manual](#)

(242 pages)

[Laptop Toshiba Satellite Pro S300L-SP5919C Manual Del Usuario](#)

User's guide for satellite pro s300l (spanish) (español) (240 pages)

[Laptop Toshiba Satellite Pro S300L Series User Manual](#)

(209 pages)

[Laptop Toshiba Satellite Pro S300-EZ1512 Specifications](#)

Toshiba satellite pro s300-ez1512: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1513 Specifications](#)

Toshiba satellite pro s300-ez1513: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1514 Specifications](#)

Toshiba satellite pro s300-ez1514: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ2501 Specifications](#)

Toshiba satellite pro s300-ez2501: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-S2503 Specifications](#)

Toshiba satellite pro s300-s2503: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-S2504 Specifications](#)

Toshiba satellite pro s300-s2504: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300M-EZ2402 Specifications](#)

Toshiba satellite pro s300m-ez2402: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300M-S2403 Specifications](#)

Toshiba satellite pro s300m-s2403: specifications (5 pages)

Related Content for Toshiba S300-EZ1511

[P105 S6197 - Satellite - Core 2 Duo 1.6 GHz Cd/Dvd Drive Acoustic Silencer](#)

Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz

[S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz Cd/Dvd Drive Acoustic Silencer](#)

Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz

[R10 S4401 - Tecra - Core 2 Duo 2.26 GHz Cd/Dvd Drive Acoustic Silencer](#)

Toshiba R10 S4401 - Tecra - Core 2 Duo 2.26 GHz

[M115 S1061 - Satellite - Celeron M 1.6 GHz Cd/Dvd Drive Acoustic Silencer](#)

Toshiba M115 S1061 - Satellite - Celeron M 1.6 GHz

[M105-S1021 - Satellite - Celeron M 1.46 GHz Cd/Dvd Drive Acoustic Silencer](#)

Toshiba M105-S1021 - Satellite - Celeron M 1.46 GHz

[L45-S7423 - Satellite - Pentium Dual Core 1.46 GHz Cd/Dvd Drive](#)

[Acoustic Silencer](#)

[Toshiba L45-S7423 - Satellite - Pentium Dual Core 1.46 GHz](#)

[M400 - Portege - Core 2 Duo 1.83 GHz Cd/Dvd Drive Acoustic Silencer](#)

[Toshiba M400 - Portege - Core 2 Duo 1.83 GHz](#)

[M200 - Portege - Pentium M 1.5 GHz Cd/Dvd Drive Acoustic Silencer](#)

[Toshiba M200 - Portege - Pentium M 1.5 GHz](#)

This manual is also suitable for:

[S300-ez1512S300-ez1513S300-ez2511S300-ez1514S300-s2503S300-ez2502](#) ... [Show all](#)