



# Problems When You Turn On The Computer - Toshiba S300-EZ1511 User Manual

S300-ez1511 user's guide



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
Table Of Contents  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

 
68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167

168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202  
203  
204  
205  
206  
207  
208  
209  
210  
211  
212  
213  
214  
215  
216  
217



218  
219  
220  
221  
222  
223  
224  
225  
226  
227  
228  
229  
230  
231  
232  
233  
234  
235  
236  
237  
238  
239  
240  
241  
242  
243  
244  
245  
246  
247  
248  
249  
250  
251



•

[Table of Contents](#)

•

## Bookmarks





**2**

Click the Applications tab.

If a program has stopped responding, the words "not responding" appear beside its name in the list.

**3**

Select the program you want to close, then click End Task. Closing the failed program should allow you to continue working. If it does not, continue with the next step.

**4**

Close the remaining programs one by one by selecting the program name, then End Task.

To power off your computer:

**1**

Click Start, and then click the arrow next to the Lock button in the lower-right part of the Start menu.

The Shut Down menu appears.

Start

*(Sample Image) Shut Down menu*

**2**

Click Shut Down.

The computer shuts down completely.

## Problems when you turn on the computer

These problems may occur when you turn on the power.

### The computer will not start.

Make sure you attached the AC adaptor and power cord/cable properly or installed a charged battery.

Press and hold the power button for at least 10 seconds.

If you are using the AC adaptor, check that the wires are

working by plugging in another device, such as a printer.

Verify that the computer is on by looking at the power

indicator.

If the indicator is glowing, the computer is on. A solid light

the


computer off and then on.

*Problems when you turn on the computer*

### If Something Goes Wrong

Arrow

**177**

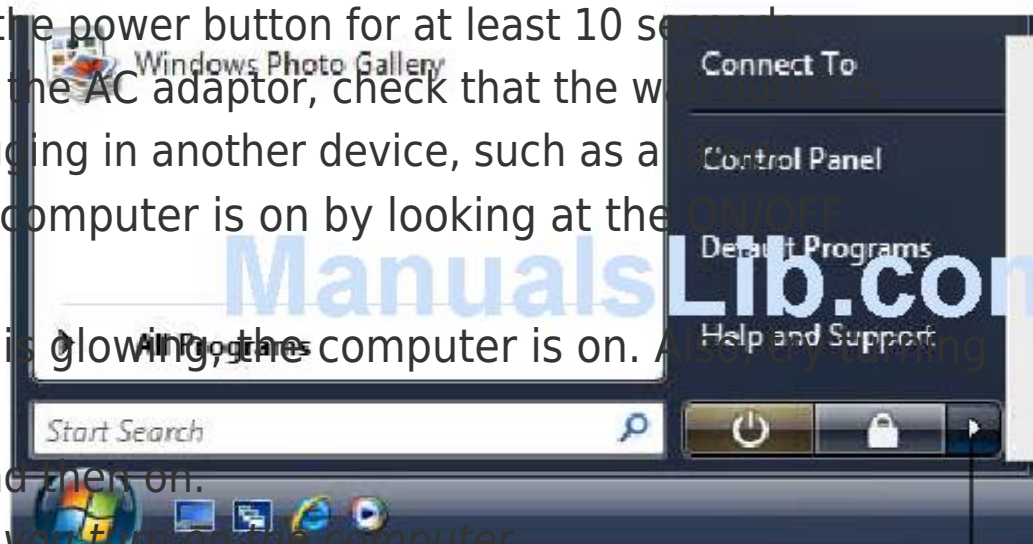

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)



1

...

176

177

178

179

Quick Links:

[If Problems Arise](#)

[Adding Memory \(Optional\)](#)

[Power and the Batteries](#)

## Related Manuals for Toshiba S300-EZ1511

[Laptop Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz User Manual](#)

Toshiba user's guide for satellite s300/s300m (windows vista) (242 pages)

[Laptop Toshiba TECRA A10/S10/M10/SATELLITEPRO S300 TECRA S10 User Manual](#)

Vizio mouse user manual (240 pages)

[Laptop Toshiba SATELLITEPRO S300 User Manual](#)

Toshiba laptop user manual (56 pages)

[Laptop Toshiba Satellite Pro S300 Maintenance Manual](#)

(464 pages)

[Laptop Toshiba PTMB3U-00X00X User Manual](#)

User manual (242 pages)

[Laptop Toshiba TECRA A10 Satellite Pro S300 Series User Manual](#)

(242 pages)

[Laptop Toshiba Satellite Pro S300L-SP5919C Manual Del Usuario](#)

User's guide for satellite pro s300l (spanish) (español) (240 pages)

[Laptop Toshiba Satellite Pro S300L Series User Manual](#)

(209 pages)

[Laptop Toshiba Satellite Pro S300-EZ1512 Specifications](#)

Toshiba satellite pro s300-ez1512: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1513 Specifications](#)

Toshiba satellite pro s300-ez1513: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1514 Specifications](#)

Toshiba satellite pro s300-ez1514: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ2501 Specifications](#)

Toshiba satellite pro s300-ez2501: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-S2503 Specifications](#)

Toshiba satellite pro s300-s2503: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-S2504 Specifications](#)

Toshiba satellite pro s300-s2504: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300M-EZ2402 Specifications](#)

Toshiba satellite pro s300m-ez2402: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300M-S2403 Specifications](#)

Toshiba satellite pro s300m-s2403: specifications (5 pages)

## Related Content for Toshiba S300-EZ1511

[satellite fusion 15 series Problems When You Turn On The Computer](#)

Toshiba satellite fusion 15 series

[Satellite CL10 Series Problems When You Turn On The Computer](#)

Toshiba Satellite CL10 Series

[Satellite S70-B Series Problems When You Turn On The Computer](#)

Toshiba Satellite S70-B Series

[Satellite CL40 Series Problems When You Turn On The Computer](#)

Toshiba Satellite CL40 Series

[Satellite E40-A Problems When You Turn On The Computer](#)

Toshiba Satellite E40-A

[Portege 2010 Problems When You Turn On The Computer](#)

Toshiba Portege 2010

[Satellite A35 Series Problems When You Turn On The Computer](#)

Toshiba Satellite A35 Series

[C50 Series Problems When You Turn On The Computer](#)

Toshiba C50 Series

This manual is also suitable for:

[S300-ez1512S300-ez1513S300-ez2511S300-ez1514S300-s2503S300-ez2502](#) ... [Show all](#)