

Using The Hot Key Cards - Toshiba S300-EZ1511 User Manual

S300-ez1511 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
Table Of Contents
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251



•

[Table of Contents](#)

•

Bookmarks



210

Hot Keys/TOSHIBA Cards

Hot Key Cards

Using the Hot Key Cards

The Hot Key Cards are normally hidden from view. The Cards appear when you press the

NOTE

To use the Hot Key Cards:

1

Press and hold the

The TOSHIBA Cards appear along the top of the screen.

(Sample Image) Hot Key Card display

2

Double-click the Card for the system function to be modified.

The selected Card is displayed full-size with its available options below it. All other Cards are again hidden from view.

3

Click the desired option.

To use a Hot Key Card using a hot key:

1

Press and hold the

2

Press the hot key associated with the desired function.

The associated hot key card appears at the top of the screen with its available options below it.

3



To cycle through the displayed options, hold down the hot key repeatedly. Release the option is selected.

Hot keys are keys that, when pressed in combination with the turn system functions on and off. Hot keys have a legend on the key indicating the option or feature the key controls.

Fn

Fn

Fn

key.

key.

key.

Fn

Fn
and press
key when the desired
key,
Fn

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

209

210

211

212

Quick Links:

[If Problems Arise](#)

[Adding Memory \(Optional\)](#)

[Power and the Batteries](#)

Related Manuals for Toshiba S300-EZ1511

[Laptop Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz User Manual](#)

Toshiba user's guide for satellite s300/s300m (windows vista) (242 pages)

[Laptop Toshiba TECRA A10/S10/M10/SATELLITEPRO S300 TECRA S10 User Manual](#)

Vizio mouse user manual (240 pages)

[Laptop Toshiba SATELLITEPRO S300 User Manual](#)

Toshiba laptop user manual (56 pages)

[Laptop Toshiba Satellite Pro S300 Maintenance Manual](#)

(464 pages)

[Laptop Toshiba PTMB3U-00X00X User Manual](#)

User manual (242 pages)

[Laptop Toshiba TECRA A10 Satellite Pro S300 Series User Manual](#)

(242 pages)

[Laptop Toshiba Satellite Pro S300L-SP5919C Manual Del Usuario](#)

User's guide for satellite pro s300l (spanish) (español) (240 pages)

[Laptop Toshiba Satellite Pro S300L Series User Manual](#)

(209 pages)

[Laptop Toshiba Satellite Pro S300-EZ1512 Specifications](#)

Toshiba satellite pro s300-ez1512: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1513 Specifications](#)

Toshiba satellite pro s300-ez1513: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1514 Specifications](#)

Toshiba satellite pro s300-ez1514: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ2501 Specifications](#)

Toshiba satellite pro s300-ez2501: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-S2503 Specifications](#)

Toshiba satellite pro s300-s2503: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-S2504 Specifications](#)

Toshiba satellite pro s300-s2504: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300M-EZ2402 Specifications](#)

Toshiba satellite pro s300m-ez2402: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300M-S2403 Specifications](#)

Toshiba satellite pro s300m-s2403: specifications (5 pages)

Related Content for Toshiba S300-EZ1511

[Qosmio X300 Series Hot Key Cards](#)

Toshiba Qosmio X300 Series

[Portégé R830 Series Hot Key Cards](#)

Toshiba Portégé R830 Series

[SatellitePro L700 Series Hot Key Cards](#)

Toshiba SatellitePro L700 Series

[L835 Hot Key Cards](#)

Toshiba L835

[Satellite R850 Series Hot Key Cards](#)

Toshiba Satellite R850 Series

[Qosmio F750 Series Hot Key Cards](#)

Toshiba Qosmio F750 Series

[Satellite A200 Series Hot Key Cards](#)

TOSHIBA Satellite A200 Series

[X870 Hot Key Cards](#)

Toshiba X870

This manual is also suitable for:

[S300-ez1512S300-ez1513S300-ez2511S300-ez1514S300-s2503S300-ez2502](#) ... [Show all](#)