

Control Buttons; Disabling Or Enabling The Touchpad; Using External Display Devices - Toshiba S300-EZ1511 User Manual

S300-ez1511 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
Table Of Contents
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251



•

[Table of Contents](#)

•

Bookmarks



Control buttons

When a step instructs you to click or choose an item, move the cursor to the item, then press and release the primary (left-hand) button. To double-click, press the primary button twice in rapid succession. The primary button usually corresponds to the left mouse button.

The function of the secondary (right-hand) button depends on the program you are using. It usually corresponds to the right mouse

button ("right-clicking"). Check your program's documentation to determine whether it uses the right mouse button.

Disabling or enabling the TouchPad

The TouchPad

TouchPad setting, press

TouchPad. For more information, see

[TouchPad™ " on page](#)

Using external display devices

Your computer comes with a built-in display, but you can also connect an external monitor or projector via the RGB (monitor) port.

Connecting an external monitor or projector

You can easily attach an external monitor or projector to your computer if you need a larger screen. To do this:

1

Read the directions that came with the monitor to see if you first need to install new software.

2

Connect the monitor's video cable to the RGB (monitor) port on the back of the computer.

3

Connect the device's power cable to a live electrical outlet.

4

Turn on the external device.

Your computer will automatically detect the external display device and activate a screen with display options.

5

Select the settings you desire and click Apply.

6

Click OK.

NOTE

Using external display devices

™

is enabled by default. To change the enable/disable
222.

In the future you can change the display settings by pressing
or by configuring the display properties settings.

™

+

. This hot key enables/disables the

Fn

F9

"Disabling or enabling the

Getting Started

73

,

Fn+F5

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
70
71
72
73
74
75
76
77

Quick Links:

[If Problems Arise](#)

[Adding Memory \(Optional\)](#)

[Power and the Batteries](#)

Related Manuals for Toshiba S300-EZ1511

[Laptop Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz User Manual](#)

Toshiba user's guide for satellite s300/s300m (windows vista) (242 pages)

[Laptop Toshiba TECRA A10/S10/M10/SATELLITEPRO S300 TECRA S10 User Manual](#)

Vizio mouse user manual (240 pages)

[Laptop Toshiba SATELLITEPRO S300 User Manual](#)

Toshiba laptop user manual (56 pages)

[Laptop Toshiba Satellite Pro S300 Maintenance Manual](#)

(464 pages)

[Laptop Toshiba PTMB3U-00X00X User Manual](#)

User manual (242 pages)

[Laptop Toshiba TECRA A10 Satellite Pro S300 Series User Manual](#)

(242 pages)

[Laptop Toshiba Satellite Pro S300L-SP5919C Manual Del Usuario](#)

User's guide for satellite pro s300l (spanish) (español) (240 pages)

[Laptop Toshiba Satellite Pro S300L Series User Manual](#)

(209 pages)

[Laptop Toshiba Satellite Pro S300-EZ1512 Specifications](#)

Toshiba satellite pro s300-ez1512: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1513 Specifications](#)

Toshiba satellite pro s300-ez1513: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1514 Specifications](#)

Toshiba satellite pro s300-ez1514: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ2501 Specifications](#)

Toshiba satellite pro s300-ez2501: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-S2503 Specifications](#)

Toshiba satellite pro s300-s2503: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-S2504 Specifications](#)

Toshiba satellite pro s300-s2504: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300M-EZ2402 Specifications](#)

Toshiba satellite pro s300m-ez2402: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300M-S2403 Specifications](#)

Toshiba satellite pro s300m-s2403: specifications (5 pages)

Related Content for Toshiba S300-EZ1511

[Satellite A35 Series Control Buttons](#)

Toshiba Satellite A35 Series

[C50 Series Media Control Buttons](#)

Toshiba C50 Series

[Qosmio X70-A series Media Control Buttons](#)

Toshiba Qosmio X70-A series

[Satellite L40 series Media Control Buttons](#)

Toshiba Satellite L40 series

[Satellite L550 Series Control Buttons](#)

Toshiba Satellite L550 Series

[Satellite P200 Series Control Buttons](#)

Toshiba Satellite P200 Series

[Qosmio X300 Series Control Buttons](#)

Toshiba Qosmio X300 Series

[Satellite Media Control Buttons](#)

Toshiba Satellite

This manual is also suitable for:

[S300-ez1512S300-ez1513S300-ez2511S300-ez1514S300-s2503S300-ez2502](#) ... [Show all](#)