

Removing A Disc With The Computer On; Removing A Disc With The Computer Off - Toshiba R830-S8310 User Manual

R830-s8310 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
Table Of Contents
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245

•

[Table of Contents](#)

•

Bookmarks



NOTE

For details on how to use the software, please refer to the respective [Online Help](#) menus.

Removing a disc with the computer on

To remove an optical disc with the computer turned on:

1

Press the eject button on the drive.

2

Pull the tray out until it is fully open, remove the disc, and place it in its protective cover.

3

Gently press the tray in to close it.

Removing a disc with the computer off

To remove a disc with the computer turned off:

1

Insert a slender object, such as a straightened paper clip, into the manual eject hole.

The disc tray slides partially out of the drive.

Due to manufacturing and quality variations in third party optical media (e.g., CD or DVD) or optical media players/recorders, in certain cases, your Toshiba optical disc drive may not record on certain optical media that bear the applicable logo, or play back optical media recorded by other computers or optical media recorders. Additionally, certain optical media recorded on your optical disc drive may not play back or operate properly on other computers or optical media players. These problems are not due to any defect in your Toshiba computer or optical disc drive. Please refer to your computer's product specification for listing of specific format compatibilities.

Copy protection technology may also prevent or limit recording or viewing of certain optical media.

Do not press the eject button while the drive in-use indicator light is glowing. Doing so could damage the disc or the drive.

Also, if the disc is still spinning when you open the disc tray, wait for it to stop spinning before you remove it.

Never use a pencil to press the manual eject button. Pencil lead can break off inside the computer and damage it.

CAUTION

Learning the Basics

Using the optical disc drive

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

114

115

116

117

Related Manuals for Toshiba R830-S8310

[Laptop Toshiba Portege R830-S8310 Resource Manual](#)

Toshiba portege r830-s8310: reference guide (36 pages)

[Laptop Toshiba Portege R830-S8310 Specifications](#)

Toshiba portege r830-s8310: specifications (4 pages)

[Laptop Toshiba PORTEGE R830 Maintenance Manual](#)

Personal computer (515 pages)

[Laptop Toshiba Portégé R830 Series User Manual](#)

(245 pages)

[Laptop Toshiba Satellite R800 Series User Manual](#)

Toshiba laptop user manual (214 pages)

[Laptop Toshiba Satellite R850 Series User Manual](#)

(213 pages)

[Laptop Toshiba Portege R830-ST8300 Specifications](#)

Toshiba portege r830-st8300: specifications (5 pages)

[Laptop Toshiba Portege R830-S8320 Specifications](#)

Toshiba portege r830-s8320: specifications (4 pages)

[Laptop Toshiba Portege R830-S8322 Specifications](#)

Toshiba portege r830-s8322: specifications (4 pages)

[Laptop Toshiba Portege R830-S8330 Specifications](#)

Toshiba portege r830-s8330: specifications (4 pages)

[Laptop Toshiba Portege R835-P50 Specifications](#)

Toshiba portege r835-p50: specifications (4 pages)

[Laptop Toshiba Portege R835-P56 Specifications](#)

Toshiba portege r835-p56: specifications (4 pages)

[Laptop Toshiba Portege R835-P70 Specifications](#)

Toshiba portege r835-p70: specifications (4 pages)

[Laptop Toshiba Portege R835-P75 Specifications](#)

Toshiba portege r835-p75: specifications (4 pages)

[Laptop Toshiba Portege R835-P81 Specifications](#)

Toshiba portege r835-p81: specifications (4 pages)

[Laptop Toshiba Portege R835-P55 Specifications](#)

Toshiba portege r835-p55: specifications (3 pages)

Related Content for Toshiba R830-S8310

[Satellite A35 Series Removing A Disc With The Computer On](#)

Toshiba Satellite A35 Series

[Satellite A35 Series Removing A Disc With The Computer On](#)

Toshiba Satellite A35 Series

[C50 Series Removing A Disc With The Computer On](#)

Toshiba C50 Series

[Qosmio X70-A series Removing A Disc With The Computer On](#)

Toshiba Qosmio X70-A series

[Satellite L40 series Removing A Disc With The Computer On](#)

Toshiba Satellite L40 series

[Satellite L550 Series Removing A Disc With The Computer On](#)

Toshiba Satellite L550 Series

[TECRA A50 series Removing A Disc With The Computer On](#)

Toshiba TECRA A50 series

[Satellite P200 Series Removing A Disc With The Computer On](#)

Toshiba Satellite P200 Series

This manual is also suitable for:

[R830-s8312R830-st8300Portege](#) [r830-s8320Portege](#) [r830-s8322Portege](#) [r830-s8330Portege](#) [r830-s8332](#) ... [Show all](#)