

Changing The Main Battery; Removing The Battery From The Computer - Toshiba R830-S8310 User Manual

R830-s8310 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
Table Of Contents
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245

•

[Table of Contents](#)

•

Bookmarks



Changing the main battery

When your main battery has run out of power, you have two options: plug in the AC adaptor or install a charged main battery.

Removing the battery from the computer

To remove the battery:

1

Save your work

2

⚠ WARNING


Turn off the computer or place it in Hibernation mode according to the instructions in ["Hibernation mode" on page](#)

3

Unplug and remove any cables connected to the computer, including the AC adaptor.

4

Close the display panel and turn the computer upside down.

Never  short circuit the battery pack by either accidentally or intentionally bringing the battery terminals in contact with another conductive object. This could cause serious injury or fire, and could also damage the battery pack and computer.



Never expose a battery pack to abnormal shock, vibration or pressure. The battery pack's internal protective device could fail, causing it to overheat or ignite, resulting in caustic liquid leakage, or explosion or fire, possibly resulting in death or serious injury.

TECHNICAL NOTE: To avoid losing any data, save your files and then either completely shut down your computer or put it into Hibernation mode before changing the main battery.

Mobile Computing

Changing the main battery

["Using and configuring](#) 

92.

129

[Previous Page](#)
[Next Page](#)

1
...
128
129
130
131

Related Manuals for Toshiba R830-S8310

[Laptop Toshiba Portege R830-S8310 Resource Manual](#)

Toshiba portege r830-s8310: reference guide (36 pages)

[Laptop Toshiba Portege R830-S8310 Specifications](#)

Toshiba portege r830-s8310: specifications (4 pages)

[Laptop Toshiba PORTEGE R830 Maintenance Manual](#)

Personal computer (515 pages)

[Laptop Toshiba Portégé R830 Series User Manual](#)

(245 pages)

[Laptop Toshiba Satellite R800 Series User Manual](#)

Toshiba laptop user manual (214 pages)

[Laptop Toshiba Satellite R850 Series User Manual](#)

(213 pages)

[Laptop Toshiba Portege R830-ST8300 Specifications](#)

Toshiba portege r830-st8300: specifications (5 pages)

[Laptop Toshiba Portege R830-S8320 Specifications](#)

Toshiba portege r830-s8320: specifications (4 pages)

[Laptop Toshiba Portege R830-S8322 Specifications](#)

Toshiba portege r830-s8322: specifications (4 pages)

[Laptop Toshiba Portege R830-S8330 Specifications](#)

Toshiba portege r830-s8330: specifications (4 pages)

[Laptop Toshiba Portege R835-P50 Specifications](#)

Toshiba portege r835-p50: specifications (4 pages)

[Laptop Toshiba Portege R835-P56 Specifications](#)

Toshiba portege r835-p56: specifications (4 pages)

[Laptop Toshiba Portege R835-P70 Specifications](#)

Toshiba portege r835-p70: specifications (4 pages)

[Laptop Toshiba Portege R835-P75 Specifications](#)

Toshiba portege r835-p75: specifications (4 pages)

[Laptop Toshiba Portege R835-P81 Specifications](#)

Toshiba portege r835-p81: specifications (4 pages)

[Laptop Toshiba Portege R835-P55 Specifications](#)

Toshiba portege r835-p55: specifications (3 pages)

Related Content for Toshiba R830-S8310

[satellite fusion 15 series Changing The Main Battery](#)

Toshiba satellite fusion 15 series

[Satellite CL10 Series Changing The Main Battery](#)

Toshiba Satellite CL10 Series

[Portege Z20-B Series Changing The Main Battery](#)

Toshiba Portege Z20-B Series

[Satellite S70-B Series Changing The Main Battery](#)

Toshiba Satellite S70-B Series

[Tecra A3 Series Changing The Main Battery](#)

Toshiba Tecra A3 Series

[Satellite Click 2 PRO Changing The Main Battery](#)

Toshiba Satellite Click 2 PRO

[Satellite CL40 Series Changing The Main Battery](#)

Toshiba Satellite CL40 Series

[Satellite A35 Series Changing The Main Battery](#)

Toshiba Satellite A35 Series

This manual is also suitable for:

[R830-s8312R830-st8300Portege](#) [r830-s8320Portege](#) [r830-s8322Portege](#) [r830-s8330Portege](#) [r830-s8332](#) ... [Show all](#)