



# Drawing Mode; Recording Mode - Toshiba e355 User Manual

E355 user's guide



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
Table Of Contents  
14  
15  
16  
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116



•

[Table of Contents](#)

•

## Bookmarks







*Toshiba Pocket PC e350/e355 User's Guide*

## Drawing Mode

In drawing mode, use your stylus to draw on the screen. Gridlines appear as a guide. When you lift your stylus off the screen after the first stroke, you'll see a drawing box indicating the boundaries of the drawing. Every subsequent stroke within or touching the drawing box becomes part of the drawing. For more information on drawing and selecting drawings, see Chapter 2.

Select Shape on the pop-up menu to convert objects to proper shapes.

Tap an arrow to see your choices.

Pen button.

## Recording Mode

In recording mode, embed a recording into your document. Recordings are saved as .wav files. For more information on recording, see Chapter 2.

For more information on using Pocket Word, tap

**82**

Resize an object by dragging the selection handles.

Tap to select formatting options, such as Pen weight, Line/Font color, and Fill color.

and then Help.

---

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
79  
80  
81  
82  
83  
84  
85  
86

Quick Links:

[Chapter 1: Getting Started](#)

## Related Manuals for Toshiba e355

[Handhelds Toshiba Pocket PC e350 Specifications](#)

Toshiba pocket pc e350: specifications (1 page)

[Handhelds Toshiba e350 User Manual](#)

Toshiba user's manual pocket pc e350 (105 pages)

[Handhelds Toshiba e310 User Manual](#)

Toshiba user's manual pocket pc e310 (104 pages)

[Handhelds Toshiba e400 User Manual](#)

Toshiba pocket pc user's manual e400, e405 (118 pages)

[Handhelds Toshiba Pocket PC e400 Specifications](#)

Toshiba pocket pc e400: specifications (1 page)

[Handhelds Toshiba e740 User Manual](#)

Toshiba user's manual pda e740 (182 pages)

[Handhelds Toshiba FREEDOM E330 User Manual](#)

Toshiba pda user manual (105 pages)

[Handhelds Toshiba e750 User Manual](#)

Toshiba pocket pc user's manual e750 (215 pages)

[Handhelds Toshiba e755 User Manual](#)

Toshiba pocket pc user's guide (187 pages)

[Handhelds Toshiba Pocket PC e750 Specifications](#)

Toshiba pocket pc e750: specifications (2 pages)

[Handhelds Toshiba e570 User Manual](#)

E570 user's guide (109 pages)

[Handhelds TOSHIBA e570 Instruction Manual](#)

Pocket pc (103 pages)

[Handhelds Toshiba e800 User Manual](#)

Toshiba pocket pc user's guide (236 pages)

[Handhelds Toshiba Pocket PC e800 Specifications](#)

Toshiba pocket pc e800: specifications (2 pages)

[Handhelds Toshiba Pocket PC e755 Specifications](#)

Toshiba pocket pc e755: specifications (1 page)

[Handhelds Toshiba e830 User Manual](#)

(30 pages)

## Related Content for Toshiba e355

[e740 Drawing Mode](#)

Toshiba e740

[e400 Drawing Mode](#)

Toshiba e400

[e350 Drawing Mode](#)

Toshiba e350

[e310 Drawing Mode](#)

Toshiba e310

[e755 Drawing On The Screen](#)

Toshiba e755

This manual is also suitable for:

[E350Pd350u-0002rPd350u-0002rr](#)