



# TOSHIBA

Toshiba e570 User Manual

E570 user's guide

 


1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17

Table Of Contents

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109



•

[Table of Contents](#)

- 

Troubleshooting



•

## Bookmarks

## Quick Links

[Download this manual](#) See also: [Instruction Manual](#)



1

TOSHIBA Pocket PC e570

Version

Last Saved on 10/18/2001 2:28 PM

**TOSHIBA Pocket PC e570**

Getting Started

**Pocket PC e570**

**User's Guide**

## Table of Contents

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba e570

### [Handhelds TOSHIBA e570 Instruction Manual](#)

Pocket pc (103 pages)

### [Handhelds Toshiba e310 User Manual](#)

Toshiba user's manual pocket pc e310 (104 pages)

### [Handhelds Toshiba e350 User Manual](#)

Toshiba user's manual pocket pc e350 (105 pages)

### [Handhelds Toshiba e355 User Manual](#)

E355 user's guide (116 pages)

### [Handhelds Toshiba Pocket PC e350 Specifications](#)

Toshiba pocket pc e350: specifications (1 page)

### [Handhelds Toshiba Pocket PC e400 Specifications](#)

Toshiba pocket pc e400: specifications (1 page)

### [Handhelds Toshiba e400 User Manual](#)

Toshiba pocket pc user's manual e400, e405 (118 pages)

### [Handhelds Toshiba e740 User Manual](#)

Toshiba user's manual pda e740 (182 pages)

### [Handhelds Toshiba FREEDOM E330 User Manual](#)

Toshiba pda user manual (105 pages)

### [Handhelds Toshiba e750 User Manual](#)

Toshiba pocket pc user's manual e750 (215 pages)

### [Handhelds Toshiba e755 User Manual](#)

Toshiba pocket pc user's guide (187 pages)

### [Handhelds Toshiba Pocket PC e750 Specifications](#)

Toshiba pocket pc e750: specifications (2 pages)

### [Handhelds Toshiba e800 User Manual](#)

Toshiba pocket pc user's guide (236 pages)

### [Handhelds Toshiba Pocket PC e800 Specifications](#)

Toshiba pocket pc e800: specifications (2 pages)

### [Handhelds Toshiba Pocket PC e755 Specifications](#)

Toshiba pocket pc e755: specifications (1 page)

### [Handhelds Toshiba e830 User Manual](#)

(30 pages)

## Summary of Contents for Toshiba e570

[Page 1](#) TOSHIBA Pocket PC e570 Version Last Saved on 10/18/2001 2:28 PM TOSHIBA Pocket PC e570 Getting Started Pocket PC e570 User's Guide TOSHIBA Pocket PC e570 ENGLISH using Euro\_C.dot -- Printed on 10/18/2001 as 01\_GENUK...

### [Page 2: Safety Precautions](#)

Introduction Thank you very much for your purchase of this Toshiba pocket personal computer. Please be sure to read this user's guide before using the Toshiba Pocket PC, and ensure that you are aware of correct handling procedures. Please be sure to read "Safety precautions" in this document since these describe important safety issues.

[Page 3](#) Toshiba Corporation or intentional acts, negligence or misuse on the part of the user or any usage under abnormal conditions. Toshiba Corporation is in no way liable for any damage, including but not limited to change or loss of stored data, loss of business profit, lost profits, interruption of business, or lost communication opportunities that are caused by usage or non- usability of this product.

[Page 4](#) Usage in such areas can cause an accident due to negative effects on equipment such as aviation equipment or medical equipment. Keep the Toshiba Pocket PC no less than 9 inches away from persons with a heart pacemaker implant when using the device in combination with a mobile phone.

[Page 5](#) Exposure to liquid can cause ignition or electric shock. If dust is found on or around the pins of the power plug, turn off the Toshiba Pocket PC and disconnect the power plug from the outlet, then wipe off the dust using a dry cloth.

[Page 6](#) Version Do not disassemble, remodel, or repair. Disassembly, remodeling, or repair can cause fire, electric shock, or injury. Please contact the dealer from whom the Toshiba Pocket PC was purchased and request repair service. CAUTIONS When unplugging the power plug from the outlet, disconnect the power cord by grasping the power plug itself.

[Page 7](#) Sitting under these circumstances can cause damage or failure. Do not place objects or drop them on top of the Toshiba Pocket PC. When the Toshiba Pocket PC is placed in a bag containing heavy items, do not allow it to be caught underneath them.

[Page 8](#) A lithium ion battery is used as the built-in battery. Please request the dealer from whom the Toshiba Pocket PC was purchased to replace the built-in battery when this becomes necessary. Lithium ion batteries are recyclable. When you replace your built-in battery, please request that the repair center recycle the battery.

## [Page 9: Table Of Contents](#)

Navigation Bar and Command Bar ... 2-19 Pop-up Menus... 2-20 Notifications... 2-20 Enter Information on Your Toshiba Pocket PC... 2-21 Entering Text Using the Input Panel ... 2-21 Find and Organize Information ... 2-30 Customize Your Toshiba Pocket PC ... 2-31 Chapter 3 ...

[Page 10](#) Companion Programs ... 5-1 Pocket Word... 5-1 Pocket Excel ... 5-6 MSN Messenger... 5-7 Windows Media Player for Toshiba Pocket PC... 5-11 Microsoft Reader ... 5-12 Chapter 6 ... 6-1 Pocket Internet Explorer ... 6-1 The Mobile Favorites Folder... 6-1 Mobile Favorites ...

[Page 11](#) TOSHIBA Pocket PC e570 Version Last Saved on 10/18/2001 2:28 PM Getting Started TOSHIBA Pocket PC e570 ENGLISH using Euro\_C.dot -- Printed on 10/18/2001 as 01\_GENUK...

## [Page 12: Chapter 1](#)

You're meeting your friends tonight for dinner and a movie. You download the latest movie information from the Internet to your computer and then synchronize it with your Toshiba Pocket PC. At dinner, you pull out your Toshiba Pocket PC and review your movie options with your friends. For more information on downloading Web pages to your Toshiba Pocket PC, see Chapter 6.

## [Page 13: Where To Find Information](#)

Pocket PC to a computer, a network, or the Internet. For instructions on setting up your Toshiba Pocket PC and installing ActiveSync, see the Quick Start card. The following table is a guide to additional information to help you use your Toshiba Pocket For information on:...

## [Page 14: Chapter 2](#)

Last Saved on 10/18/2001 2:28 PM TOSHIBA Pocket PC e570 Basic Skills You can easily learn to use your Toshiba Pocket PC. This chapter describes the use and customization of your Toshiba Pocket PC. Parts Names and Function Main unit (front view)

[Page 15](#) Program button 1 = Calendar Program button 2 = Tasks Program button 3 = Home Program button 4 = Contacts Program button 5 = Voice recorder User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK...



## [Page 16: Power Button](#)

Press it for some time. The power turns on. Press it quickly. The power turns on. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Basic Skills CF Card Slot SD Card Slot Stereo...

[Page 17](#) The battery switch supplies/cuts off the battery power to the Toshiba Pocket PC. The setting of this switch at shipment is "stop". When using the Toshiba Pocket PC for the first time, slide this switch to the right (the "supply" side) with the stylus. This switch should be on the "supply"...

## [Page 18: How To Use The Stylus](#)

Last Saved on 10/18/2001 2:28 PM How to Use the Stylus The stylus is used for menu selection or data input on the touch-screen of the Toshiba Pocket PC. Tap: Touch the screen once with the stylus to open items and select options.

## [Page 19: Battery Charging](#)

How to Charge the Battery You can use two charging methods. When you connect the AC adapter and the Toshiba Pocket PC, turn the unit off. Connect the supplied AC adapter and the cradle as shown in the figure below, and then insert the Toshiba Pocket PC into the cradle.

## [Page 20: How To Prolong Battery Life](#)

When the operable time has been extremely shortened, it is time to replace the built-in battery with a new one. Do not leave the Toshiba Pocket PC in a place of high or low temperature. It may shorten battery life.

## [Page 21: Initial Setup](#)

AC adapter to the Toshiba Pocket PC and charge the built-in battery. The built-in battery gradually discharges even if the device is not being used. When the Toshiba Pocket PC is left for a long time, the built-in battery of the Toshiba Pocket PC may completely discharge.

## [Page 22: Setup Method Of Options](#)

Insert the card smoothly and completely. When the card is inserted, the power turns on. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Basic Skills...

## [Page 23: Method Of Setting Card Into Sd Card Slot](#)

Open the card cover. Insert the card with its contact surface (metal contact surface) facing the back of the Toshiba Pocket PC. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Basic Skills 2-10...

[Page 24](#) - Notes of Pocket Outlook - Saving the destination selection of the Options item of the Tools menu of Pocket Word User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Basic Skills 2-11...

## [Page 25: Connecting To A Computer](#)

Last Saved on 10/18/2001 2:28 PM To connect Remote Control-Fitted Earphone Microphone You can listen to the sound output from your Toshiba Pocket PC by connecting the optional remote control-fitted earphone microphone. Insert the optional remote control-fitted earphone plug into the stereo headphone jack as shown in the figure below.

[Page 26](#) When your Toshiba Pocket PC is properly inserted into the cradle, your Toshiba Pocket PC will turn on and ActiveSync will open. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Basic Skills 2-13...

[Page 27](#) To connect directly using an optional connection cable: Connect the Toshiba Pocket PC directly to your computer using an optional USB cable. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Basic Skills 2-14...

[Page 28](#) Version Last Saved on 10/18/2001 2:28 PM Basic Skills Connect the Toshiba Pocket PC directly to your computer using the optional serial cable. User's Guide 2-15 TOSHIBA Pocket

### [Page 29: Today Screen](#)

Last Saved on 10/18/2001 2:28 PM Today Screen When you turn on your Toshiba Pocket PC for the first time each day (or after 4 hours of inactivity), you'll see the Today screen. You can also display it by tapping then Today.

### [Page 30: Programs](#)

You can also switch to certain programs by pressing a program button. Your Toshiba Pocket PC has 5 program buttons located on the front or the side of the Toshiba Pocket PC. The icons on the buttons on the front of the unit identify the programs they activate.

[Page 31](#) Version Last Saved on 10/18/2001 2:28 PM The following table contains a partial list of programs that are on your Toshiba Pocket PC. Look on the Toshiba Pocket PC Companion CD for additional programs that you can install onto your Toshiba Pocket PC.

### [Page 32: Navigation Bar And Command Bar](#)

Tap to customize the Toshiba Pocket PC. New button. Buttons. Menu names. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Basic Skills Tap to change volume or mute the Toshiba Pocket PC. Input panel button. 2-19...

### [Page 33: Pop-Up Menus](#)

Notifications Your Toshiba Pocket PC reminds you in a variety of ways when you have something to do. For example, if you've set up an appointment in Calendar, a task with a due date in Tasks, or an alarm in Clock, you'll be notified in any of the following ways:...

### [Page 34: Enter Information On Your Toshiba Pocket Pc](#)

ActiveSync Help on your computer. Entering Text Using the Input Panel Use the input panel to enter information in any program on your Toshiba Pocket PC. You can either type using the soft keyboard or write using Letter Recognizer, Block Recognizer, or Transcriber.

### [Page 35: To Type With The Soft Keyboard](#)

When you tap the displayed word, it is inserted into your text at the insertion point. The more you use your Toshiba Pocket PC, the more words it learns to anticipate.

### [Page 36: To Use Block Recognizer](#)

Write the way you do on paper. You can edit and format what you've written and convert the information to text at a later time. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Basic Skills 2-23...

### [Page 37: To Write On The Screen](#)

Edit menu. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Basic Skills Tap the Pen button and use your stylus like a pen.

### [Page 38: To Convert Writing To Text](#)

If a word is not recognized, it is left as writing. Select the text you want to convert and Tap Recognize on the pop-up menu. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Basic Skills The writing is turned into text.

[Page 39](#) User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Basic Skills Tap to return to your original writing.

### [Page 40: Drawing On The Screen](#)

Edit menu. To resize a drawing, make sure the Pen button is not selected, and drag a selection handle. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Basic Skills The drawing box indicates the boundaries of the drawing.

## [Page 41: Recording A Message](#)

To create a recording: Hold your Toshiba Pocket PC's microphone near your mouth or other source of sound. Press and hold the Record button on your Toshiba Pocket PC until you hear a beep. While holding down the Record button, make your recording.

## [Page 42: Using My Text](#)

To edit a My Text message, in the Tools menu, tap Edit and then tap My Text Messages. Select the message you wish to edit and make desired changes. User's Guide 2-29 TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK...

## [Page 43: Find And Organize Information](#)

To quickly find information that is taking up storage space on your Toshiba Pocket PC, select Larger than 64 KB in Type. You can also use the File Explorer to find files on your Toshiba Pocket PC and to organize these files into folders. On the Explorer.

## [Page 44: Customize Your Toshiba Pocket Pc](#)

Memory Adding or Removing Programs Programs added to your Toshiba Pocket PC at the factory are stored in ROM (read-only memory). You cannot remove this software, and you'll never accidentally lose ROM contents. ROM programs can be updated using special installation programs with a \*.xip extension.

## [Page 45: To Add A Program Directly From The Internet](#)

Toshiba Pocket PC. If you cannot find any installation instructions for the program in the Read Me file or documentation, use ActiveSync Explore to copy the program file to the Program Files folder on your Toshiba Pocket PC. For more information on copying files using ActiveSync, see ActiveSync Help.

## [Page 46: To Add A Program To The Start Menu](#)

Explorer, and locate the program (tap the folder list, labeled My Documents by default, and then My Device to see a list of all folders on the Toshiba Pocket PC). Tap and hold the program and tap Cut on the pop-up menu. Open the Start Menu folder located in the Windows folder, tap and hold a blank area of the window, and tap Paste on the pop-up menu.

[Page 47](#) Set the Front Light. When finished, tap OK to return to the System tab screen. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Basic Skills Check to make the front light turn off automatically when the Toshiba Pocket PC hasn't been used for a user-set...

## [Page 48: Setting Power](#)

Setting Memory You can adjust the data storing memory and the program running memory. You can also confirm the free space of a storage card and so on. Memory for the Toshiba Pocket PC is managed automatically. To change Memory allocation: and then Settings.

[Page 49](#) For more information on detailed operation method or the memory release method other than the above, see online help. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Basic Skills Capacity of a storage card being inserted.

## [Page 50: Chapter 3](#)

Toshiba Pocket PC Companion CD. For more information on installing ActiveSync, see your Quick Start card. ActiveSync is already installed on your Toshiba Pocket PC. User's Guide User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Microsoft ActiveSync Chapter 3...

[Page 51](#) Toshiba Pocket PC. You'll notice that information you've stored in Microsoft Outlook on your computer has been copied to your Toshiba Pocket PC and you didn't have to type a word. Disconnect your Toshiba Pocket PC from your computer and you're...

## [Page 52: Chapter 4](#)

ActiveSync, see ActiveSync Help on the computer. You can switch to any of these programs by tapping them on the User's Guide User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc -

### [Page 53: Calendar: Scheduling Appointments And Meetings](#)

(Agenda, Day, Week, Month, and Year) and easily switch views by tapping one of the 5 view icons at the bottom of the screen or by pressing the Calendar Program (button #1 on front of Toshiba Pocket PC).

### [Page 54: To Create An Appointment](#)

Ideas," later in this chapter. When finished, tap OK to return to the calendar. If you select Remind me in an appointment, your Toshiba Pocket PC will remind you according to the options set in, Settings, Personal tab, Sounds & Notifications.

### [Page 55: Using The Summary Screen](#)

For more information on sending and receiving meeting requests, see Calendar Help and Inbox Help on the Toshiba Pocket PC. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Microsoft Pocket Outlook View appointment details.

### [Page 56: Contacts: Tracking Friends And Colleagues](#)

To change the way information is displayed in the list, tap Tools and then Options. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Microsoft Pocket Outlook Select the category of contacts you want displayed in the list.

### [Page 57: To Create A Contact](#)

, Find, enter the contact name, select Contacts for the type, and then tap User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Microsoft Pocket Outlook Tap to return to the contact list (the contact is saved automatically).

[Page 58](#) When you tap a contact in the contact list, a summary screen is displayed. To change the contact information, tap Edit. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Microsoft Pocket Outlook View contact details.

### [Page 59: Tasks: Keeping A To Do List](#)

To change the way information is displayed in the list, tap Tools and then Options. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Microsoft Pocket Outlook Select the category of tasks you want displayed in the list.

### [Page 60: To Create A Task](#)

Tap here to add a new task and enter your task information. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Microsoft Pocket Outlook Tap to return to the task list (the task is saved automatically).

[Page 61](#) When you tap a task in the task list, a summary screen is displayed. To change the task, tap Edit. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Microsoft Pocket Outlook View task details.

### [Page 62: Notes: Capturing Thoughts And Ideas](#)

If the note list is displayed, it will be created as a stand-alone recording. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Microsoft Pocket Outlook Tap to change the sort order of the list.

### [Page 63: Inbox: Sending And Receiving E-Mail Messages](#)

Inbox synchronization, see ActiveSync Help on the computer. During synchronization: User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Microsoft Pocket Outlook Tap to return to the note list (the note is saved automatically).

[Page 64](#) Toshiba Pocket PC. You'll need to set up a remote connection to a network or an ISP, and a connection to your e-mail server. For more information, see Chapter 7.

## [Page 65: Using The Message List](#)

When you receive a message, tap it to open it. Unread messages are displayed in bold. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Microsoft Pocket Outlook Select the service and folder you want to display.

[Page 66](#) Pocket PC. Tap Tools and then tap Options. On the Service tab, tap the service you want to change. Tap and hold the service and select Delete to remove a service. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Microsoft Pocket Outlook 4-15...

## [Page 67: Composing Messages](#)

In the message list, tap Tools and then Options. On the Message tab, select your options. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Microsoft Pocket Outlook Tap to show or hide the complete header.

[Page 68](#) This synchronization of folders occurs whenever you connect to your mail server, create new folders, or rename/delete folders when connected. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Microsoft Pocket Outlook 4-17...

## [Page 69: Chapter 5](#)

The companion programs consist of Microsoft Excel, Windows Media Player for Toshiba Pocket PC, and Microsoft To switch to a companion program on your Toshiba Pocket PC, tap Programs on the menu, and then tap the program name. Pocket Word Pocket Word works with Microsoft Word on your computer to give you easy access to copies of your documents.

[Page 70](#) Last Saved on 10/18/2001 2:28 PM Pocket Word contains a list of the files stored on your Toshiba Pocket PC. Tap a file in the list to open it. To delete, make copies of, and send files, tap and hold a file in the list.

## [Page 71: Typing Mode](#)

You can search a document to find text by tapping Edit and then Find/Replace. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Companion Programs Tap to return to the document (changes are saved automatically).

## [Page 72: Writing Mode](#)

Written words are converted to graphics (metafiles) when a Pocket Word document is converted to a Word document on your computer. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Companion Programs With Space button selected, drag to insert space.

## [Page 73: Drawing Mode](#)

.wav files. For more information on recording, see Chapter 2. For more information on using Pocket Word, tap User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Companion Programs Resize an object by dragging the selection handles.

## [Page 74: Pocket Excel](#)

Pocket Excel (.pxl) and Excel (.xls). Pocket Excel contains a list of the files stored on your Toshiba Pocket PC. Tap a file in the list to open it. To delete, make copies of, and send files, tap and hold a file in the list.

## [Page 75: Msn Messenger](#)

Before you can connect, you must enter Passport or Exchange account information. To set up an account and sign in: In the Tools menu, tap Options. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Companion Programs and then Help. account or a ®...

## [Page 76: Working With Contacts](#)

To unblock a contact, tap and hold the contact, then tap Unblock on the pop-up menu. User's

### [Page 77: Chatting With Contacts](#)

Chats and select the person whom you were chatting with. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Companion Programs Enter message here. Tap to send message.

[Page 78](#) To know if the contact you are chatting with is responding, look for the message under the text entry area. For more information on using MSN Messenger, tap User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Companion Programs View full chat. View status of the chat.

### [Page 79: Windows Media Player For Toshiba Pocket Pc](#)

Windows Media Player for Toshiba Pocket PC Use Microsoft Windows Media Player for Toshiba Pocket PC to play digital audio and video files that are stored on your Toshiba Pocket PC or on a network. To switch to Windows Media Player for Toshiba Pocket PC, tap Windows Media.

### [Page 80: Microsoft Reader](#)

Use ActiveSync to download the files from your computer to your Toshiba Pocket PC as described in the Read Me file in the MSReader folder. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Companion Programs , Programs, and then Microsoft Reader.

### [Page 81: Using The Library](#)

In addition to the text, each book page includes a page number and book title. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Companion Programs Tap to scroll through the Library list.

### [Page 82: Using Reader Features](#)

Version Last Saved on 10/18/2001 2:28 PM You can also page through a book by using the Up/Down control on your Toshiba Pocket PC. Using Reader Features Reading a book electronically gives you several options not available with paper books. These options are available from any book page.

### [Page 83: Removing A Book](#)

Pocket PC. If a copy of the book is stored on your computer, you can download it again at any time. To remove a book from your Toshiba Pocket PC, tap and hold the title in the Library list, and then tap Delete on the pop-up menu.

### [Page 84: Chapter 6](#)

Unless you mark the favorite link as a mobile favorite, only the link will be downloaded to your Toshiba Pocket PC, and you will need to connect to your ISP or network to view the content. For more information on synchronization, see ActiveSync Help on the computer.

### [Page 85: Mobile Favorites](#)

Properties. In the Download tab, specify 0 or 1 for the number of linked pages you want to download. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Pocket Internet Explorer...

### [Page 86: Using Avantgo Channels](#)

To add or remove channels, tap the Add or Remove link. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Pocket Internet Explorer...

### [Page 87: Using Pocket Internet Explorer](#)

You can also connect to the Internet through an ISP or a network connection and browse the Web. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Pocket Internet Explorer Back button. Refresh button.

## [Page 88: To View Mobile Favorites And Channels](#)

Web address you want to visit and then tap Go. Tap the arrow to choose from previously entered addresses. To add a favorite link while using the Toshiba Pocket PC, go to the page you want to add, tap and hold on the page, and tap Add to Favorites.

## [Page 89: Chapter 7](#)

Internet. You have the following connection options: Use the infrared (IR) port on your Toshiba Pocket PC to send and receive files between two devices. If this is the method you want to use, see the following section "Transfer Items Using Infrared."...

## [Page 90: Transfer Items Using Infrared](#)

The Internet settings, select Internet Settings and tap Modify. In the Modem tab, tap New. Enter a name for the connection, such as "ISP Connection." User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Getting Connected...

## [Page 91: To Create An Ethernet Connection To An Isp](#)

"MSN Messenger", in Chapter 5. To create an Ethernet connection to an ISP: You do not need to create a new connection on your Toshiba Pocket PC. Instead, you must purchase and configure an Ethernet card that is compatible with your Toshiba Pocket PC.

## [Page 92: Connect To Work](#)

To start the connection, simply start using one of the following programs. Your Toshiba Pocket PC will automatically begin connecting. Once connected, you can: User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Getting Connected...

## [Page 93: End A Connection](#)

Synchronize. For more information, see ActiveSync Help on the computer. To create an Ethernet connection to a network: You do not need to create a new connection on your Toshiba Pocket PC. Instead, you must purchase and configure an Ethernet card that is compatible with your Toshiba Pocket PC.

## [Page 94: Connect Directly To An E-Mail Server](#)

For troubleshooting information, see the Toshiba Pocket PC Web site at: <http://www.microsoft.com/mobile/pocketpc>. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Getting Connected and then Help. When finished, to connect to and then Help. Tap View, All...

## [Page 95: Chapter 8](#)

You can also launch the Home by pressing the Toshiba Pocket PC Home button. Tap to select Paste or Add. User's Guide User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Optional Functions Chapter 8 For initial setting, the...

## [Page 96: About Running](#)

Running tab. In this case, only the Stop All is selectable. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Optional Functions Tap to activate the selected application.

## [Page 97: Display Icon List](#)

Tap and hold the icon you want to move to display the pop-up menu. Tap Cut on the pop-up menu. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Optional Functions Applications —...

## [Page 98: Deleting An Icon](#)

Browse. To refer to all folders and files, tap Browse to show the Browse Dialog screen. When the file is selected, its name is displayed in the Application file box. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Optional Functions...



## [Page 99: Tab Setting](#)

You can enter up to a maximum of 10 characters. Tap OK on the Tab Settings screen to return to the Home screen. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Optional Functions Tap to designate a folder you want to browse.

## [Page 100: To Change A Background](#)

You can set the color of the application name as desired. Tap the color you want to set, and the color of the application name changes. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Optional Functions...

## [Page 101: How To Make A Backup](#)

Last Saved on 10/18/2001 2:28 PM How to Make a Backup You can make a backup of the Toshiba Pocket PC data in an SD memory card or a Compactflash (CF) card. If you have backed up your data on an SD or Compactflash card, you can restore that data in your Toshiba Pocket PC.

[Page 102](#) If the storage card is write protected, you cannot save the backup data. Cancel the write protection before starting the backup. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Optional Functions Enter a password.

## [Page 103: Carrying Out Restore Operation](#)

To restore is to overwrite the backed up data from the storage card onto the main memory of your Toshiba Pocket PC. If the same file name exists in the main memory of your Toshiba Pocket PC, the file data is replaced with the backup data from the storage card.

## [Page 104: Deleting A Backup File](#)

Tap OK to display the Delete Backup File check screen. Tap OK to delete the backup file. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Optional Functions Select Delete Backup File from Functionality.

## [Page 105: Chapter 9](#)

Touch screen adjustment the correct action was not is incorrect. executed. User's Guide User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Additional Information Chapter 9 Correction Charge the battery. Charge the battery.

[Page 106](#) Radio waves of a connected cellular phone are getting worse. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Additional Information Secure the free memory. Quit the application if it is not in use.

## [Page 107: Resetting](#)

Reset is equal to "Restart" of a computer. Carry out the reset in such unusual case as when a button or tapping the screen does not respond. When your Toshiba Pocket PC is reset, all data that was not stored during operation will be deleted.

## [Page 108: Specifications](#)

Processor Strong ARM SA-1110 Action clock 206MHz Memory 64MB SDRAM Display Reflection color TFT, 240x320 pixels, up to 64,000 colors User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Additional Information...

[Page 109](#) Although the display is manufactured using an extremely high order of technology, there may be a case that some dots do not light or always light. It is not a malfunction. User's Guide TOSHIBA Pocket PC e570 - Ppc\_e570.doc - ENGLISH - Printed on 10/18/2001 as 01\_GENUK Additional Information...