



Toshiba DMF82XKU Owner's Manual


Dmf82xku user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

Table Of Contents

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

 68
69
70
71
72
73
74
75
76
77
78



•

-

Troubleshooting

•

Bookmarks

Quick Links

[1 Connecting to a Computer](#)

[Download this manual](#)

See also: [Setup Manual](#)



Digital Media Frame

TOSHIBA

DMF102XKU

Leading Innovation >>>

DMF82XKU

Leading Innovation >>>

DMF82XWU

OWNER'S MANUAL

© 2009 Toshiba Corporation

Owner's Record

The model number and serial number are on the back of your Digital Media Frame. Record these numbers in the spaces below. Refer to these numbers whenever you communicate with your Toshiba dealer about this Digital Media Frame.

Model number:

Serial number:

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba DMF82XKU

[Digital Photo Frame Toshiba DMF102XKU Setup Manual](#)

Digital media frame (20 pages)

[Digital Photo Frame Toshiba DMF102XKU Owner's Manual](#)

Digital media frame (18 pages)

[Digital Photo Frame Toshiba DMF82XKU Specification Sheet](#)

Toshiba digital media frame specification sheet (2 pages)

[Digital Photo Frame Toshiba DMF102XKU Specifications](#)

Toshiba digital media frame product brochure (2 pages)

[Digital Photo Frame Toshiba DMF82XWU Specifications](#)

Toshiba digital media frame product brochure (2 pages)

[MP3 Player Toshiba TOSHIBA SD800KA - SD800KA - All Region](#)

[Codefree DVD Player Owner's Manual](#)

Gigabeat, meg201, toshiba digital audio player, owners manual (68 pages)

[MP3 Player Toshiba Gigabeat P Series Service Manual](#)

Digital audio player (14 pages)

[MP3 Player Toshiba gigabeat MEG-F20 Owner's Manual](#)

Toshiba mobile audio mp3 player owner's manual (162 pages)

[MP3 Player Toshiba Gigabeat S MES60V Service Manual](#)

Gigabeat s series digital audio player (43 pages)

[MP3 Player Toshiba Portable MP3 Player Owner's Manual](#)

Toshiba portable media center owner's manual (102 pages)

[MP3 Player Toshiba MEGF40S - Gigabeat 40 GB Digital Player Owner's Manual](#)

Mobile audio player (75 pages)

[MP3 Player Toshiba gigabeat Quick Start Manual](#)

Portable media center (140 pages)

[MP3 Player Toshiba Gigabeat F60 Owner's Manual](#)

Mobile audio player (142 pages)

[MP3 Player Toshiba MEA110 Owner's Manual](#)

Mobile audio player (46 pages)

[MP3 Player Toshiba Gigabeat MET400 Specifications](#)

T-series portable media player (2 pages)

[MP3 Player Toshiba MEGF60S Owner's Manual](#)

Mobile audio player (75 pages)

Summary of Contents for Toshiba DMF82XKU

[Page 1](#) The model number and serial number are on the back of your Digital Media Frame. Record these numbers in the spaces below. Refer to these numbers whenever you communicate with your Toshiba dealer about this Digital Media Frame. Model number:...

[Page 3: Safety Precautions](#)

FCC class B limits may be attached to this equipment. Operation with non-compliant peripherals or peripherals not recommended by Toshiba is likely to result in interference to radio and TV

reception. Shielded cables must be used between the external devices and the Universal Serial Bus (USB 2.0) ports.

[Page 4](#) AC adaptor. Continued use in this state might cause fire, electric shock, or burns. For details on repair, consult Toshiba Customer Service. 27. Coin-shaped Battery a) CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the...

[Page 5: Precautions](#)

b) The remote control battery contains Perchlorate Material - special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate c) Keep coin-shaped batteries out of children's reach. Be careful not to ingest internally, especially by children, as doing so may cause poisoning. d) Do not install the battery backwards. Follow the instructions for battery replacement.

[Page 6: Wireless Lan Information](#)

● Do not use volatile liquids, such as insect spray, near the digital media frame. Do not leave rubber or plastic products in contact with the digital media frame for a long time. They will leave marks on the finish. ●...

[Page 7](#) Because Wireless LAN products operate within the guidelines found in radio frequency safety standards and recommendations, TOSHIBA believes Wireless LAN is safe for use by consumers. These standards and recommendations reflect the consensus of the scientific community and result from...

[Page 9: Table Of Contents](#)

CONTENTS • Safety Precautions ... 3 • Important Safety Instructions ... 3 • Precautions ... 5 • Wireless LAN Information ... 6 MEDIA FRAME OVERVIEW • Accessories ... 11 • Front View ... 12 • Rear View ... 13 • Side View ... 14 •...

[Page 10](#) • Deleting Files ...33 Deleting One File ...33 Deleting Multiple Files ...33 • Connecting to A Computer ...34 Copying from A Computer ...35 USING ONLINE SERVICES • Setting Up A Wireless Network ...37 Wi-Fi Settings: Auto Configuration ...37 Wi-Fi Settings: Manual Configuration ...39 Wi-Fi Settings: IP Settings ...41 •...

[Page 11: Media Frame Overview](#)

LA, L.L.C. SEE [HTTP//WWW.MPEGLA.COM](http://WWW.MPEGLA.COM) ■ MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson. ACCESSORIES Thank you for purchasing the Toshiba Digital Media Frame. Please check whether all the following items are included in your box. □...

[Page 12: Front View](#)

● differs slightly depending on the viewing angles. TOUCH CONTROL KEYS The Toshiba Digital Media Frame is designed with touch key technology. You can control the Digital Media Frame by touching the designated keys on the right side of the screen. The function □...

[Page 13: Rear View](#)

REAR VIEW DMF 82X □ □ □ □ Stand □ Speakers □ Rubber Supporter EDIA RAME DMF 102X □ □ □ □ Stand □ Speakers □ Wall-Mounting Holes □ Rubber Supporter VERVIEW □...

[Page 14: Side View](#)

● Be sure to use the screws appropriate for the material and strength of the wall. Toshiba does not take any responsibility for any accident or damage caused by ● the failure to hang the Digital Media Frame on a wall properly.

[Page 15: Remote Control](#)

REMOTE CONTROL □ ROTATE : Press to rotate a photo. (Refer to page 24) □ ON/STANDBY: Press to turn on/off the Digital Media Frame. (Refer to page 18) □ SLIDESHOW: Press to start photo slideshow. (Refer to page 23) □...

[Page 16: Getting Started](#)

EDIA RAME VERVIEW GETTING STARTED INSTALLING THE STAND Attach the supplied stand as

illustrated. Stand NOTE ♦ Do not hold the stand when carrying the Digital Media Frame.
PLACING THE MEDIA FRAME Slide the Digital Media Frame into the slot of the rubber supporter as illustrated.

[Page 17: Using The Remote Control](#)

USING THE REMOTE CONTROL ■ Preparing the Remote Control Remove the transparent slip (as illustrated) before using the remote control. Transparent Slip ■ Operating with the Remote Control Point the remote control at the remote sensor and press the buttons. MODE MENU ENTER...

[Page 18: Connecting To Power](#)

EDIA RAME VERVIEW Remove the old battery. Place a new coin-shaped battery (CR2025) with the + side up on the holder. Keep the holder horizontal so that the battery does not fall through. CAUTION ♦ Danger of explosion if battery is incorrectly replaced.

[Page 19: Inserting /C Onnecting Devices](#)

♦ When the AC adaptor is in use, its temperature may increase. However, it is not a malfunction. Make sure that the AC adaptor is disconnected and the temperature decreases before carrying NOTE ♦ Do not use the supplied AC adaptor with any device other than this Digital Media Frame.

[Page 20](#) SAVING DATA ♦ It is recommended that you back up your memory card data. Toshiba is not liable for any damage caused by the use of any memory card with this digital media frame. Toshiba will not compen- sate for any lost data or recording(s) caused by the use of such cards.

[Page 21: Connecting To A Computer](#)

■ Connecting a USB Memory Device Connect a USB memory device (e.g. USB thumb drive (U3 system not supported), digital camera [with USB mass storage function] or USB card reader) directly as illustrated, or use a USB cable for the connection. (to USB Port) NOTE ♦...

[Page 22: Mode Menu](#)

EDIA RAME VERVIEW MODE MENU The Mode menu offers you convenient shortcuts to all major functions of the Digital Media Frame. Press MODE to bring up the Mode menu. Press ▲▼◀▶ or press MODE repeatedly to select a desired applica- tion, then press ENTER.

[Page 23: Using The Media Frame](#)

SING VIEWING PHOTOS SLIDESHOW MODE Press SLIDESHOW to start a photo slideshow directly. Press STYLE to change the slideshow effects. You can choose from one of the follow- ing styles.
● Music + Photos: Photos are displayed with music and changed with dissolving effect.

[Page 24: Single Photo Mode](#)

SING EDIA RAME SINGLE PHOTO MODE Press MODE to bring up the Mode menu. Press ▲▼◀▶ or press MODE repeatedly to select 'Single Photo', then press ENTER. The last viewed photo will be displayed. Press THUMBNAIL to bring up the file browser screen. Press ▲▼◀▶...

[Page 25: Watching Videos](#)

WATCHING VIDEOS Press MODE to bring up the Mode menu. Press ▲▼◀▶ or press MODE repeatedly to select 'Video', then press ENTER. Playback of the last watched video file will begin. THUMBNAIL to bring up Press the file browser screen. Press ▲▼◀▶...

[Page 26: Playing Music](#)

SING EDIA RAME PLAYING MUSIC Press MODE to bring up the Mode menu. Press ▲▼◀▶ or press MODE repeatedly to select 'Music', then press ENTER. Playback of the last played music file will begin. Press THUMBNAIL to bring up the file browser screen. Press ▲▼...

[Page 27: Displaying The Clock](#)

DISPLAYING THE CLOCK Press MODE to bring up the Mode menu. Press ▲▼◀▶ or press MODE repeatedly to select 'Clock', then press ENTER. A clock of preset style will be displayed. NOTE ♦

Press STYLE repeatedly to switch to other clock styles. ♦...

[Page 28: Displaying The Calendar](#)

SING EDIA RAME DISPLAYING THE CALENDAR Press MODE to bring up the Mode menu. Press ▲▼◀▶ or press MODE repeatedly to select 'Calendar', then press ENTER. A calendar of preset style will be displayed. NOTE ♦ Press STYLE repeatedly to switch to other calendar styles.

[Page 29: Changing Display Style](#)

CHANGING DISPLAY STYLE Press STYLE. A new presentation style applicable to the previous feature you were viewing will appear on screen. ● If you were viewing a photo slideshow, a new slideshow effect will be applied. ● If you were using the clock mode, a different clock will appear.

[Page 30: Viewing The Demo](#)

SING EDIA RAME NOTE ♦ The number of files listed may vary depending on your 'File Access Level' settings. If you have selected 'Specified Folder', only files in the chosen folder will be displayed. For more details, please refer to the section: System Setup >...

[Page 31: Copying Files](#)

COPYING FILES You can copy photo/video/music file(s) from connected memory cards/USB memory devices to the Digital Media Frame (internal memory) and vice versa. COPYING ONE FILE Switch the Digital Media Frame to Photo/Video/Music mode using the Mode menu. Press THUMBNAIL to bring up the file browser screen.

[Page 32: Copying Multiple Files](#)

SING EDIA RAME COPYING MULTIPLE FILES Switch the Digital Media Frame to Photo/Video/Music mode using the Mode menu. Press THUMBNAIL to bring up the file browser screen. Press OPTION to display available functions. Press ▲▼ to select 'Copy Marked File(s)', then press ENTER. Press ▲▼◀▶...

[Page 33: Deleting Files](#)

DELETING FILES DELETING ONE FILE Switch the Digital Media Frame to Photo/Video/Music mode using the Mode menu. Press THUMBNAIL to bring up the file browser screen. Press ▲▼◀▶ to select a file you would like to delete, then press OPTION.

[Page 34: Connecting To Acomputer](#)

SING EDIA RAME CONNECTING TO A COMPUTER Connect to a computer (to PC Port [USB Mini-B]) using a USB cable as illustrated. After the connection is established, you can copy files from computer to the internal memory of the Digital Media Frame and vice versa.

[Page 35: Copying From A Computer](#)

COPYING FROM A COMPUTER You can copy photo/video/music file(s) from a computer to the Digital Media Frame (internal memory) and vice versa. Connect to a computer using a USB cable as illustrated. Turn on both the computer and Digital Media Frame.

[Page 36](#) SING EDIA RAME...

[Page 37: Using Online Services](#)

SING SETTING UP A WIRELESS NETWORK To use this feature, you will need an Internet provider and a wireless router. If you would like to follow the 'One Touch Configuration (PBC for WPS)' mode to complete the network settings, please check whether your wireless AP/router supports WPS before you start.

[Page 38](#) SING ONLINE SERVICES Press ▲▼ to select 'One Touch Configuration (PBC for WPS)', then press ENTER. □ PBC (Push Button Configuration) □ WPS (Wi-Fi Protected Setup) Follow the on-screen instructions. Press the WPS button on the wireless AP/router, then press the WPS button on the Digital Media Frame.

[Page 39: Wi-Fi Settings: Manual Configuration](#)

Return to the Digital Media Frame. Press ▲▼◀▶ to select 'Start PIN', then press ENTER to start the configuration process. The configuration process will start. If the process is completed successfully, "Wi-Fi connection established" is displayed. Press ENTER to confirm the highlighted 'OK'...

[Page 40](#) SING NLINE ERVICES If the selected network is protected, a screen requesting further WEP/WPA information will appear. Press ▲▼◀▶ to enter the corresponding password, then select 'OK' to confirm. □ WEP (Wired Equivalent Privacy) □ WPA (Wi-Fi Protected Access) The configuration process will start. If the process is completed successfully, "Wi-Fi connection established"...

[Page 41: Wi-Fi Settings: Ip Settings](#)

FI SETTINGS IP SETTINGS Set up the IP Address, when the wireless AP/router does not support DHCP. Press MENU to bring up the Menu screen Press ◀▶ to select the 'Network Settings' icon. Press ▲▼ to select 'Wi-Fi Settings', then press ENTER.

[Page 42: Using Framechannel](#)

SING NLINE ERVICES USING FrameChannel Registering with FrameChannel service allows you to enjoy a customized collection of contents delivered directly to your Digital Media Frame. To use the service, you would need to create an account on the FrameChannel website. For further details, please go to www.framechannel.com.

[Page 43: Using Framechannel](#)

Use a computer to complete Step 6-8. Go to the FrameChannel website (www.framechannel.com) and log into your account using your computer. If you have not yet set up an account, follow the website instructions to complete the registration. After you log in, the account management page will appear.

[Page 44: Using Google ® Picasa](#)

SING NLINE ERVICES USING Google Picasa™ By registering the account information in the Digital Media Frame, you will be able to display photos uploaded to the online albums associated with the specified Google accounts. You can show not only your own photos but also pictures shared by your family and friends! Please go to www.google.com...

[Page 45: Using Google Picasa](#)

A screen for entering the account password will appear. If you are registering an account with public albums, leave the row blank, then press ▲▼◀▶ to select 'Cancel' or 'OK' to skip the step. If you are registering an account with private albums, press ▲▼◀▶...

[Page 46](#) SING NLINE ERVICES...

[Page 47: Settings](#)

SETTINGS MENU OVERVIEW VIEWING SETTINGS Screen Select this option to adjust the Settings setup of LCD screen. Photo Display Select this option to set the Order photo viewing sequence. Slideshow Select this option to set the Settings photo slideshow mode. Display Mode Select this option to set the photo presentation style.

[Page 48](#) SETTINGS DEVICE Internal Select this option to view Memory contents stored on the internal memory. SD/MMC/xD Select this option to view contents stored on the inserted SD/MMC/xD card. MS/MS Duo Select this option to view contents stored on the inserted MS card.

[Page 49: Modifying Viewing Settings](#)

MODIFYING VIEWING SETTINGS Press MENU to bring up the Menu screen. Press ◀▶ to select the 'Viewing Settings' icon. A list of options will appear on the screen. Press ▲▼ to select an item you would like to modify, then press ENTER.

[Page 50: Slideshow Settings](#)

SETTINGS SLIDESHOW SETTINGS • Interval: Set the duration time of a photo displayed in slideshow. (3 Secs., 7 Secs., 15 Secs., 30 Secs., 2 Mins., 10 Mins., 1 Hour, 3 Hours, 12 Hours, 24

Hours) • Shuffle: On/Off. If the function is set to 'ON', photos are selected randomly for display.

[Page 51: Language](#)

LANGUAGE • English: Use English as on-screen display language. • Spanish: Use Spanish as on-screen display language. DATE TIME SETTINGS • Date/Time: Adjust the date and time of the Digital Media Frame. Press ▲▼◀ to modify the settings, then press ENTER. •...

[Page 52: File Access Level](#)

SETTINGS FILE ACCESS LEVEL • All Files: All files saved in the same medium can be viewed and selected for further applications. • Specified Folder: Only files saved in a preset folder can be viewed and selected for further applications. If you have selected 'Specified Folder', press ▲▼...

[Page 53: Selecting Devices](#)

SELECTING DEVICES Press MENU to bring up the Menu screen Press ◀ to select the 'Device' icon. A list of devices will appear on the screen. Press ▲▼ to select a device you would like to view, then press ENTER. The Digital Media Frame will return to the previous mode, presenting files stored in the selected medium.

[Page 54: Modifying Network Settings](#)

SETTINGS MODIFYING NETWORK SETTINGS Press MENU to bring up the Menu screen Press ◀ to select the 'Network Settings' icon. NETWORK SETTINGS • Auto Configuration: Set up the Wi-Fi network using the WPS mode or device PIN code. • Manual Configuration: Set up the Wi-Fi network by entering related network information.

[Page 55: Specifications](#)

SPECIFICATIONS GENERAL Power Supply Power Consumption (Operation) Operating Temperature Operating Humidity Dimensions (W/H/D) Mass DISPLAY Panel Size Resolution Brightness Aspect Ratio Backlight Life Speakers SOUND Memory CONNECTIONS USB Port Headphone Jack DC 12 V (rated current: 1.5 A) 100-240V AC, 50/60Hz (with the supplied AC adaptor (EADP-18SB)) DMF102X: 10.5-13.5W...

[Page 56](#) SPECIFICATIONS Internal STORAGE Memory MEDIA SUPPORTED Device NOTE ♦ You need a memory card adapter if you use the miniSD and microSD cards. ♦ The Digital Media Frame cannot support the operation of all types of SD/MMC/xD/MS media and USB memory devices. FILE FORMAT Image...

[Page 57](#) Internet connection. To receive FrameChannel® or Picasa™ services on your Digital Media Frame, you need a working Wi-Fi connection. These services may be limited or unavailable based on conditions, factors, or events outside Toshiba's control, such as your Internet provider contract, connection, router, wiring, and other network and/or transmission conditions.

[Page 58](#) SPECIFICATIONS...

[Page 59: Troubleshooting](#)

If you experience problems while using the Digital Media Frame, please consult the following troubleshooting guide first, as it may offer immediate solutions to the condition occurred. Should the problem remain, contact a Toshiba service point near you. CONDITION...

[Page 60](#) TROUBLESHOOTING Cannot play music files Cannot play video files No sound Cannot copy files Cannot delete files Cannot use the Wi-Fi network ● Check whether there are music files stored in the memory card/USB memory device inserted. ● Check whether the format of the music files is supported by the Digital Media Frame.

[Page 61](#) Cannot show ● Check whether the Internet connection works photos uploaded to ● Check whether you enter a correct Google account the web galleries name. (FrameChannel and ● Check whether you enter a correct Google account Google Picasa) password if you would like to browse albums set to private viewing.

[Page 62](#) TROUBLESHOOTING...

[Page 63: Limited Warranty](#)

DAV Product. Complete and mail the enclosed product registration card or register your DAV Product on-line at www.tacp.toshiba.com/service as soon as possible. By registering your DAV Product you will enable TACP to bring you new products specifically designed to meet your needs and help us to contact you in the unlikely event a safety notification...

[Page 64](#) DAV Product to the TACP Warranty Exchange Center. For additional information, visit TACP's website: www.tacp.toshiba.com ALL WARRANTIES IMPLIED BY THE LAW OF ANY STATE OF THE U.S.A., INCLUDING THE IMPLIED WARRANTIES...

[Page 65: Appendix](#)

Digital Media Frame consists of multiple, independent software components. Each software component is copyrighted by TOSHIBA or a third party. The TOSHIBA Digital Media Frame uses software components that are distributed as freeware under a third-party end-user license agreement or copyright notice (hereinafter referred to as a "EULA").

[Page 66](#) PPENDIX by the GNU Library General Public License instead.) You can apply it to your programs, too. When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change...

[Page 67](#) redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.) These requirements apply to the modified work as a whole.

[Page 68](#) PPENDIX 7. If as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License.

[Page 69](#) LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. END OF TERMS AND CONDITIONS How to Apply These Terms to Your New Programs If you develop a new program, and you want...

[Page 70](#) PPENDIX GNU General Public License. However the source code for this file must still be made available in accordance with section (3) of the GNU General Public License v2. This exception does not invalidate any other reasons why a work based on this file might be covered by the GNU General Public License.

[Page 71](#) 3. Object Code Incorporating Material from Library Header Files. The object code form of an Application may incorporate material from a header file that is part of the Library. You may convey such object code under terms of your choice, provided that, if the incorporated material is not limited to numerical parameters, data structure layouts and accessors, or small...

[Page 72](#) PPENDIX If the Library as you received it specifies that a proxy can decide whether future versions of the GNU Lesser General Public License shall apply, that proxy's public statement of acceptance of any version is permanent authorization for you to choose that version for the Library.

[Page 73](#) that "this software is based in part on the work of the Independent JPEG Group". (3) Permission for use of this software is granted only if the user accepts full responsibility for any undesirable consequences; the authors accept NO LIABILITY for damages of any kind.

[Page 74](#) PPENDIX and copy as you see fit. If you make useful changes, add new tools, or find and fix bugs, please send your mods to the maintainers for general distribution. Library PNG COPYRIGHT NOTICE, DISCLAIMER, and LICENSE: If you modify libpng you may insert additional notices immediately following this sentence.

[Page 75](#) source code in a product, acknowledgment is not required but would be appreciated. A "png_get_copyright" function is available, for convenient use in "about" boxes and the like:

printf("%s",png_get_copyright(NULL)); Also, the PNG logo (in PNG format, of course) is supplied in the files "pngbar.png" and "pngbar.jpg (88x31) and "pngnow.png"...

[Page 76](#) PPENDIX The above copyright notice and this permis- sion notice shall be included in all copies or substantial portions of the Software. THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONIN- FRINGEMENT.

This manual is also suitable for:

[Dmf102xkuDmf82xwuDmf82xkDmf82xkw](#)