



# TOSHIBA

## Toshiba 20DL74 Owner's Manual

Lcd color tv



1

2

3

4

Table Of Contents

5

6

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28

---

•

•

Troubleshooting

•

Bookmarks

--

## Quick Links

[1 Accessories](#)

[2 Connecting the Antenna to Your Tv](#)

[3 Operating the Remote Control](#)


[4 Changing between Tv / Av Settings](#)

[5 14 / 20DI74 Lcd Tv Specifications](#)

[Download this manual](#)



See also: [Service Manual](#)

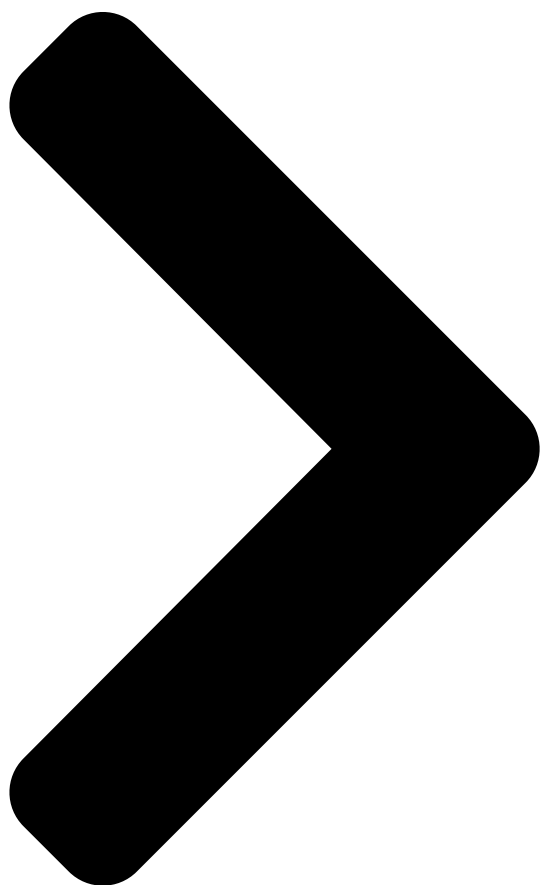

**O**  
**OWNER'S**  
**TOSHIBA**  
**TOSHIBA LCD COLOR TV**  
**14DL74**

# 20DL74

# TOSHIBA

© 2004 TOSHIBA CORPORATION  
All Rights Reserved

# M

# ANUAL

E

E: ENGLISH

F

F: FRANÇAIS

S: ESPAÑOL

S

[Table of Contents](#)

[Next Page](#)

- 1
- 2
- 3
- 4
- 5

# Troubleshooting

Appendix 23

troubleshooting table 24

## Related Manuals for Toshiba 20DL74

### [LCD TV Toshiba 14DL74 Service Manual](#)

Service manual (42 pages)

### [Monitor Toshiba 20DL74 Specifications](#)

20" diagonal 4:3 lcd monitor (2 pages)

### [Monitor Toshiba 14DL74 Specifications](#)

14" diagonal 4:3 lcd monitor (2 pages)

### [LCD TV Toshiba 20DL75 Specifications](#)

Signature series 20" lcd television (2 pages)

### [LCD TV Toshiba 15DL15 Service Manual](#)

Lcd color television (76 pages)

### [LCD TV Toshiba COLOR STREAM 15DL15 Owner's Manual](#)

Lcd color television (37 pages)

### [LCD TV Toshiba T20DL75A Owner's Manual](#)

Lcd color television (37 pages)

### [LCD TV Toshiba 15DL75 Owner's Manual](#)

Lcd color television (36 pages)

### [LCD TV Toshiba 20DL75 Owner's Manual](#)

Lcd color television (36 pages)

### [LCD TV Toshiba 15DL15 Owner's Manual](#)

Toshiba lcd color television owner's manual 15dl15, 20dl15 (36 pages)

### [LCD TV Toshiba 20DL77 Owner's Manual](#)

Toshiba 20dl77: owners manual (38 pages)

### [LCD TV Toshiba 20DL76 Service Manual](#)

(38 pages)

### [LCD TV Toshiba 20DL76 Owner's Manual](#)

Toshiba 20dl76 lcd color television owner's manual (43 pages)

### [LCD TV Toshiba AM40 Owner's Manual](#)

Toshiba lcd color television owner's manual (44 pages)

### [LCD TV Toshiba TheaterWide 20HLK86 Owner's Manual](#)

Lcd color television (42 pages)

### [LCD TV Toshiba 20W330DB Owner's Manual](#)

(37 pages)

## Summary of Contents for Toshiba 20DL74

## [Page 2: Child Safety](#)

Dear Customer, Thank you for purchasing this Toshiba TV. This manual will help you use the many exciting features of your new TV. Before operating the TV, please read this manual completely, and keep it nearby for future reference. Safety Precautions...

## [Page 3: Important Safety Instructions](#)

Important Safety Instructions 1) Read these instructions. 2) Keep these instructions. 3) Heed all warnings. 4) Follow all instructions. 5) Do not use this apparatus near water. 6) Clean only with dry cloth. 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

[Page 4](#) TV yourself. Opening and removing the covers may expose you to dangerous voltage or other hazards. Refer all servicing to a Toshiba Authorized Service Center. 37) If you have the TV serviced: • Ask the service technician to use only replacement parts specified by the manufacturer.

## [Page 5: Table Of Contents](#)

Using the TV's Features ... 15 Menu Display...15 Picture Settings ...16 Audio Settings...17 TV Settings ...18 Other Function Settings ...21 Appendix ... 23 Troubleshooting ...23 14 / 20DL74 LCD TV Specifications...25 Limited United States Warranty for LCD TV...26 Limited Canada Warranty for LCD TV ...27...

## [Page 6: Introduction](#)

Introduction Accessories AC Adapter TAA-Y58 Remote Control CT-864 CAUTION: Please make sure to only use the AC adapter provided with this product to power the TV. Power Cord Batteries x 2 Type AAA for Remote Control Owner's Manual...

## [Page 7: Names And Functions Of Controls](#)

Names and Functions of Controls TV/VIDEO Headphones Jack Remote Control Buttons The illustration shown displays the Remote Control Buttons. POWER turns the TV on and off. MUTE turns the sound on and off. TV selects TV antenna as the input signal. AV1/AV2 selects the AV input signal from one of these connectors.

## [Page 8: Connecting Your Tv](#)

Connecting Your TV Connecting the Antenna to Your TV Follow these instructions to connect the antenna to the antenna input of the LCD 1. Press the rear cover at the arrows (A) and pull the rear cover in the direction of the arrows (B) as shown in the illustration to remove the cover.

## [Page 9: Antenna Installation](#)

Antenna Installation Using a good quality TV antenna is essential for good LCD TV reception. Various antenna systems are available: Below are the different types and their connectors. • The 75Ω cable with commonly seen F type round head connectors require no tools for easy installation.

## [Page 10: Power Connection](#)

Power Connection Follow these instructions to connect your TV to power: 1. Remove the rear cover as described in step 1 of "Connecting the Antenna to Your TV" on page 8. 2. Remove the AC adapter from the package. 3. Connect the round end of the AC adapter to the rear of the LCD TV. Refer to the following illustration.

## [Page 11: Video/Audio Connections](#)

Video/Audio Connections This section describes connecting devices to the rear connectors. Be sure to turn off the power and unplug both TV and apparatus from the wall outlet before making any connections. The AV1 and AV2 terminals for connecting other equipment to your TV are on the left and right side of the back panel.

[Page 12](#) ColorStream™ (Component Video) For the Best Picture Quality You will need: • one set of component video cables • one pair of standard audio cables DVD player with component video COMPONENT VIDEO Amplifier To Boost Sound Quality You will need: one pair of standard audio cables Amplifier LINE IN...

## [Page 13: Using The Remote Control](#)

Using the Remote Control Operating the Remote Control 1. Aim the Remote Control directly at the LCD TV Remote Control Sensor. 2. The Remote Control range is approximately 16 feet at angles of approximately 30 degrees. 3. Avoid placing obstructions between the Remote Control and TV.

## [Page 14: Setting Up Your Tv](#)

Setting Up Your TV Turning the TV On and Off You can use the Remote Control or TV Control Panel to turn the TV On and Off: • Press the POWER button on the TV Control Panel. The red (standby) or blue (power on) LED lights up.

## [Page 15: Using The Tv's Features](#)

Using the TV's Features Menu Display The icons on the top line of the screen stand for the four settings: Picture Settings Audio Settings TV Settings Other Function Settings The selected option is stored in memory to be recalled. Picture Setting TV Setting To locate the above settings do the following: 1.

## [Page 16: Picture Settings](#)

Picture Settings To select the brightness Press BRIGHT on the Remote Control to adjust the brightness. You have three selections to choose from: DARK Minimum Brightness Normal Brightness To select the picture mode Press PICTURE on the Remote Control. You have four selections to choose from: DYNAMIC There are different setting parameters for DYNAMIC, MILD, THEATER and USER mode as described in the following table:...

## [Page 17: Audio Settings](#)

Audio Settings To adjust the balance of the speakers 1. Press MENU and press VOL - or + to select 2. Press CH to select BALANCE. 3. Press VOL - or + to adjust the setting. 4. Press MENU to exit. To select the AUDIO EFFECT To select the AUDIO EFFECT, press SOUND on the Remote Control.

## [Page 18: Tv Settings](#)

TV Settings Channel Input (CATV/TV) It is necessary to set the receiving mode to CATV or TV to receive local broadcast TV programs. 1. Press MENU and press VOL - or + to select 2. Press CH to select CHANNEL INPUT. 3.

## [Page 19: Closed Caption](#)

Closed Caption This TV is equipped with an internal Closed Caption decoder. The closed caption broadcasts can be viewed in two modes: CAPTION and TEXT For each mode, the following options are available: CAPTION CC1/CC2 CLOSED CAPTION MODE OFF] DATA CAPTION mode shows subtitles of dialogs and commentaries of TV dramas and news programs while allowing a clear view of the picture.

[Page 20](#) To Block Programs By MPAA Rating 1. Press MENU and press VOL - or + to select 2. Press CH to select V-CHIP BLOCK. 3. Input the 4-digit secret number (factory setting is 0000) using the number buttons. 4. Press CH to select MPAA.

## [Page 21: Other Function Settings](#)

Setting TV Parental Guidelines Block Content 1. Press MENU and press VOL - or + to select 2. Press CH to select V-CHIP BLOCK. 3. Input the 4 digit secret number by using the number buttons. 4. Press CH to select TV GUIDELINES.

## [Page 22: Channel Display](#)

Load Default Setting To restore the factory settings. 1. Press MENU and press VOL - or + to select 2. Press CH select LOAD DEFAULT. 3. Press VOL - or + to load the factory default settings. A message displays (OK) telling you that the defaults have been loaded.

## [Page 23: Appendix](#)

Appendix Troubleshooting If you experience any of the following difficulties while using the TV, check the list below before consulting your dealer. Interference Please note the following common causes of TV reception interference: Ignition Noise Black spots or vertical lines may



appear. Screen jumps crazily or is very unstable. This is commonly the result of car ignition noise interference, neon lights, or other forms of electrical interference.

### [Page 24: Troubleshooting Table](#)

Remote Control failure • Check the main power source. • Check if the Remote Control batteries are weak. • Check if the batteries have been correctly installed. • Check if there are obstructions between your Remote Control and the main TV Remote Control sensor.

### [Page 25: 14 / 20DL74 Lcd Tv Specifications](#)

14DL74: 42W (average) 20DL74: 48W (average) TFT Active Matrix LCD 14DL74: VGA 640 (H) dots x 480 (V) dots 20DL74: VGA 800 (H) dots x 600 (V) dots 2.5W + 2.5W 3.4 x 3.4 cm S-VIDEO INPUT Y: 1 V (p-p), 75 ohm, negative sync.

### [Page 26: Limited United States Warranty For Lcd Tv](#)

"Troubleshooting" section, you find that service is needed: (1) To find the nearest TACP Authorized Service Station, visit TACP's web site at [www.toshiba.com/tacp](http://www.toshiba.com/tacp) or call toll free 1-800-631-3811. (2) Present your bill of sale or other proof of purchase to the Authorized Service Station.

### [Page 27: Limited Canada Warranty For Lcd Tv](#)

Limited Canada Warranty for LCD TV Toshiba of Canada Limited ("TCL") makes the following limited warranties to original consumers in Canada. THESE LIMITED WARRANTIES EXTEND TO THE ORIGINAL CONSUMER PURCHASER OR ANY PERSON RECEIVING THIS LCD TV AS A GIFT FROM THE ORIGINAL CONSUMER PURCHASER AND TO NO OTHER PURCHASER OR TRANSFEREE.

This manual is also suitable for:

[14dl74](#)