



Toshiba 19CV100U Owner's Manual

Integrated high definition lcd tv/dvd combination

1

2

3

4

5

6

7

8

9

Table Of Contents

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

--

Quick Links

[1 Tv Front, Top and Side Panel Controls and Connections](#)

[2 Chapter 3: Using the Remote Control](#)

[Download this manual](#)



15CV100U

TOSHIBA
Leading Innovation >>>
15CV101U

19CV100U
Owner's Manual

22CV100U

TOSHIBA
Leading Innovation >>>

26CV100U

32CV100U

Owner's Manual

For an overview of steps for setting up your new TV, see page L2.

Note: To display a High Definition picture, the TV must be

receiving a High Definition signal (such as an over-the-air High

Definition TV broadcast, a High Definition digital cable program,

or a High Definition digital satellite program). For details, please

contact your TV antenna installer, cable provider, or satellite

provider.

Integrated High Definition LCD TV/DVD Combination

© 2010 TOSHIBA CORPORATION

All Rights Reserved

Owner's Record

The model number and serial number are on the back of your TV/DVD. Record these numbers in the spaces below. Refer to these numbers whenever you communicate with your Toshiba dealer about this TV/DVD.

Model number:

Serial number:

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

HDTV
HIGH-DEFINITION TELEVISION

DOLBY
DIGITAL



COMPACT
DISC
DIGITAL AUDIO

DVD
VIDEO

dtc™
Digital Out

ManualsLib.com

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba 19CV100U

[TV DVD Combo Toshiba 15CV100U Owner's Manual](#)

Integrated high definition lcd tv/dvd combination (95 pages)

[TV DVD Combo Toshiba 19C100UM Owner's Manual](#)

Integrated hd lcd tv/dvd combination (88 pages)

[TV DVD Combo Toshiba 19CV100U Specifications](#)

720p lcd hdtv/dvd combo (2 pages)

[TV DVD Combo Toshiba 22CV100U Specifications](#)

720p lcd hdtv/dvd combo (2 pages)

[TV DVD Combo Toshiba 26CV100U Specifications](#)

720p lcd hdtv/dvd combo (2 pages)

[TV DVD Combo Toshiba 32CV100U Specifications](#)

720p lcd hdtv/dvd combo (2 pages)

[TV DVD Combo Toshiba 19HLV87 Owner's Manual](#)

19-inch diagonal lcd tv/dvd combination (81 pages)

[TV DVD Combo Toshiba 19HLV87 Owner's Manual](#)

19-inch lcd tv/dvd combination (80 pages)

[TV DVD Combo TOSHIBA 24SLV411U Owner's Manual](#)

Integrated high definition lcd tv/dvd combination (337 pages)

[TV DVD Combo Toshiba 19SLV411U Owner's Manual](#)

Integrated high definition lcd tv/dvd combination (111 pages)

[TV DVD Combo Toshiba 19LV505 Service Manual](#)

19/22-inch diagonal lcd tv/dvd combination (156 pages)

[TV DVD Combo Toshiba 19LV610U-T Owner's Manual](#)

(80 pages)

[TV DVD Combo Toshiba 19DV733G Owner's Manual](#)

Lcd tv/dvd combination (92 pages)

[TV DVD Combo Toshiba 19DV733G Service Manual](#)

Lcd tv/dvd combination (76 pages)

[TV DVD Combo Toshiba 19DV615Y Owner's Manual](#)

Lcd tv/dvd combination (65 pages)

[TV DVD Combo toshiba 19DV550P Service Manual](#)

19-inch diagonal lcd tv/dvd combination (76 pages)

Summary of Contents for Toshiba 19CV100U

Page 1 Owner's Record The model number and serial number are on the back of your TV/DVD. Record these numbers in the spaces below. Refer to these numbers whenever you communicate with your Toshiba dealer about this TV/DVD. Model number: Serial number:...

Page 2: Safety Precautions

Dear Customer, Thank you for purchasing this Toshiba LCD TV/DVD. This manual will help you use the many exciting features of your new LCD TV/DVD. Before operating your LCD TV/DVD, please read this manual completely, and keep it nearby for future reference.

[Page 3: Important Safety Instructions](#)

Important Safety Instructions 1) Read these instructions. 2) Keep these instructions. 3) Heed all warnings. 4) Follow all instructions. 5) Do not use this apparatus near water. 6) Clean only with dry cloth. 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

[Page 4](#) 40) During normal use, the TV may make occasional snapping or popping sounds. This is normal, especially when the TV is being turned on or off. If these sounds become frequent or continuous, unplug the power cord and contact a Toshiba Authorized Service Center.

[Page 5: Choosing A Location For Your Lcd Tv](#)

Failure to follow this WARNING may result in death or serious injury. Refer all servicing not specified in this manual to a Toshiba Authorized Service Center. 44) If you have the TV serviced:

- Ask the service technician to use only replacement parts specified by the manufacturer.

[Page 6: Removing The Pedestal Stand](#)

Note: • 15CV100U, 22CV100U and 26CV100U are used for illustration purposes. • The hooks for sturdy strap are not applicable to 19CV100U and 22CV100U. Notes on moisture condensation Moisture condensation damages the unit. Please read the following carefully. Moisture condensation occurs, for example, when you pour a cold drink into a glass on a warm day and drops of water form on the outside of the glass.

[Page 7: Notes On Discs](#)

Notes on discs On handling discs • Do not touch the playback side of the disc. Handle the disc as shown in the figure below. Playback side • Do not attach paper or tape to discs. On cleaning discs • Fingerprints and dust on the disc cause picture and sound deterioration.

[Page 8: Playable Discs](#)

Because of problems and errors that can occur during the creation of DVD and CD software and/or the manufacture of DVD and CD discs, Toshiba cannot assure that this TV/DVD will successfully play every disc bearing the DVD and CD logos. If you happen to experience any difficulty playing a DVD or CD on this TV/ DVD, please contact Toshiba Customer Service.

[Page 9: Important Notes About Your Lcd Tv](#)

The following symptoms are technical limitations of LCD Display technology and are not an indication of malfunction; therefore, Toshiba is not responsible for perceived issues resulting from these symptoms. 1) An afterimage (ghost) may appear on the screen if a fixed, non-moving image is displayed for a long period of time.

[Page 10: Table Of Contents](#)

Contents Important Safety Instructions ...3 Installation, Care, and Service ...3 Choosing a location for your LCD TV ...5 Notes on discs ...7 Chapter 1: Introduction ...12 Features of your new TV ...12 Overview of steps for installing, setting up, and using your new TV ...12 TV front, top and side panel controls and connections ...13 TV back panel connections ...16...

[Page 11](#) Understanding the last mode memory feature ... 49 Chapter 7: Using the TV's advanced features ... 50 Using the advanced picture settings features ... 50 Using dynamic contrast ... 50 Using the static gamma feature ... 50 Selecting the color temperature ... 50 ®...

[Page 12: Chapter 1: Introduction](#)

Chapter 1: Introduction Features of your new TV The following are just a few of the many exciting features of your new Toshiba integrated HD, LCD TV/DVD: Integrated digital tuning (8VSB ATSC and • QAM) eliminates the need for a separate digital converter set-top box (in most cases).

[Page 13: Tv Front, Top And Side Panel Controls And Connections](#)

TV front, top and side panel controls and connections 15CV100U/15CV101U Power LED – This indicates the TV's status. See "LED indication" on Page 77 for additional information. Remote sensor (embedded) – Point the remote control toward this remote sensor. Effective range: Auto Brightness Sensor –...

[Page 14](#) 19CV100U/22CV100U/26CV100U/32CV100U Power LED – This indicates the TV's status. See "LED indication" on Page 77 for additional information. Remote sensor – Point the remote control toward this remote sensor. Effective range: Auto Brightness Sensor – This sensor will detect the ambient light conditions to optimize the backlighting levels.

[Page 15: Adjusting The Screen Angle](#)

Note: 22CV100U and 26CV100U are used for illustration purposes. Adjusting the screen angle (Applicable to 19CV100U/22CV100U) You can adjust the angle of the TV screen 3° forward or 15° backward from a vertical angle. Hold the base of the TV while adjusting the screen.

[Page 16: Tv Back Panel Connections](#)

ColorStream high-definition component video inputs (with standard stereo audio inputs) for connecting devices with component video output, such as a Toshiba DVD player with ColorStream Note: Component video cables carry only video information; separate audio cables are required for a complete connection.

[Page 17: Chapter 2: Connecting Your Tv](#)

Component video cables come in sets of three and are for use with video devices with component ® video output. (ColorStream is Toshiba's brand of component video.) These cables are typically color-coded red, green, and blue. Separate audio cables are required for a complete connection.

[Page 18: Connecting A Vcr, And Antenna, Cable Tv](#)

Connecting a VCR, and antenna, Cable TV You will need: coaxial cables • standard A/V cables • Note: When you use a Cable box, you may not be able to use the remote control to program or access certain features on the TV. To view the antenna or Cable signal: Select the ANT/CABLE video input source on the To view basic and premium Cable channels:...

[Page 19: Connecting A Dvd Player With Colorstream ® \(Component Video\)](#)

Connecting a DVD player with ® ColorStream (component video) You will need: standard audio cables • component video cables • - You can connect the component video cables (plus audio cables) from the DVD player to the COLOR STREAM HD terminal on the TV.

[Page 20: Connecting An Hdmi Or Dvi Device To The Hdmi Input](#)

Connecting an HDMI or DVI device to the HDMI input The HDMI input on your TV receives digital audio and uncompressed digital video from an HDMI source device, or uncompressed digital video from a DVI (Digital Visual Interface) source device. This input is designed to accept HDCP (High- Bandwidth Digital-Content Protection) program material in digital form from EIA/CEA-861-E...

[Page 21: Regza-Link ® Connection](#)

Toshiba's REGZA-LINK not liable for those operations. Refer to the individual instruction manuals for compatibility information. Note: This feature may not work properly depending on the devices that are connected. ® feature uses the CEC ® . However, Toshiba is...

[Page 22: Connecting A Digital Audio System](#)

Connecting a digital audio system The TV's DIGITAL AUDIO OUT terminal ® outputs a Dolby Digital down-mixed PCM (Pulse-Code Modulation) signal for use with an external Dolby decoder or other external audio system with optical audio input. If you have a DTS decoder or processor, you can obtain the full benefit of 5.1 channel DTS encoded soundtracks on DVDs and audio CDs.

[Page 23: Connecting A Personal Computer \(Pc\)](#)

Connecting a personal computer (PC) With either the PC IN or HDMI connection, you can watch your computer's display on the TV and hear the sound from the TV's speakers. To connect a PC to the PC IN terminal on the When connecting a PC to the PC IN terminal on the TV, use an analog RGB (15-pin) computer cable and a PC audio cable.

[Page 24: Chapter 3: Using The Remote Control](#)

Chapter 3: Using the remote control Preparing the remote control for The remote control can operate your TV/DVD and control the basic functions of connected audio/ video devices if you connect a REGZA-LINK compatible audio receiver or playback device Page 47). Installing the remote control batteries Remove the battery cover from the back of the...

[Page 25: Learning About The Remote Control](#)

Chapter 3: Using the remote control Learning about the remote control The buttons used for operating the TV/DVD are described here. For the REGZA-LINK control functions, see the section "Using REGZA- ® LINK " (Page 47). Note: The error message "NOT AVAILABLE" may appear if you press a key for a function that is not available.

[Page 26](#) Chapter 3: Using the remote control CLOSED CAPTION/SKIP the Closed Caption menu (forward to locate later DVD chapters (Page 58). CH RTN/SKIP returns to the last viewed channel or source (back to beginning of current DVD chapter or locate previous chapters (fast-forwards playback of the disc Page 57).

[Page 27: Chapter 4: Menu Layout And Navigation](#)

Chapter 4: Menu layout and navigation Main menu layout To open the main menus (illustrated below), press on the remote control or MENU on the TV control panel. Icon Item Mode Picture Picture Settings Noise Reduction Game Mode Theater Settings Audio Settings Sound Advanced Audio Settings 52...

[Page 28: Chapter 5: Setting Up Your Tv](#)

Chapter 5: Setting up your TV Initial Setup When you first turn on or reset the TV, the Initial Setup window will appear. In the Menu Language field, press to select your preferred language. to select Time Zone Setup Press and set your desired time zone with and then press Next, the location setting window will appear.

[Page 29: Programming Channels Into The Tv's Channel Memory](#)

Programming channels into the TV's channel memory When you press on the remote control or TV control panel, your TV will stop only on the channels you programmed into the TV's channel memory. Follow the steps below to program channels into the TV's channel memory.

[Page 30: Labeling Channels](#)

To block channels in the channel memory: You can block specific channels. You will not be able to tune blocked channels unless you unlock them. From the Channel Options menu, press to move to the channel lock list. Press to select a channel position to be locked and then press .

[Page 31: Setting The Hdmi™ Audio Mode](#)

To create and assign a custom label: If the desired channel label is not available from the list of presets, you can create a custom label. Open the Channel Labeling window. Press to select a channel you want to label. Press to select Custom and then press...

[Page 32: Viewing The Digital Signal Meter](#)

Viewing the digital signal meter You can view the digital signal meter in the ANT/ CABLE digital TV input source only. To view the digital signal meter: From the Setup menu, press select Installation and then press to highlight Terrestrial, and Press press to select Signal Meter and...

[Page 33: Chapter 6: Using The Tv's Features](#)

Chapter 6: Using the TV's features Selecting the video input source to view Press on the remote control or INPUT/ ENTER on the TV control panel. And then either: a) Press 0-6; or b) Repeatedly press control and then press input;...

[Page 34: Tuning Channels](#)

Chapter 6: Using the TV's features Input labeling example: The screen below is an example of how you could label the inputs if you connected a VCR to Video, a Video Recorder to HDMI 1, and a DTV set-top box to HDMI 2. Also note that the ColorStream HD input is labeled "Hidden", which means that input will be skipped over when To clear the input labels:...

[Page 35: Tuning To A Specific Channel \(Programmed Or Unprogrammed\)](#)

Chapter 6: Using the TV's features Tuning to a specific channel (programmed or unprogrammed) Tuning analog channels: Press the Channel Number buttons (0-9) on the remote control. For example, to select channel 125, press 1, 2, 5, then Tuning digital channels: Press the Channel Number buttons (0-9) on the remote control, followed by the dash (and then the sub-channel number.

[Page 36](#) Chapter 6: Using the TV's features Picture Size Natural Some program formats will display with sidebars and/or bars at the top and bottom. TheaterWide 1 (for 4:3 format programs) The center of the picture remains close to its original proportion, but the left and right edges are stretched wider to fill the screen.

[Page 37: Scrolling The Theaterwide Picture \(Theaterwide 2 And 3 Only\)](#)

Chapter 6: Using the TV's features Scrolling the TheaterWide (TheaterWide 2 and 3 only) You can set separate scroll settings for the TheaterWide 2 and TheaterWide 3 modes for each input. From the Picture menu, press select Theater Settings and then press In the Picture Size field, select either TheaterWide 2 or TheaterWide 3 (you cannot scroll in any other mode).

[Page 38: Adjusting The Picture](#)

Chapter 6: Using the TV's features Adjusting the picture Selecting the picture mode You can select your desired picture settings from four different modes, as described below. Mode Picture Quality Bright and dynamic picture (factory Sports setting) Standard picture settings (factory Standard setting) Lower contrast for darkened room...

[Page 39: Using The Closed Caption Mode](#)

Chapter 6: Using the TV's features Using the closed caption mode Base closed captions The closed caption mode has two options: Captions—An on-screen display of the dialogue, • narration, and sound effects of TV programs and videos that are closed captioned (usually marked "CC"...

[Page 40: Cc Selector](#)

Chapter 6: Using the TV's features CC Selector You can use the CC and Digital Audio Selectors to temporarily override the default analog caption mode (set in Base CC Mode) for a particular channel. However, once you change to another analog channel, the closed caption setting will automatically change back to the current Base CC Mode setting.

[Page 41: Adjusting The Audio Quality](#)

Chapter 6: Using the TV's features To listen to stereo sound: From the Sound menu, press select Audio Setup and then press Press to select MTS, and then press to select Stereo. To save the new settings, highlight Done and then press To revert to the factory defaults, highlight Reset and then press...

[Page 42: Using The Dolby Digital Dynamic Range Control Feature](#)

Chapter 6: Using the TV's features Using the Dolby ® Digital Dynamic Range Control feature This dynamic range control feature causes the ATSC dynamic range to be further compressed, allowing you to switch from ATSC to analog broadcasts at the same dynamic range. From the Sound menu, press select Audio Setup and then press Press...

[Page 43: Blocking Tv Programs And Movies By Rating \(V-Chip\)](#)

The additional rating system is not • designed, transmitted, or controlled by the TV or Toshiba, nor is the availability of an additional rating system determined or controlled by Toshiba. Similarly, the rating of programs in an additional rating system is not determined, transmitted, or controlled by the TV or Toshiba.

[Page 44: Unlocking Programs Temporarily](#)

Chapter 6: Using the TV's features Independent rating system for broadcasters Ratings Description and Content themes Mature Audience Only (This program is specifically designed to be viewed by adults and therefore may be unsuitable for children TV-MA under 17.) L) Crude or indecent language S) Explicit sexual activity V) Graphic violence Parents Strongly Cautioned

(This...

[Page 45: Using The Input Lock Feature](#)

Chapter 6: Using the TV's features Using the input lock feature You can use the Input Lock feature to lock the video inputs (Video, ColorStream HD, HDMI 1, HDMI 2, and PC) and channels 3 and 4. You will not be able to view the input sources or channels until you unlock the inputs.

[Page 46: Using The Pc Settings Feature](#)

Chapter 6: Using the TV's features Using the PC settings feature You can view an image from a PC on the TV screen. When a PC is connected to the TV's PC IN terminal, you can use the PC Settings feature to make adjustments to the image.

[Page 47: Setting The Sleep Timer](#)

0 minute. Using REGZA-LINK This is a new feature that uses CEC technology and allows you to control Toshiba REGZA-LINK compatible devices from the TV remote via HDMI connection (When the Enable REGZA-LINK in the REGZA-...

[Page 48: Regza-Link ® Player Control Menu Functions](#)

Chapter 6: Using the TV's features ® REGZA-LINK Player Control menu functions From the Preferences menu, press to select REGZA-LINK Player Control and then press Press to select the item you want to control and then press Item Description Power Turns the selected device on and off.

[Page 49: Displaying Tv Status Information](#)

Chapter 6: Using the TV's features Note: When you turn on the audio receiver, change its input source, or adjust the sound volume, the sound will be output from the audio receiver's speakers even if TV Speakers has been selected. Turn the TV off and on again to output the sound from the TV speakers.

[Page 50: Chapter 7: Using The Tv's Advanced Features](#)

Chapter 7: Using the TV's advanced features Using the advanced picture settings features Using dynamic contrast When dynamic contrast is set to On, the TV will detect changes in the picture quality that affect the appearance of your contrast settings and then automatically adjust the video.

[Page 51: Using Cableclear ® Digital Noise Reduction](#)

Chapter 7: Using the TV's advanced features ® Using CableClear digital noise reduction ® The CableClear digital noise reduction feature allows you to reduce visible interference in your TV picture. This may be useful when receiving a broadcast with a weak signal (especially a Cable channel) or playing a noisy video cassette or disc.

[Page 52: Using The Advanced Audio Settings Features](#)

Sampling rate: 32, 44.1, 48 kHz ID3: ver.1, ver.2 • Folder specifications Total number of files: Less than 2000 per folder • You must obtain any required permission from copyright owners to download or use copyrighted content. Toshiba cannot and does not grant such permission.

[Page 53: Basic Operation](#)

Chapter 7: Using the TV's advanced features Basic Operation To set Auto Start: From the Setup menu, press select Media Player and then press Press to select Auto Start and then press to select On. Auto Start: Insert USB device into the USB terminal on the left side of the TV.

[Page 54: Listening To Mp3 Files](#)

Chapter 7: Using the TV's advanced features To use the photo Quick Menu: You can select your preferred photo viewing settings from the photo Quick Menu. From the photo Single View, Slide Show or thumbnail mode, press to enter the Quick Menu.

[Page 55](#) Chapter 7: Using the TV's advanced features To use the music Quick Menu: You can select your preferred music playback settings from the music Quick Menu. From the music list or music playback mode, press to enter the Quick Menu. Note: The Quick Menu items of music

list and music playback modes are different.

[Page 56: Chapter 8: Basic Disc Playback](#)

Chapter 8: Basic disc playback Disc playback This section shows you the basics on how to play a disc. Basic playback (DVD/VCD/CD)* Press POWER on the TV control panel or on the remote control. The Power LED on the front of the TV changes to green.

[Page 57: Removing A Disc](#)

Removing a disc Press EJECT on the TV control panel or on the remote control. Wait for the disc to be ejected and then remove the disc from the slot. Disc playback reminders • If the TV/DVD does not operate properly, static electricity build-up may be the cause.

[Page 58: Locating A Chapter Or Track \(Dvd/ Vcd/Cd\)](#)

Locating a chapter or track (DVD/ VCD/CD) Press SKIP or SKIP display the chapter or track number you want to play. SKIP : To locate succeeding chapters or tracks. Playback starts from the beginning of the selected chapter or track. SKIP : Playback starts from the beginning of the current chapter or track.

[Page 59: Chapter 9: Advanced Disc Playback](#)

Chapter 9: Advanced disc playback Zoom function/Scene navigation You can change the viewing scale of a picture by using the Zoom function. Once the image has been rescaled, use the arrow buttons the image. Scene navigation options differ depending on the kind of disc.

[Page 60: Scene Bookmark](#)

Chapter 9: Advanced disc playback Scene bookmark Scene bookmarks refer to specific points in the playback range that have been marked for later access. You can create up to three markers per disc. Note: The saved scene bookmarks are only accessible during the current session.

[Page 61: Enabling A-B Repeat Mode \(Dvd/ Vcd/Cd\)](#)

Chapter 9: Advanced disc playback Enabling A-B repeat mode (DVD/ VCD/CD) During playback, press where you would like the playback loop to begin. This sets your "A" point. When the playback reaches the point where you would like the playback loop to stop, press again.

[Page 62: Enabling Random Playback \(Vcd\)](#)

Chapter 9: Advanced disc playback Press to return to the left column, then press to select Program Playback and press Play Mode Mode : Program Repeat : Off Program Playback Track playback will follow the sequence you set in step 3. To resume normal playback: In step 2, set Mode to Normal.

[Page 63: Soundtrack Language/Audio Channel/Subtitle](#)

Chapter 9: Advanced disc playback Soundtrack language/Audio channel/Subtitle Selecting a soundtrack language (DVD) You can select the soundtrack language when you play a multilingual DVD. During playback, press repeatedly until the preferred language track is selected. Selecting the audio channel (VCD) During playback, press repeatedly until the preferred audio channel is heard.

[Page 64: Turning Off The Pbc Function \(Vcd\)](#)

Chapter 9: Advanced disc playback Turning off the PBC function (VCD) Press in stop mode. Press select Mode, then press repeatedly until Normal appears. Play Mode Mode : Normal Repeat : Off Program Playback Press to close the screen. To turn on the PBC function: Follow steps 1 and 2 above, then press repeatedly until PBC appears.

[Page 65: Mp3, Wma, Jpeg, And Audio Cd Operation](#)

Use of CD-RW discs for recording MP3 files is not recommended. You must obtain any required permission from copyright owners to download or use copyrighted content. Toshiba can not and does not grant such permission.

[Page 66: About The File Browser \(Cd\)](#)

Chapter 9: Advanced disc playback About the file browser (CD) Operation status Scroll bar 3/15 00:00:00 /WMA-11.WMA MP3-5 Select files MP3-6 WMA-11 File list WMA-12 Picture-1 Picture-2

Music Playing Preview panel Selection highlight File icons Music file (MP3/WMA/Audio CD track)
Picture file (JPEG) If a CD contains a mixture of MP3, WMA and JPEG files, and...

[Page 67: Viewing A Jpeg File \(Cd\)](#)

Chapter 9: Advanced disc playback Viewing a JPEG file (CD) Load a disc containing JPEG files in the disc slot. The file browser appears on-screen. Press select an image file for view A preview of the selected file is displayed in the Preview panel.

[Page 68: Mp3, Wma, Jpeg And Audio Cd Playback Modes](#)

Chapter 9: Advanced disc playback MP3, WMA, JPEG and Audio CD playback modes You can choose to repeat CD playback by track or the entire disc. You can also program the file playback sequence or set the TV/DVD to play files at random.

[Page 69: Programming The Playback Sequence \(Cd\)](#)

Chapter 9: Advanced disc playback Programming the playback sequence (CD) In the Option panel of the file browser, press to select Edit Mode, then press Folder-1 Folder-2 Edit Mode MP3-1 Program View MP3-2 MP3-3 Press to return to the file list and press to select a file, then press inclusion in the programmed playlist.

[Page 70: Chapter 10: Customizing Disc Playback](#)

Chapter 10: Customizing disc playback Customizing disc playback You can customize the disc playback settings to suit your preferences. Configuring the disc playback settings (DVD/VCD/CD) In DVD mode, press during stop mode. Menu :English E.B.L. Parental : Off : Off : Off Subtitle :English...

[Page 71: Disc Playback Setup](#)

Chapter 10: Customizing disc playback Disc playback setup Option Menu Subtitle Audio Display Picture Mode JPEG Interval Night Mode Digital Out Parental Password Note: These setup settings are retained in the TV/DVD's memory. It remains active even if the power is turned off. Description Select the language for the DVD menu display.

[Page 72](#) Chapter 10: Customizing disc playback Menu Parental E.B.L. Subtitle TV Screen QSound Set Password Audio Display Output Picture Mode DivX(R) VOD JPEG Interval Screen Saver Menu / Select the language for the DVD and Setup menu display. Options include: English, French, and Spanish.

[Page 73](#) Chapter 10: Customizing disc playback Night Mode Parental Menu E.B.L. Digital Out Subtitle TV Screen Set Password Display Audio Output Picture Mode DivX(R) VOD JPEG Interval Screen Saver Night Mode Select to toggle the Night Mode feature on or off. When enabled, this function allows for automatic volume level adjustment for audio that may be too low (e.g.

[Page 74](#) Chapter 10: Customizing disc playback To temporarily cancel the parental restriction: 1) Load the restricted content DVD that you want to play. 2) Use the Channel Number buttons (0-9) to input the system password after the "Enter Password" message, then press This suspension of the parental restriction setting applies until disc is ejected.

[Page 75: Chapter 11: Troubleshooting](#)

Chapter 11: Troubleshooting General troubleshooting Before calling a service technician, please check this chapter for a possible cause of the problem and some solutions you can try. Black box on-screen • The closed caption feature is set to one of the Text modes (T1, T2, T3, or T4).

[Page 76](#) ® No REGZA-LINK operation ® • The REGZA-LINK feature is available for ® Toshiba REGZA-LINK compatible devices. • Make sure the HDMI cables with the HDMI Logo () are used. • When the connected REGZA-LINK does not work correctly after you have...

[Page 77: Led Indication](#)

LED Indication The Power LED light on the TV front indicates the TV's status, as described below. LED Indication Power LED Green is ON (solid) • The TV is operating properly. Red is ON (solid) • The TV is in Standby mode. If, after trying the solutions, the problem still exists: In the U.S., call TACP Consumer Solutions at...

[Page 78: Chapter 12: Appendix](#)

UHF: 14 through 69 Cable TV: 1-135 (4A, A5~A-1) A~I, J~W W+1~W+94 Power Source: 120 V AC, 60 Hz Power Maximum Current 15CV100U/101U: 0.6 A 19CV100U: 0.7 A 22CV100U: 1.0 A 26CV100U: 1.3 A 32CV100U: 1.8 A Power Consumption (in standby mode) 15CV100U/101U: 0.8 W...

[Page 79: Acceptable Signal Formats For Pc In And Hdmi Terminals](#)

Acceptable signal formats for PC IN and HDMI terminals PC IN signal formats Note: Depending on the connected PC, the following status may occur; incorrect display, false format detection, picture position failure, blur, or judder. But this is not a malfunction of your TV. Format Resolution 640 x 480...

[Page 80: Limited United States Warranty Lcd Tv/Dvd Combination - Depot Repair Warranty](#)

Limited United States Warranty LCD TV/DVD Combination – Depot Repair Warranty Toshiba America Consumer Products, L.L.C. (“TACP”) makes the following limited warranties to original consumers in the United States. THESE LIMITED WARRANTIES EXTEND TO THE ORIGINAL CONSUMER PURCHASER OR ANY...

[Page 81](#) THE ABOVE PROVISIONS MAY NOT APPLY TO YOU UNDER SUCH CIRCUMSTANCES. A copy of the GPL source code in this product may be obtained by contacting Toshiba Consumer Solutions at (800) 631-3811. There will be a charge to cover the costs of providing the source code.

[Page 82: The Gnu General Public License \(Gpl\)](#)

The GNU General Public License (GPL) Version 2, June 1991 Copyright (C) 1989, 1991 Free Software Foundation, Inc. 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

[Page 83](#) Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

[Page 84](#) If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this.

[Page 85: The Libpng License Notices](#)

The Libpng License Notices This copy of the libpng notices is provided for your convenience. In case of any discrepancy between this copy and the notices in the file png.h that is included in the libpng distribution, the latter shall prevail. COPYRIGHT NOTICE, DISCLAIMER, and LICENSE: If you modify libpng you may insert additional notices immediately following this sentence.

[Page 86: The Zlib License](#)

The zlib License zlib.h -- interface of the “zlib” general purpose compression library Version 1.2.3, July 18th, 2005 Copyright (C) 1995-2005 Jean-loup Gailly and Mark Adler This software is provided “as-is”, without any express or implied warranty. In no event will the authors be held liable for any damages arising from the use of this software.

[Page 88](#) TOSHIBA AMERICA CONSUMER PRODUCTS, L.L.C. Corporate Headquarters: 82 TOTOWA ROAD, WAYNE, NJ 07470, U.S.A. NATIONAL SERVICE DIVISION:1420-B TOSHIBA DRIVE, LEBANON, TN 37087, U.S.A. CableClear, ColorStream, GameTimer, and TheaterWide are registered trademarks of Toshiba America Consumer Products, L.L.C. DynaLight is trademark of Toshiba America Consumer Products, L.L.C.

This manual is also suitable for:

22cv100u26cv100u32cv100u19cv100c15cv100u15cv101u