



# Adjusting The Picture Quality; Watching Video Input; Selecting The Colorstream ® Mode; Displaying On- Screen Information - Toshiba 27A43 Owner's Manual

Colorstream color television



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68

69  
70  
71  
72



•

[Table of Contents](#)

- 


Troubleshooting


•

## Bookmarks



Available languages

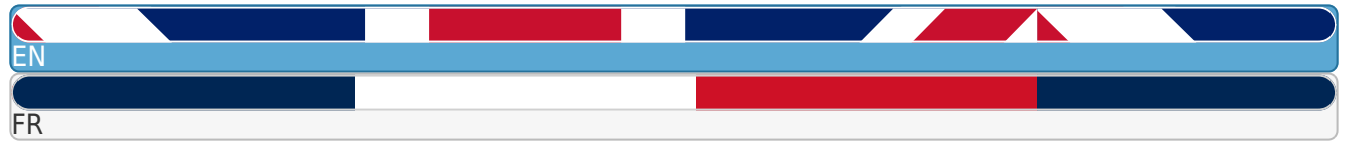

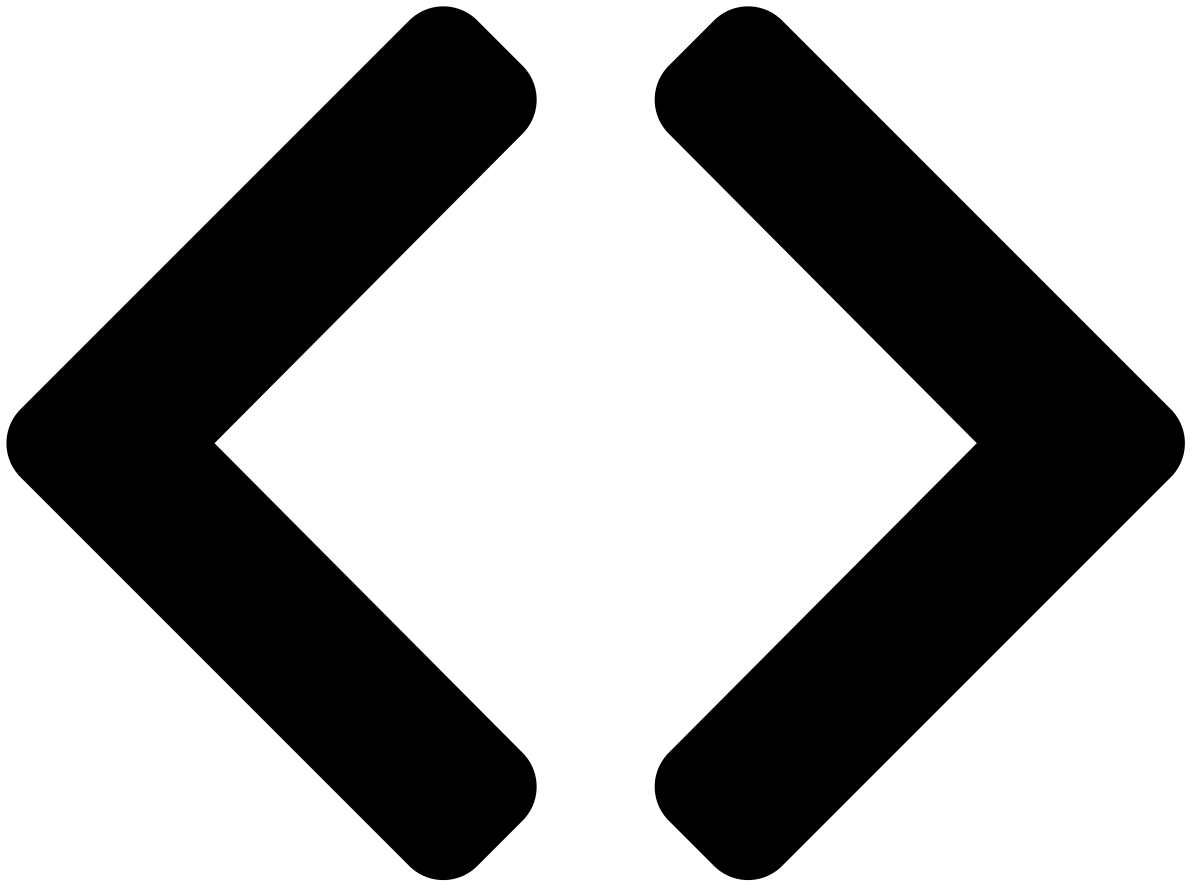

Enlarged version

## Adjusting the picture quality

You can adjust the picture quality to your personal preferences, including the contrast, brightness, color, tint, and sharpness. The qualities you choose will be stored automatically in your TV's memory so you can recall them at any time.



To adjust the picture quality:

1. Press MENU, then press

CH

AUDIO  
SETUP  
OPTION  
CONTRAST  
BRIGHTNESS  
COLOR  
TINT  
SHARPNESS  
SELECT  
ADJUST

2. Press

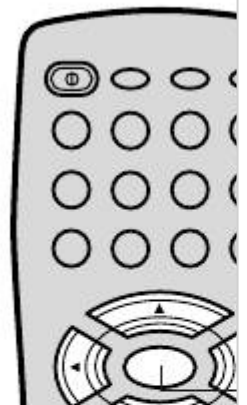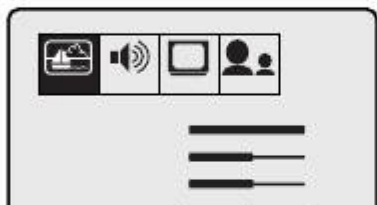

or  
until the item you want to adjust is highlighted.

3. Press

or  
to adjust the level.

Selection

contrast

lower

brightness

darker

color

paler

tint

reddish

sharpness

softer

4. Press EXIT to return to normal viewing.

## Watching video input

You can use the TV/VIDEO button on the remote control to view a signal coming from other devices, such as VCRs or video disc players that may be connected to your TV. (See "Connecting your TV" on page 7.)

## Selecting the ColorStream

You can use the ColorStream (component video) input for connecting either a DVD player or a DTV receiver.

1. Press MENU, then press  
the OPTION menu appears.

2. Press

or

to highlight  
COLORSTREAM.

3. Press

or

to highlight DVD or  
DTV, depending on which device is  
connected.

4. Press EXIT to return to normal viewing.

Note:

The factory setting is DVD.







## Displaying on-screen information

Press RECALL to display the following on-screen information:

- Clock
- Channel number or VIDEO mode selected
- Channel label (if preset)
- Stereo or SAP (second audio program) audio status
- Content rating

or

to display the PICTURE menu.

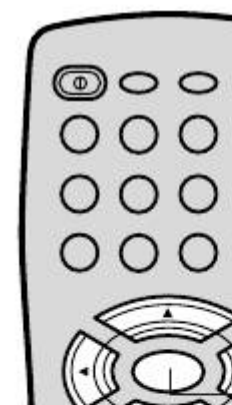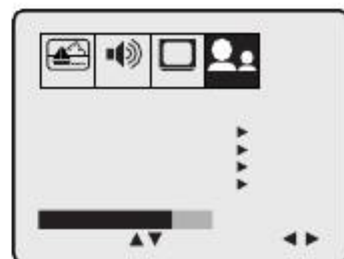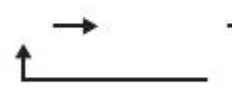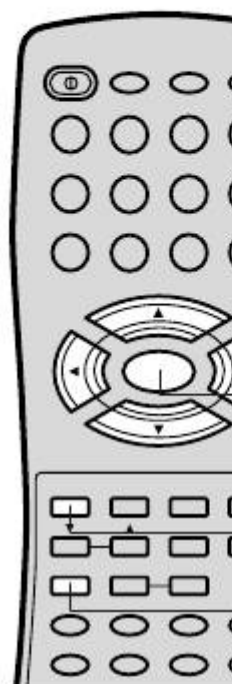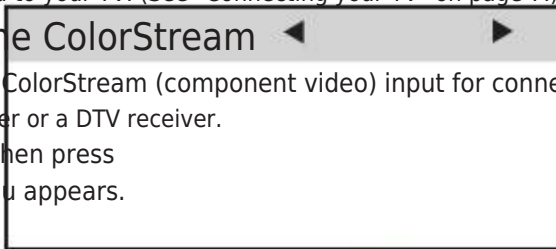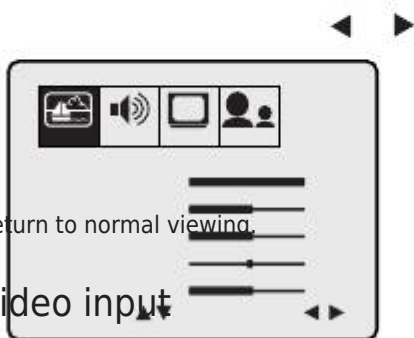

32  
32  
0  
32

Pressing  
higher  
lighter  
deeper  
greenish  
sharper

®  
mode

or  
until

CH  
PICTURE AUDIO  
SETUP  
LANGUAGE  
CH LABEL  
FAVORITE CH  
V-CHIP  
LOCK  
ON/OFF TIMER

SELECT  
8:30 AM  
STEREO  
SAP

POWER

1  
4  
7

VOL  
-  
EXIT  
VOL  
RESET CAP/TEXT  
DISPLAY  
DVD CLEAR  
CODE

Note:

To reset the picture adjustments to the factory settings, press RESET.

To select the input mode:

Press the TV/VIDEO button repeatedly to select the desired mode. The signal source you are connected to is displayed in light blue.

TV

ENGLISH  
START  
POWER  
START  
START  
START  
OFF

1

DVD  
DTV  
ADJUST

4

7

VOL  
-  
( TV )  
CABLE 007

ABCD

EXIT  
VOL  
RESET CAP/TEXT

 
 
 
 
MPAA

X




DISPLAY  
CODE

27

TV  
VCR  
CABLE  
DVD

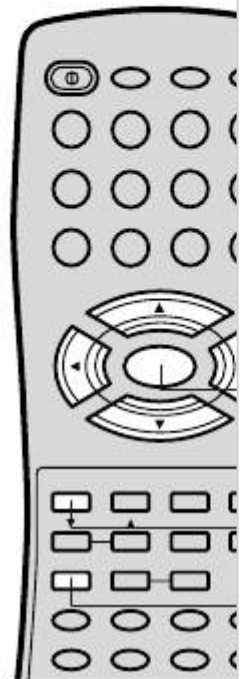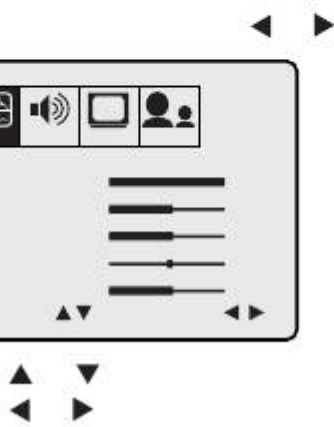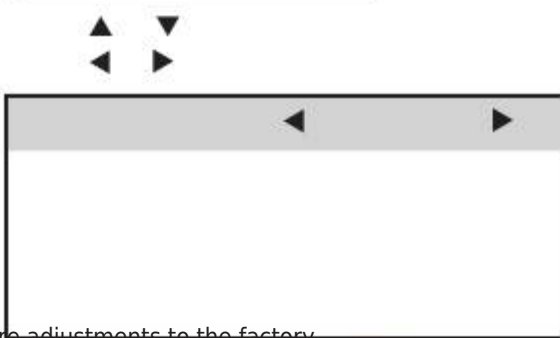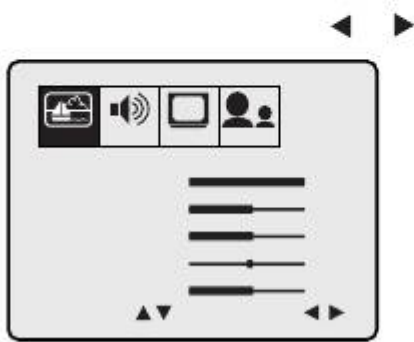

ManualsLib.com

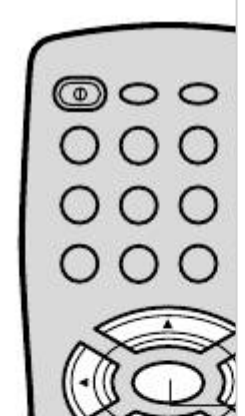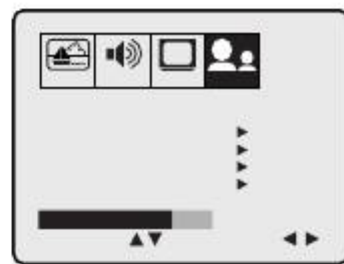   

2  
3  
+10  
5  
6  
100  
8  
9  
0

CH +  
VOL  
MENU/  
+

ENTER

Menu

CH -  
TV/VIDEO  
RECALL  
FAV  
CH RTN  
FAV

Exit

1/2  
TOP MENU  
DVD MENU

Reset

MTS  
SLEEP  
MUTE

VIDEO 1

VIDEO 2

VIDEO 3

COLOR

STREAM

TV

VCR

CABLE

DVD

2

3

+10

5

6

100

8

9

0

CH +  
VOL  
MENU/  
+

ENTER

Menu

CH -

TV/Video

RECALL

TV/VIDEO

FAV

CH RTN

FAV

Recall

1/2

DVD CLEAR

 
 
TOP MENU

DVD MENU

MTS

SLEEP

MUTE

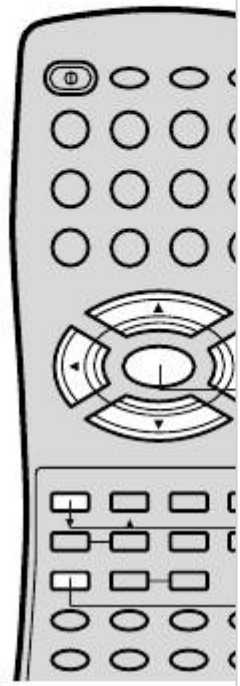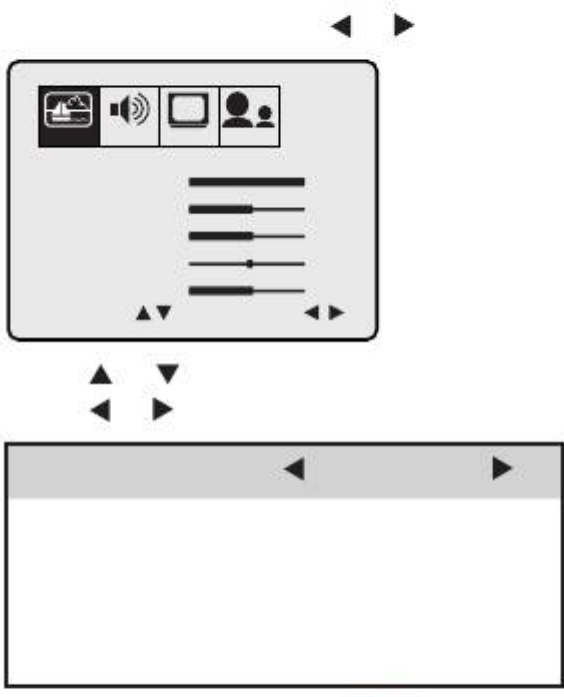

ManualsLib.com



Table of Contents

[Previous Page](#)  
[Next Page](#)

1  
...  
24  
25  
26  
27  
28  
29  
30  
31



Quick Links:

[Exploring Your New Tv](#)

[Connecting a DVD Player with Colorstream...](#)

[Watching Video Input](#)

[Adjusting the Picture Quality](#)

[Specifications](#)

## Chapters

[English](#) 5

[Français](#) 41

### Related Manuals for Toshiba 27A43

[Security Camera Toshiba 27a43 Service Manual](#)

(39 pages)

[TV Toshiba 27A41 Service Manual](#)

(36 pages)

[TV Toshiba 27A41 Service Manual](#)

(36 pages)

[TV Toshiba 27A45 Service Manual](#)

(52 pages)

[TV Toshiba 27a44 Specifications](#)

Brochure (2 pages)

[TV TOSHIBA 27A44 Owner's Manual](#)

Colorstream color television (36 pages)

[TV Toshiba TV 27A42 Owner's Manual](#)

Toshiba tv 27a42 user manual (64 pages)

[TV Toshiba ColorStream 27A42 Owner's Manual](#)

Color tv (32 pages)

[TV Toshiba 27A46C Owner's Manual](#)

Color television colorstream (64 pages)

[TV Toshiba 27A41C Service Manual](#)

(6 pages)

[TV Toshiba 27A41C Service Manual](#)

(6 pages)

[TV Toshiba 27A32 Service Manual](#)

(38 pages)

[TV Toshiba 27AF42 Owner's Manual](#)

Colorstream color television (40 pages)

[TV Toshiba ColorStream 27AF41 Owner's Manual](#)

(38 pages)

[TV Toshiba 27A14 Owner's Manual](#)

Toshiba owner's manual color television 27a14 (32 pages)

[TV Toshiba 27AF46C Owner's Manual](#)

Toshiba tv 27af46c owner's manual (64 pages)

## Related Content for Toshiba 27A43

[27AF42 Adjusting The Picture Quality](#)

Toshiba 27AF42

[COLORSTREAM 32HFX71 Adjusting The Picture Quality](#)

Toshiba COLORSTREAM 32HFX71

[COLORSTREAM 32A35 Adjusting The Picture Quality](#)

Toshiba COLORSTREAM 32A35

[COLOR STREAM 32A41 Adjusting The Picture Quality](#)

Toshiba COLOR STREAM 32A41

[ColorStream 32AFX61 Adjusting The Picture Quality](#)

Toshiba ColorStream 32AFX61

[34HF85 Adjusting The Picture Quality](#)

Toshiba 34HF85

[23HL85 Adjusting The Picture Quality](#)

Toshiba 23HL85

[43HX71 Adjusting The Picture Quality](#)

Toshiba 43HX71