



Toshiba SD-4200KU Owner's Manual

Sd-4200ku user's guide

1

2

3

4

5

Table Of Contents

6

7

8

9

10

11

12

13

 
14

15

16

17

18
19
20
21
22
23
24
25
26
27
28



•

•

Troubleshooting

•


Bookmarks

Quick Links

- [1 Region Codes](#)
- [2 Setup](#)
- [3 Connecting to Television](#)
- [4 Front and Rear Panels](#)
- [5 Remote Control](#)
- [6 Specifications](#)

7 Troubleshooting

[Download this manual](#)

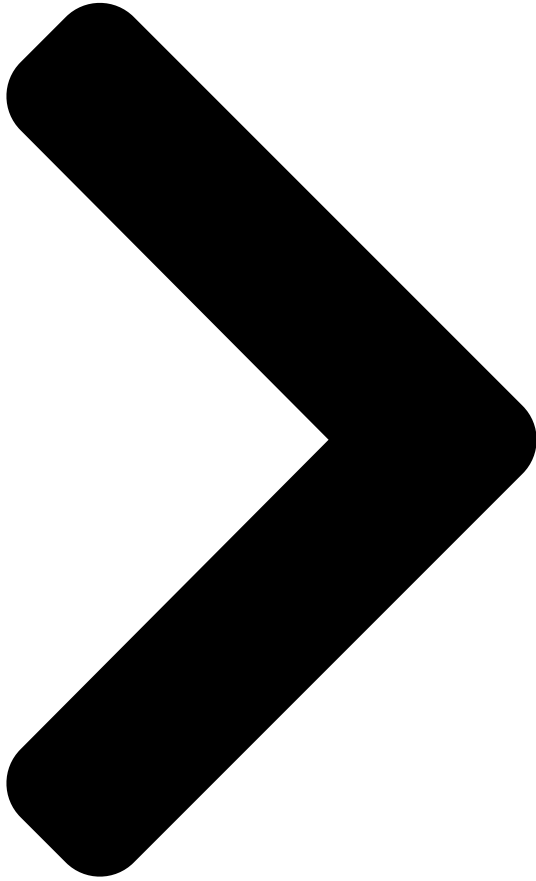

SD4200KU

TOSHIBA

SDK790KU

Owner's Record

The model number and serial number are on the back of your DVD Player. Record these numbers in the space below. Refer to these numbers whenever you



DVD PLAYER

communicate with your Toshiba dealer about this DVD
Player.

Model number:

Serial number:

TOSHIBA

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba SD-4200KU

[DVD Player Toshiba SD4200 Specifications](#)

Progressive scan dvd player (2 pages)

[DVD Player Toshiba SD-4205 Owner's Manual](#)

Toshiba dvd video player owner's manual sd-4205 (69 pages)

[DVD Player Toshiba SD4200KC Owner's Manual](#)

(28 pages)

[DVD Player Toshiba SD-4100KU2 Owner's Manual](#)

Sd-4100ku2 user's guide (28 pages)

[DVD Player Toshiba SD-4700 Owner's Manual](#)

Toshiba dvd video/audio player owner's manual sd-4700 (68 pages)

[DVD Player Toshiba SD-4980SU Owner's Manual](#)

Toshiba dvd video player owner's manual sd-4980su (68 pages)

[DVD Player Toshiba SD-4800N Owner's Manual](#)

Dvd video/audio player (70 pages)

[DVD Player Toshiba SD4300 Owner's Manual](#)

Sd4300 user's guide (28 pages)

[DVD Player Toshiba SD-480EKE Owner's Manual](#)

Dvd player (40 pages)

[DVD Player Toshiba SD-6000KU Owner's Manual](#)

(44 pages)

[DVD Player Toshiba sd-4800 Owner's Manual](#)

(70 pages)

[DVD Player Toshiba SD-4800 Service Manual](#)

Dvd video/audio player (176 pages)

[DVD Player Toshiba SD-K600 Owner's Manual](#)

(51 pages)

[DVD Player Toshiba SD-4109 Owner's Manual](#)

Dvd video player (48 pages)

[DVD Player Toshiba SD-4900 Owner's Manual](#)

Dvd video player (102 pages)

[DVD Player Toshiba SD4015KE Owner's Manual](#)

Toshib dvd player (28 pages)

Summary of Contents for Toshiba SD-4200KU

Page 1 The model number and serial number are on the back of your DVD Player. Record these numbers in the spaces below Refer to these numbers whenever you communicate with your Toshiba dealer about this DVD Player. Model number: Serial number:...

Page 2: Introduction

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. Changes or modifications made to this equipment, not expressly approved by Toshiba, or parties authorized by Toshiba, could void the user's authority to operate the equipment.

[Page 3](#) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety.

[Page 4: Setup](#)

Failure to follow this WARNING may result in death or serious injury. Refer all servicing not specified in this manual to a Toshiba Authorized Service Center. Setup Finding a suitable location -Place the set on a flat, hard and stable surface.

[Page 5](#) Region Discs that can U.S.A. and Canada regions U.K., Europe regions and Japan Asia Pacific, Taiwan, Korea Australia, New Zealand, Latin America Russia and India regions China, Calcos Islands, Walls and Futuna Islands This product incorporates copyright protection technology that is protected by method claims of certain U.S.

[Page 6: Table Of Contents](#)

Introduction Table of Contents Introduction SAFETY PRECAUTIONS IMPORTANT SAFETY INSTRUCTIONS Setup Cleaning discs Moisture Condensation Region Codes Table of Contents Connections Connecting to television Connecting to a Stereo System Connecting to a Digital AV Receiver Connecting the power cord Product Overview Front and Rear panels Remote Control Getting Started...

[Page 7: Connections](#)

Connecting to television IMPORTANT! - You only need to make one video connection from the following options, depending on the capabilities of your television. - Connect the DVD player directly to the television. Using Composite Video Jack(CVBS) Use the composite video cable (yellow) to connect the DVD player's VIDEO(CVBS) jack to the video input jack(or labeled as A/V in, Video In or Composite) on the TV(cable supplied).

[Page 8: Connecting To A Stereo System](#)

Connections MAINS Connecting to a Stereo System Stereo system has Dolby Pro Logic or Right/Left Audio In Jacks Select one of the video connections (CVBS VIDEO IN or COMPONENT VIDEO IN) depending on the options available on your TV. Use the audio cables (white/red) to connect AUDIO OUT (L/R) jacks of the DVD Player to the corresponding AUDIO IN jacks on the stereo system.

[Page 9: Connecting The Power Cord](#)

Connections Connecting the power cord After everything is connected properly, plug in the AC power cord to the power outlet. Never make or change any connections with the power switched on. Helpful hint: Before making or changing any connections, make sure that all the devices are disconnected from the power outlet.

[Page 10: Product Overview](#)

Product Overview Front and Rear panels Disc tray - Place a disc here OPEN/CLOSE ζ - Opens or closes the disc tray Display - Shows information about the current status of the DVD Player MAINS - Connects to a standard AC outlet AUDIO OUT (Left/Right) - Connects to Audio input of a TV, an amplifier, receiver or stereo system...

[Page 11: Remote Control](#)

Remote Control See the page in [] for details. DISPLAY [15] -Displays information on TV screen during playback OPEN/CLOSE [13] -Open/close the disc tray Number Buttons [13, 15, 19] - Selects numbered items in a menu -Press to enter track/chapter/title numbers or password directly +10 button...

[Page 12: Getting Started](#)

Getting Started Inserting Batteries Open the battery compartment. Insert two batteries type R03 or AAA, following the indications (+ / -) inside the compartment. Close the cover. CAUTION: Never throw batteries into a fire. Note: - Be sure to use AAA size batteries. - Dispose of batteries in a designated disposal area.

[Page 13: Setting The Language](#)

Getting Started/Playback from disc Press to highlight { Yes } and press OK to confirm. The reconfirmation menu will appear on the TV. Video Out Confirm again to use new setting 14 Seconds Press to highlight { Yes } and press OK to confirm. ...

[Page 14: Starting Disc Playback](#)

Because of problems and errors that can occur during the creation of DVD and CD software and/or the manufacture of DVD and CD discs, Toshiba cannot assure that this DVD player will successfully play every disc bearing the DVD and CD logos. If you...

[Page 15: Operations For Video Playback \(Dvd/Vcd/Svcd\)](#)

Stopping playback ybac During playback, press STOP The DVD player memorises the stopped point. Press PLAY/ PAUSE to resume playback from the location where you stopped playback. If you press STOP again, the DVD player will cancel the resume function. Tips: - Screen saver will start automatically if the disc playback is stopped for about 2 minutes.

[Page 16: Viewing The Disc Playback Information](#)

Playback Feature -Repeat Single (currently playing file) -Repeat All (current folder) -Off (cancel)
Tip: -For VCD2.0/SVCD discs, repeat playback is not possible if the PBC mode is turned on.
Repeating a section within a title/track You can repeat the playback of a specific segment within a title or track. To do this, you must mark the start and end of the segment you want.

[Page 17: Playing Mp3/Jpeg/Kodak Picture Cd](#)

Playing MP3/JPEG/ Kodak picture CD IMPORTANT! You have to turn on your TV and set to the correct Video In channel. (See page 11, ' Finding your viewing channel '). General Operation Load a disc. The disc reading time may exceed 30 seconds due to the complexity of the directory/file configuration.

[Page 18: Dvd Menu Options](#)

DVD Menu Options another automatically. See page 18 for JPEG Interval setting. Press PREV / NEXT to view the previous or next thumbnail screen. Zoom picture (JPEG) During playback, press ZOOM repeatedly to display the picture with different scales. ...

[Page 19: Using The Audio Setup Menu](#)

View Mode Use view mode to scale an image that fits to the TV screen's width and height. In ' Video ', press / to select { View Mode }, then press . { Fill } Fill the screen with decoded image. { Original } Display image as its original size.

[Page 20: Using The Rating Setup Menu](#)

DVD Menu Options Press / to select { Audio }, then press . Press / to select an item, then press to access. Example: { Night Mode } The options for the selected item appears. If the selection in the menu is greyed out, that means the feature is not available or not possible to change at the current state.

[Page 21: Using The Misc \(Miscellaneous\) Setup Menu](#)

Press OK again to list the parental level. { 1.Kid Safe } Suitable for children. { 2. G } General Audience; recommended as acceptable for viewers of all ages. { 3. PG } Parental Guidance suggested. { 4. PG-13 } Unsuitable for children under 13.

[Page 22: Specifications](#)

Specifications DVD Player/Outputs/Supplied Accessories DVD Player Power supply Power Consumption Net weight External disimensions Signal System Laser Frequency range Signal-to-noise ratio Audio dynamic range Harmonic distortion Wow and flutter Operating conditions Outputs Video output Component video output Audio output (COAXIAL DIGITAL) Audio output (ANALOG) Supplied Accessories Audio/Video cable...

[Page 23: Troubleshooting](#)

Do not open the DVD player as there is a risk of electric shock. If a fault occurs, first check the points listed below before taking the DVD player for repair. If you are unable to remedy a

problem by following these guides, consult your dealer or TOSHIBA for help. Problem...

[Page 24](#) Troubleshooting Problem Player does not respond to some operating commands during playback. DVD Player cannot read CDs /DVDs Menu items cannot be selected Unable to select Progressive Scan on/off Solution -Operations may not be permitted by the disc. Refer to the instructions of the disc jacket. -Use a commonly available cleaning CD/DVD to clean the lens before sending the DVD Player for repair.

[Page 25: Glossary](#)

Analog audio: An electrical signal that directly represents sound. In contrast, digital audio can also be an electrical signal, but is an indirect representation of sound. See also Digital audio.
Aspect ratio: The width of a TV screen relative to its height.

[Page 26: Limited United States Warranty](#)

Limited United States Warranty (6) This warranty does not cover product sold AS IS or WITH ALL FAULTS.

[Page 27: Canadian Warranty Information](#)

Canadian Warranty Information...

[Page 28](#) Canadian Warranty Information...

This manual is also suitable for:

[Sd-4200Sdk790ku](#)