

TOSHIBA

Toshiba SD-P101SKN Owner's Manual

Sd-p101skn user's guide

1	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
Table Of Contents	
14	
15	
16	
17	

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88

--

•

[Table of Contents](#)

•

Bookmarks

[Download this manual](#)

Quick Links



PORTABLE DVD PLAYER

SD-P101SKN

OWNER'S MANUAL

DIGITAL VIDEO
Owner's Record

The model number and serial number are on the bottom of your DVD player. Record these numbers in the spaces below. Refer to these numbers whenever you communicate with your Toshiba dealer about this DVD player.

Model number:
01_SD-P101SKN_ENG_01-54.indd 1
01_SD-P101SKN_ENG_01-54.indd 1
Serial number:

- Introduction
- Preparations
- Playback
- Function Settings
- Connections
- Others

PX1D00003690
N
2008/03/07 19:54:31
2008/03/07 19:54:31



ManualsLib.com



[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba SD-P101SKN

[Portable DVD Player Toshiba SD-P101S Specifications](#)

Toshiba portable dvd player product brochure (2 pages)

[Portable DVD Player Toshiba SD-P1000 Owner's Manual](#)

Sd-p1000 user's guide (59 pages)

[Portable DVD Player Toshiba SD-P1750SN Owner's Manual](#)

Sd-p1750sn user's guide (84 pages)

[Portable DVD Player Toshiba SD-P1500 Owner's Manual](#)

Toshiba dvd player sd-p1500 owner's manual (68 pages)

[Portable DVD Player Toshiba SD-P1500 Service Manual](#)

(11 pages)

[Portable DVD Player Toshiba SD-P1600 Owner's Manual](#)

Toshiba dvd player sd-p1600 owner's manual (72 pages)

[Portable DVD Player Toshiba SD-P1400 Owner's Manual](#)

Toshiba dvd player sd-p1400 owner's manual (72 pages)

[Portable DVD Player Toshiba sd-p1400 Owner's Manual](#)

(69 pages)

[Portable DVD Player Toshiba SD-P1850SN Owner's Manual](#)

Toshiba portable dvd player owner's manual sd-p1850sn (72 pages)

[Portable DVD Player Toshiba SD-P1850SN Service Manual](#)

Toshiba portable dvd player service manual (27 pages)

[Portable DVD Player Toshiba SD-P1900 Owner's Manual](#)

Sd-p1900 user's guide (84 pages)

[Portable DVD Player Toshiba SD-P1700SN Owner's Manual](#)

Sd-p1700sn user's guide (72 pages)

[Portable DVD Player Toshiba SD-P1700SN Service Manual](#)

(25 pages)

[Portable DVD Player Toshiba SD-P1800 Service Manual](#)

(23 pages)

[Portable DVD Player Toshiba SD-P1880SE Owner's Manual](#)

Toshiba portable dvd player user manual (72 pages)

[Portable DVD Player Toshiba SD-P1707SR Owner's Manual](#)

Toshiba portable dvd player user manual (76 pages)

Summary of Contents for Toshiba SD-P101SKN

[Page 1: Portable Dvd Player](#)

Owner's Record The model number and serial number are on the bottom of your DVD player. Record these numbers in the spaces below. Refer to these numbers whenever you communicate with your Toshiba dealer about this DVD player. Model number: 01_SD-P101SKN_ENG_01-54.indd 1...

[Page 2: Safety Precautions](#)

Toshiba is a proud sponsor of Call2Recycle™, a program of the Rechargeable Battery Recycling Corporation (RBRC). By placing RBRC's Battery Recycling Seals on the rechargeable batteries that power Toshiba cordless products, Toshiba is dedicated to preserving the environment. For

more information and for drop-off locations, visit www.rbrbc.org or call 800-8-BATTERY.

[Page 3](#) Shielded cables must be used between the external devices and the computer's external monitor port, Universal Serial Bus (USB 2.0) ports, Serial port and Microphone jack. Changes or modifications made to this equipment, not expressly approved by Toshiba, or parties authorized by Toshiba, could void the user's authority to operate the equipment.

[Page 4](#) SAFETY PRECAUTIONS Location of the required label 01_SD-P101SKN_ENG_01-54.indd 4 01_SD-P101SKN_ENG_01-54.indd 4 2008/03/07 19:54:32 2008/03/07 19:54:32...

[Page 5: Additional Safety Instructions](#)

ADDITIONAL SAFETY INSTRUCTIONS 1. Read these instructions. 2. Keep these instructions. 3. Heed all warnings. 4. Follow all instructions. 5. Do not use this apparatus near water. 6. Clean only with dry cloth. 7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifi...

[Page 6](#) ADDITIONAL SAFETY INSTRUCTIONS 13. When you use headphones, keep the volume at a moderate level. Using headphones continuously with high volume levels may permanently damage your hearing. 14. Do not overload wall outlets; extension cords, or integral convenience receptacles as this can result in a risk of fi...

[Page 7](#) Take the battery pack to an authorized Toshiba service provider. g) Keep the battery pack away from heat or fire. 2008/03/07 19:54:32...

[Page 8](#) ADDITIONAL SAFETY INSTRUCTIONS h) Never dispose of used battery packs with other ordinary solid wastes, since they contain toxic substances. Always dispose of used battery packs in accordance with community regulations that apply to the disposal of batteries. Cover the metal terminals with insulating tape, in order to prevent accidental short-circuiting.

[Page 9](#) e) Do not charge, heat, open, or short-circuit the batteries. Do not throw the batteries into a fire. f) Do not leave a dead or exhausted battery in the remote control. g) If you do not use the remote control for a long period of time, remove the battery to avoid possible damage from battery corrosion.

[Page 10](#) ADDITIONAL SAFETY INSTRUCTIONS d) This adapter is intended for exclusive use in automobiles/vehicles with a DC 12V negative ground electrical system. NEVER use this adapter with a DC 24V configured or a DC 12V positive ground electrical system automobile/vehicle. Consult your vehicle owner's manual before using this adapter.

[Page 11: Precautions](#)

Precautions Notes on handling Do not shock the LCD monitor. It may cause unit damage and malfunction. Do not use the player in a place subject to vibration. Neglecting this may cause malfunction of the player or damage to the disc. When transporting the player, the original shipping carton and packing materials come in handy.

[Page 12](#) Precautions (continued) Notes on moisture condensation Moisture condensation damages the player. Please read the following carefully. Moisture condensation occurs, for example, when you pour a cold drink into a glass on a warm day. Drops of water form on the outside of the glass. In the same way, moisture may condense on the optical pick-up lens inside this unit, one of the most crucial internal parts of the player.

[Page 13: Notes On Region Numbers](#)

About this owner's manual This owner's manual explains the basic instructions of this player. Some DVD video discs are produced in a manner that allows specific or limited operation during playback. As such, the player may not respond to all operating commands.

[Page 14: Table Of Contents](#)

Table of contents Introduction SAFETY PRECAUTIONS ... 2 ADDITIONAL SAFETY INSTRUCTIONS ... 5 Precautions ... 11 Identification of Controls ... 16 Accessories ... 19 Notes and Information ... 20 Playable discs ...20 Preparations Preparation of the remote control ... 26 Power connection ...

[Page 15](#) Changing the camera angle ... 46 Selecting subtitles ... 46 Selecting a playback

sound..47 Playing audio/video/picture files ... 48 Selecting the sound enhancement ... 52
Adjusting the picture ... 52 On-screen Display mode ... 53 Function Settings Customizing the
function settings ...

[Page 16: Identification Of Controls](#)

Identification of Controls Main Unit See page in for details. LCD monitor swivels 180 degrees
around. Speakers Remote sensor Disc cover OPEN button To open the disc cover Right side
POWER indicator 01_SD-P101SKN_ENG_01-54.indd 16 01_SD-P101SKN_ENG_01-54.indd 16
Instructions and actual buttons Most instructions are based on remote control operation, unless
otherwise noted.

[Page 17](#) Right side Volume control To adjust the volume Headphone jacks (× 2) To connect
headphones BITSTREAM/PCM jack Connect to Digital Out jack of your amplifier Left side Card
slot To insert a memory card to play Front Important • Magnets are incorporated inside the
player to lock the LCD when closed. To avoid troubles, keep magnetized objects (e.g.

[Page 18](#) Identification of Controls (continued) 01_SD-P101SKN_ENG_01-54.indd 18 01_SD-
P101SKN_ENG_01-54.indd 18 2008/03/07 19:54:34 2008/03/07 19:54:34...

[Page 19: Accessories](#)

Accessories Check that the following accessories are supplied. 01_SD-P101SKN_ENG_01-54.indd
19 01_SD-P101SKN_ENG_01-54.indd 19 2008/03/07 19:54:34 2008/03/07 19:54:34...

[Page 20: Notes And Information](#)

Notes and Information Playable discs This player can play the following discs. Disc Disc Mark
Disc Size DVD Video 12cm/8cm disc 12cm DVD-RW 12cm DVD-R 12cm/8cm Video CDs DIGITAL
VIDEO 12cm/ Audio CDs 8cm(CD single) 12cm CD-ROM 12cm CD-R/RW R e W r i t a b l e is a
trademark of DVD Format/Logo Licensing Corporation.

[Page 21](#) • Depending on the data recording method or the disc status, playback on this
player may not be possible, even if the disc is labeled as left. Toshiba cannot assure that all
discs bearing the DVD or CD logos will operate as expected.

[Page 22](#) Notes and Information (continued) On handling discs Do not touch the playback side
of the disc. Do not attach paper or tape to discs. On cleaning discs Fingerprints and dust on the
disc may cause picture and sound deterioration. Wipe the disc from the center outwards with a
soft cloth.

[Page 23](#) Saving data ® • It is recommended that you back up your memory card data.
Toshiba is not liable for any damage caused by the use of any memory card with this player.
Toshiba will not compensate for any lost data or recording(s) caused by the use of such cards.

[Page 24](#) Notes and Information (Continued) Notices for use Ensure that you insert the
memory card correctly into this player. Do not eject the memory card while it is in use. If
ejected while in use information on the memory card may be lost. This memory card is a
precision electrical instrument.

[Page 25: Preparations](#)

Preparations Preparations before using. ● Preparation of the remote control ● Power
connection ● Using the battery pack ● Powering on/off ● Changing the mode 01_SD-
P101SKN_ENG_01-54.indd 25 01_SD-P101SKN_ENG_01-54.indd 25 2008/03/07 19:54:36
2008/03/07 19:54:36...

[Page 26: Preparation Of The Remote Control](#)

Preparation of the remote control Insert the specified battery to the remote control. See page 8
, for safety use of coin-shaped batteries. Gently insert a fingernail in groove 1 and pull out the
holder in direction 2. Backside Take care not to break your fi...

[Page 27: Power Connection](#)

Power connection Connect the supplied AC adapter to wall outlet as below. To the DC IN 12V
jack Follow steps 1 to 3 to connect. When disconnecting, reverse this order. AC adapter Connect

the supplied AC adapter To wall outlet and the power cord firmly.

[Page 28: Using The Battery Pack](#)

Using the battery pack The supplied battery pack (lithium ion battery pack) can power the player for operation outdoors or in a place with no outlets. **WARNING** • Do not use a battery pack other than one specified as it can result in a fi...

[Page 29](#) **Important** • Detach the battery pack from the player after being used. It is possible to leave the battery pack attached while powering the player with the AC adapter. ■ **Charging the battery pack** The battery pack needs to be charged before use. (The battery indicator () is shown in the upper left corner of the screen when the power in the...

[Page 30](#) **Using the battery pack (continued)** ■ **Detaching the battery pack** Turn the player off. Disconnect the AC adapter and the power cord from the player. Turn the player upside down. While holding the lock switch, slide the battery pack in the direction of the arrow. Lock Switch Attach the connector cover on the bottom of the player.

[Page 31: Powering On/Off](#)

Powering on/off Slide the power switch to turn the power on or off. Power switch 01_SD-P101SKN_ENG_01-54.indd 31 01_SD-P101SKN_ENG_01-54.indd 31 Condition Power Switch POWER Charging indicator POWER indicator Green Orange 2008/03/07 19:54:37 2008/03/07 19:54:37...

[Page 32: Changing The Mode](#)

Changing the mode You can enjoy various contents of discs, memory cards and other external equipments by changing the mode. Change it depending on your needs. Press MODE repeatedly to select the mode. Each time you press MODE, the mode changes on the screen as below. Select when you want to view the picture of a disc on the LCD monitor of this player.

[Page 33: Playback](#)

Playback Play your favorite disc. ● Loading a disc ● Connecting to headphones ● Playing a disc ● Changing a playback speed ● Playing a desired scene ● Playing in random order ● Playing repeatedly ● Playing in a favorite order ●...

[Page 34: Loading A Disc](#)

Loading a disc For disc compatibility information, see page 20 . Open the LCD monitor. Press OPEN on the main unit. The disc cover opens. Before using the player for the first time, remove the protective sheet beneath the disc cover. Set a disc.

[Page 35: Connecting To Headphones](#)

CAUTION • Keep your fingers clear of the disc as it is spinning. Neglecting to may cause serious personal injury. • Be careful not to catch your fingers in the disc holder. • Do not use a cracked, deformed, or repaired disc. •...

[Page 36: Playing A Disc](#)

Playing a disc DVD-V ■ **Preparations** • Turn on the power of the player. • Place a disc to the player. Caution Never operate the player in a moving vehicle. Vibration may prevent proper playback of the player or cause damage to the disc.

[Page 37: Pausing Playback \(Still Mode\)](#)

This type of damage is not covered by your Toshiba Warranty. To avoid this, be sure to press the STOP button once the movie is completed. 01_SD-P101SKN_ENG_01-54.indd 37 01_SD-P101SKN_ENG_01-54.indd 37...

[Page 38](#) **Playing a disc (continued)** ■ **About the screen saver** If 20 minutes elapse while the power is on and there is no disc in the player or while the disc is stopped, the screen saver is automatically displayed (when "Screen saver" (refer to "Function Settings") is set to "On"...

[Page 39: Changing A Playback Speed](#)

Changing a playback speed Playing in fast reverse or fast forward DVD-V Press REV or FWD on

the remote control during playback. : Fast reverse playback : Fast forward playback Each time you press the REV or FWD button, the playback speed changes.

[Page 40: Playing A Desired Scene](#)

Playing a desired scene DVD-V Skipping chapters or tracks Press SKIP () repeatedly to locate the chapter or track you want. Playback starts from the selected chapter or track. : Playback starts from the beginning of the next chapter or track. : Playback starts from the beginning of the current chapter or track.

[Page 41: Marking The Desired Position To Locate \(Bookmark Function\)](#)

Notes • Press the CLEAR button while pressing the SHIFT button resets the numbers. • Some discs may not respond to this process. • Some scenes may not be located precisely as you specified. Marking the desired position to locate (Bookmark function) First register a bookmark referring to "To register a bookmark"...

[Page 42: Playing In Random Order](#)

Playing in random order DVD-V During playback, press RANDOM to display "Shuffle On" on the screen. Each time you press the button, the random mode "Shuffle On" and "Shuffle off" alternate. The mode on the screen will disappear in a few seconds if not operated.

[Page 43: Repeating A Title, Chapter Or Track](#)

Repeating a title, chapter or track During playback, press REPEAT repeatedly to select the repeat mode. Each time you press the button, the repeat mode changes on the screen. Repeat playback starts after finishing the current chapter or track. Disc Mode Repeating range...

[Page 44: Playing In A Favorite Order](#)

Playing in a favorite order DVD-V During stop, press MEMORY. The programming display appears. e.g. : DVD-V Enter a track number when Program Title 1 using a video CD. Title 2 Title 3 Title 4 Title 5 Title 6 Play Program Clear Clear All Setting the title, chapter or track in the...

[Page 45: Zooming A Picture](#)

Zooming a picture DVD-V Press ZOOM during playback. The zoom icon appears. This operation is available also during slow, still, fast forward or fast reverse playback. Select the zoom point and magnification level. • Magnification level: Press ZOOM repeatedly. The magnifi...

[Page 46: Changing The Camera Angle](#)

Changing the camera angle DVD-V Press ANGLE while playing a scene recorded with multiple camera angles. The angle icon () appears on the screen. e.g. Number of angles Angle icon Current angle This display does not appear if the disc includes no scenes recorded with multiple angles.

[Page 47: Selecting A Playback Sound](#)

Selecting a playback sound DVD-V Press AUDIO during playback. The current audio setting is displayed. e.g. D 2 ch Sound recording Audio language system Press AUDIO while the audio setting is displayed on the screen. Each time you press the button, you can select a preferred sound from those included on the DVD video disc.

[Page 48: Playing Audio/Video/Picture Files](#)

Use of CD-RW for ® MP3 files is not recommended. You must obtain any required permission from copyright owners to download or use copyrighted content. Toshiba cannot and does not grant such permission. ■ JPEG media compatibility with this player...

[Page 49](#) How to use a memory card Insert a memory card into the slot. Press MODE repeatedly until " (Memory card)" appears. Insert a media you want to play. The menu appears. e.g. /Track01.CDA Track01 Track02 Repeat Mode Track03 Track04 Track05 Track06 Music Playing Track07...

[Page 50](#) Playing audio/video/picture files (continued) ■ Playing repeatedly Select "Repeat" on the screen using during playback then press ENTER. Each time you press ENTER, the repeat mode changes. Off: Resume to normal playback. Single: Repeats current track. All: Repeats all

tracks in order. (Audio CD) Folder: Repeats current folder.

[Page 51](#) ■ Playing in a favorite order You can combine your favorite track/file and play in the order you determine. 1 Select "Edit mode" on the screen using then press ENTER. 2 Position the cursor using to the screen displayed track/file. 3 Select track/file...

[Page 52: Selecting The Sound Enhancement](#)

Selecting the sound enhancement DVD-V Press E.A.M.* The current sound enhancement setting appears. * E.A.M. = Enhanced Audio Mode Press E.A.M. repeatedly. • [3D Off] Normal sound. • [3D On] To obtain expansive virtual surround sound effects from just two speakers. Notes •...

[Page 53: On-Screen Display Mode](#)

Press to adjust the value. Brightness 0 (Darker) to 16 (Brighter) Contrast 0 (Lower) to 16 (Higher) Color 0 (Paler) to 16 (Deeper) Tint 0 (Red) to 16 (Green) Screen 4:3: The picture recorded on the DVD video disc will be played back in 4:3 picture format. 16:9: 4:3 format picture will be played back in 16:9 picture format.

[Page 54](#) 01_SD-P101SKN_ENG_01-54.indd 54 01_SD-P101SKN_ENG_01-54.indd 54
2008/03/07 19:54:41 2008/03/07 19:54:41...

[Page 55: Function Settings](#)

Function Settings You can change the default settings to customize performance to your preference. ● Customizing the function settings 01_SD-P101SKN_ENG_55-88.indd 55 01_SD-P101SKN_ENG_55-88.indd 55 2008/03/07 20:18:21 2008/03/07 20:18:21...

[Page 56: Customizing The Function Settings](#)

Customizing the function settings DVD-V You can change the default settings to customize performance to your preference. Press SETUP during stop. The setting menu appears. Press to select the icon of the setting (listed below) to change, then press Press to select the setting you want to change, then press ENTER.

[Page 57](#) Video Aspect Ratio DVD-V View Mode DVD-V Audio E.A.M. DVD-V D.R.C. DVD-V Digital Out DVD-V Rating Parental control DVD-V DVD-V Screen saver DVD-V Default Default DivX Registration 01_SD-P101SKN_ENG_55-88.indd 57 01_SD-P101SKN_ENG_55-88.indd 57
to select a picture size according to the aspect ratio of your TV, when connected to this player to monitor playback picture.

[Page 58](#) Customizing the function settings (continued) ■ Language OSD Menu DVD-V English: To view on-screen displays in English. Français: To view on-screen displays in French. Español: To view on-screen displays in Spanish Subtitle DVD-V English: To display subtitles in English. French: To display subtitles in French.

[Page 59: Divx Subtitle](#)

DivX subtitle Western European: To display subtitles in west European language. Central European: To display subtitles in Central European language. Cyrillic: To display subtitles in Slavonic Cyrillic language. Notes • Some DVD video discs may be set to display subtitles in a different language than you selected.

[Page 60](#) Customizing the function settings (continued) ■ Audio E.A.M. DVD-V Normal: Normal sound. To obtain expansive virtual surround sound effects from just two speakers. Note • Pressing the E.A.M. button on the remote control also allows you to achieve the same setup. D.R.C.

[Page 61](#) ■ Rating Parental control DVD-V DVD video discs equipped with the parental lock function are rated according to their content. The contents allowed by a parental lock level and the way a DVD video disc can be controlled may vary from disc to disc.

[Page 62](#) Customizing the function settings (continued) ■ To change your 5-digit security code 1 After selecting "Set password", press the 9 button five times then press ENTER. The 5-digit security code is cleared. 2 After selecting "Set password", press the number buttons to create a new 5-digit security code.

[Page 63: Connections](#)

Connections You can connect the player to a TV or audio system. ● Viewing on a connected TV ● Viewing pictures from connected video equipment ● Connecting to audio equipment ● Using the automobile/vehicle adapter or power port ● To turn the LCD monitor 01_SD-P101SKN_ENG_55-88.indd 63 01_SD-P101SKN_ENG_55-88.indd 63 2008/03/07 20:18:23...

[Page 64: Viewing On A Connected Tv](#)

Viewing on a connected TV You can connect a TV to this player to view playback picture on it. Connect a TV to the AV OUT jack of this player. To AV OUT Connection to To video input this jack Yellow (Video) disables the VIDEO IN...

[Page 65: Viewing Pictures From Connected Video Equipment](#)

Viewing pictures from connected video equipment You can use the LCD of this player to monitor pictures of connected video equipment. Connect video equipment to the AV IN jack of this player. To AV IN Yellow (Video) To video output Video equipment White (Left) To analog audio inputs...

[Page 66: Connecting To Audio Equipment](#)

Connecting to audio equipment You can enjoy high quality dynamic sounds by connecting the player to audio equipment. The connecting method depends on the types of audio input, digital or audio. Select the method according to the type of your equipment.

[Page 67: Connecting To An Audio System Equipped With Analog Audio Inputs](#)

CAUTION • When you are connecting (via the BITSTREAM/PCM jack) an AV decoder that does not have Dolby Digital, Digital Theater Systems (DTS) or MPEG2 decoding function, be sure to set "Digital Out" to "PCM" from the on-screen displays . Otherwise, high volume sound may damage your hearing as well as the speakers.

[Page 68: Using The Automobile/Vehicle Adapter Or Power Port](#)

Using the automobile/vehicle adapter or power port For use of the DVD player in a car, this adapter can power the DVD player from the cigarette lighter socket. WARNING • NEVER operate the DVD player or view a DVD Video while operating an automobile or other vehicle.

[Page 69](#) 1 Be sure to turn off the DVD player then remove the battery pack from the player. It will be in danger if the battery pack is not removed. 2 Turn on the vehicle engine so that the cigarette lighter socket or power port is powered. In some vehicles the cigarette lighter socket or power port is powered even when the vehicle's engine is not running.

[Page 70](#) Using the automobile/vehicle adapter or power port (continued) Notes • Do not force the adapter into an incompatible lighter socket or power port. • Avoid dropping the adapter or placing heavy objects on it. Never use the damaged adapter. • Do not pull the adapter power cord when removing it from a socket or power port.

[Page 71: To Turn The Lcd Monitor](#)

To turn the LCD monitor You can turn the LCD monitor 180 degrees. ■ To turn the LCD monitor 1 Put the player on a level place such as a desk. 2 Open up the LCD monitor vertically, 3 While holding the lower side of the player, turn the LCD monitor slowly 180 degrees to the direction of "TURN"...

[Page 72](#) 01_SD-P101SKN_ENG_55-88.indd 72 01_SD-P101SKN_ENG_55-88.indd 72 2008/03/07 20:18:24 2008/03/07 20:18:24...

[Page 73: Others](#)

Others Useful informations. ● Output sound conversion table ● Before calling service personnel ● Specifications ● Limited United States Warranty ● Limited Canadian Warranty 01_SD-P101SKN_ENG_55-88.indd 73 01_SD-P101SKN_ENG_55-88.indd 73 2008/03/07 20:18:24 2008/03/07 20:18:24...

[Page 74: Output Sound Conversion Table](#)

Output sound conversion table Sound recording system Discs BITSTREAM/PCM jack Dolby Digital Bitstream 48 kHz Linear 96 kHz PCM* video discs Bitstream MPEG1, MPEG2 Bitstream VIDEO CDs Bitstream MPEG1 Linear PCM 44.1 kHz AUDIO CDs Bitstream *PCM: down sampling PCM •...

[Page 75: Before Calling Service Personnel](#)

Before calling service personnel Check the following guide for the possible cause of a problem before contacting service. Symptom Cause No power. • The AC adapter or power plug is disconnected. • The battery pack has been removed. • Battery empty. The LCD turned off by •...

[Page 76](#) Before calling service personnel (continued) Symptom Cause The player does not start • No disc is inserted. playback. • An unplayable disc is inserted. • The disc is inserted upside down. • The disc is not inserted securely. • The disc is dirty. •...

[Page 77: Specifications](#)

Specifications ■ Player Power supply DC 12 V (Rated current : 2 A (Maximum: during battery pack charging)) 120 V AC, 60 Hz (with the supplied AC adapter) Mass approximately ?? kg External dimensions ?? x ?? x ?? mm (W/H/D) Signal system Standard NTSC Laser...

[Page 78](#) Specifications (continued) ■ Liquid crystal display Panel size 25.9 cm (10.2 inches diagonally measured) Projection system TN color transmission Driving system Amorphous silicon TFT active matrix Resolution 800 (H) x 480 (V) pixels (effective pixel rate : more than 99.99%) This model complies with the speci...

[Page 79: Limited United States Warranty](#)

Limited United States Warranty Digital Audio Video ("DAV") Product - Depot Repair Warranty Toshiba America Consumer Products, L.L.C. ("TACP") makes the following limited warranties to original consumers in the United States. THESE LIMITED WARRANTIES EXTEND TO THE ORIGINAL CONSUMER PURCHASER OR ANY PERSON RECEIVING THIS DAV PRODUCT AS A GIFT FROM THE ORIGINAL CONSUMER PURCHASER AND TO NO OTHER PURCHASER OR TRANSFEREE.

[Page 80](#) Read this owner's manual thoroughly before operating this DAV Product. Complete and mail the enclosed product registration card or register your DAV Product on-line at www.tacp.toshiba.com/ service as soon as possible. By registering your DAV Product you will enable TACP to bring you new products specifically designed to meet your needs and help us to contact you in the unlikely event a safety notifi...

[Page 81](#) Depot Warranty Repair Center specified by the TACP Consumer Solutions Center. For additional information, visit TACP's website: www.tacp.toshiba.com. ALL WARRANTIES IMPLIED BY THE LAW OF ANY STATE OF THE U.S.A., INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY LIMITED TO THE DURATION OF THE LIMITED WARRANTIES SET FORTH ABOVE.

[Page 82: Limited Canadian Warranty](#)

For Toshiba Brand DVD Players, DVD Recorders, DVD/VCR Combo Players and Portable DVD Players Toshiba of Canada Limited ("TCL") makes the following limited warranties to original consumers in Canada. THESE LIMITED WARRANTIES EXTEND TO THE ORIGINAL CONSUMER PURCHASER OR ANY PERSON RECEIVING THIS TOSHIBA BRAND DVD PLAYER, DVD RECORDER, DVD/VCR COMBO PLAYER OR PORTABLE DVD PLAYER (the "PLAYER(S)")...

[Page 83](#) TCL, and service made necessary by the use or installation of non-Toshiba modifications to the Player; h. Service of a Player on which the TOSHIBA label or logo, rating label or serial number have been defaced or removed;...

[Page 84](#) Limited Canadian Warranty For Toshiba Brand DVD Players, DVD Recorders, DVD/VCR Combo Players and Portable DVD Players (continued) Disclaimer and Limitation of Remedy TO THE EXTENT NOT PRECLUDED BY LAW, ALL OTHER EXPRESS AND IMPLIED WARRANTIES, CONDITIONS AND REPRESENTATIONS FOR THIS PLAYER, INCLUDING...

[Page 85](#) No person, agent, distributor, dealer or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. Arbitration and Dispute Resolution To the extent not precluded by law, any claim, dispute, controversy or disagreement

(whether for breach of warranty, breach of contract, tort (including negligence), under a statute or under any other law or form of action) against any of the Related Parties arising out of, or otherwise relating to: (i) this...

[Page 86](#) Limited Canadian Warranty For Toshiba Brand DVD Players, DVD Recorders, DVD/VCR Combo Players and Portable DVD Players (continued) General Provisions If and to the extent that any provision of this limited warranty should generally be found to be unenforceable, the unenforceable provision shall be severed from the warranty and deemed not to form part of the warranty.

[Page 87](#) 01_SD-P101SKN_ENG_55-88.indd 87 01_SD-P101SKN_ENG_55-88.indd 87
2008/03/07 20:18:26 2008/03/07 20:18:26...

[Page 88](#) © 2008 Toshiba Corporation 01_SD-P101SKN_ENG_55-88.indd 88 01_SD-P101SKN_ENG_55-88.indd 88 Printed in China 2008/03/07 20:18:26 2008/03/07 20:18:26...

This manual is also suitable for:

[Sd-p101s](#)