

Reverse Cycle Starting Control;
Outdoor Fan Control; Way Valve
Switching Control; Save Valve
Control - Sanyo SPW-CR363GVH8
Service Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

 
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168

169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218

219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



3. Reverse Cycle Starting Control

At the start of heating operation, the cooling cycle operates for 50 seconds. During this time, the outdoor and indoor fans are stopped.

Reverse-Cycle start conditions:

- (1) When starting heating operation after 60 minutes of stop operation
- (2) When starting heating operation for the first time after turning on the power
- (3) Reverse-cycle start control details

After 50 seconds of reverse-cycle (cooling) operation, the outdoor unit stops for 20 seconds, then starts normal operation.

Control sections

P/C compressor

AC compressor

4-way valve

Outdoor fan

- Low-pressure valve 1, 2, 3
- High-pressure valve
- Save valve
- Outdoor electronic control valve

4. Outdoor Fan Control

(1) Outdoor fan mode

Mode

Fan

3

H

2

M

1

L

0

STOP

(2) Initial control

For the first 30 seconds after operation starts, outdoor fans are controlled according to the outdoor temperature as shown below.

When the fans are started, they rotate at high speed for 12 seconds.

Cooling

Outdoor temperature

16

H (M)

0

H (M, L)

L (STOP)

* The outdoor fans rotate at the mode in the parentheses (

(3) The fan mode is then switched up or down according to the operating conditions.

5. 4-way Valve Switching Control

(1) In normal operation, the 4-way valve is off for cooling and on for heating.

(2) When the outdoor unit is stopped while in heating mode, 60 minutes elapse and the 4-way valve goes OFF. (Energy saving)

6. Save Valve Control

(1) The save valve is switched on according to the tables shown in Section 1. "Compressor Control."

(2) The save valve is on when the outdoor unit is stopped. (This is due to pressure balance.)

Operation of each control section when heating operation starts

Reverse-cycle operation time

50 seconds

Compressor capacity control

↑

OFF

STOP

Compressor capacity control

↑

↑	↑
—	—
—	—

Save valve control

480 pulses

Heating

Outdoor temperature

21

H (M · L · STOP)

16

H (M · L)

H (M)

) according to the operating capacity.

II - 7

Processes and Functions

Stop time

20 seconds

OFF

OFF

ON

H

ON

OFF

ON

0 pulses

SM830063

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

157

158

159

160

Quick Links:

[Specifications](#)

[Outdoor Unit](#)

Chapters

[Section 1](#) 4

[Section 2](#) 152

[Section 3](#) 167

[Section 4](#) 227

Troubleshooting

[Section 3 : Service Procedures](#) 168

[Check before and after troubleshooting](#) 169

[General troubleshooting flow chart: diagnosis and remedy](#) 172

Related Manuals for Sanyo SPW-CR363GVH8

[Air Conditioner Sanyo ECOi C0705DXHN8 Brochure & Specs](#)

2 and 3 pipe electric vrf systems (10 pages)

[Air Conditioner Sanyo MINI ECO-i SPW-CR365GXH56B Service Manual](#)

(252 pages)

[Air Conditioner Sanyo SPW-T253G56 Service Manual](#)

Split system air conditioner (71 pages)

[Air Conditioner Sanyo SPW-X253G56 Service Manual](#)

Split system (72 pages)

[Air Conditioner Sanyo SPW-D253G56 Service Manual](#)

Split system air conditioner (66 pages)

[Air Conditioner Sanyo SPW-CR365GXH56 Technical Data Manual](#)

Mini eco-i system (346 pages)

[Air Conditioner Sanyo Mini ECO-i SPW-ASR74GXH56\(A/B\) Installation Instructions Manual](#)

System air conditioner (49 pages)

[Air Conditioner Sanyo SPW-C1155DXHN8 Technical Data & Service Manual](#)

2-way eco-i multi system (242 pages)

[Air Conditioner Sanyo SPW-X253GH56 Service Manual](#)

Split system (105 pages)

[Air Conditioner Sanyo SPW-D253GH56 Service Manual](#)

Split system (108 pages)

[Air Conditioner Sanyo SPW-C0705DZH8 Technical Data Manual](#)

3-way eco-i multi system 5 series (703 pages)

[Air Conditioner Sanyo SPW-C483GYH8 Service Manual](#)

Eco multi system (235 pages)

[Air Conditioner Sanyo SPW-C256VH Technical Data & Service Manual](#)

4-way air discharge semi-concealed wall-mounted ceiling-mounted concealed-duct (517 pages)

[Air Conditioner Sanyo SPW-CR1503GDYH8 Technical Data & Service Manual](#)

W-eco multi system series (377 pages)

[Air Conditioner Sanyo SPW-FTR124EH56 Installation And Operation Manual](#)

Dc inverter air conditioner for refrigerant r410a (32 pages)

[Air Conditioner Sanyo Big PACi 18 Series Technical Data & Service Manual](#)

Big pack i dc inverter (275 pages)

Related Content for Sanyo SPW-CR363GVH8

[SAP-KMRV93GJH Using The Remote Control Unit](#)

Sanyo SAP-KMRV93GJH

[SAP-K71GJA-S Remote Control Unit Installation Position](#)

Sanyo SAP-K71GJA-S

[KMS0912 Using The Remote Control Unit](#)

Sanyo KMS0912

[Mini ECO-i SPW-ASR74GXH56\(A/B\) Please Read Before Starting](#)

Sanyo Mini ECO-i SPW-ASR74GXH56(A/B)

[SAP-K71GJHA Remote Control Unit Installation Position](#)

Sanyo SAP-K71GJHA

[MINI ECO-i XHX1252 Setting Of Unit Control Pcb](#)

Sanyo MINI ECO-i XHX1252

[STW-2 Series Room Temperature Control](#)

Sanyo STW-2 Series

[SI-10T3SDIA Series Remote Control](#)

Sanyo SI-10T3SDIA Series

This manual is also suitable for:

[Spw-cr483gvh8](#)[Spw-cr703gvh8](#)[Spw-cr903gvh8](#) [85401469](#)[Spw-cr363gv8](#)[Spw-cr483gv8](#)[Spw-cr703gv8](#) ... [Show all](#)