



Asus BW-16D1X-U Quick Installation Manual

External blu-ray writer

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

--

•

-

Troubleshooting

•

Bookmarks

--

Table of Contents

[1 Safety Information](#)

[2 Class 1 Laser Product](#)

[3 Asus Recycling/Takeback Services](#)

[4 Package Contents](#)

[5 Troubleshooting](#)

[Download this manual](#)



External Blu-ray Writer

ASUS[®]

IN SEARCH OF INCREDIBLE

Q

Quick Installation Guide

English



български

Česky

Dansk

Deutsch

Model / нормативная модель : BW-16D1X-U

V 1.5 Published August 2018

Copyright © 2018 ASUSTeK Computer Inc. All Rights Reserved.

15060-34450500

Ελληνικά

Italiano

Español



Eesti

Қазақ

Suomi

Lietuvių

Français

Latviski

Magyar

Bahasa Malaysia

Bahasa Indonesia

Nederlands

Turbo Drive

External 16X Blu-ray Writer

In 35 Languages

Norsk

Polski

Português

Română

Русский

Slovensky

Slovenščina

BW-16D1X-U

Svenska

□□□

Türkçe

(Kurulum Kılavuzu)

Tiếng Việt

Українська

عربي

فارسی



[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Asus BW-16D1X-U

[Blu-ray Drive Asus BW-16D1X-U Quick Installation Manual](#)

External 16x blu-ray writer (36 pages)

[DC Drives Asus SDRW-08D2S-U Quick Installation Manual](#)

Optical drive (28 pages)

[Storage Asus SDRW-08D2S-U Quick Installation Manual](#)

(10 pages)

[Blu-ray Drive Asus BW-14D1XT Datasheet](#)

Optical disc drive internal blu-ray writer (2 pages)

[Blu-ray Drive Asus TurboDrive BW-16D1H-U PRO Quick Installation Manual](#)

External 16x blu-ray writer external blu-ray writer (22 pages)

[Blu-ray Drive Asus BW-12D1S-U Quick Installation Manual](#)

External blu-ray writer (21 pages)

[Blu-ray Drive Asus Turbo Drive BW-16D1H-U Quick Installation Manual](#)

External blu-ray writer (21 pages)

[Blu-ray Drive Asus SBC-06D2X-U Quick Installation Manual](#)

External slim (21 pages)

[Blu-ray Drive Asus SDRW-08U7M-U Quick Installation Manual](#)

External slim dvd-writer (19 pages)

[Blu-ray Drive Asus SBW-06D5H-U Quick Installation Manual](#)

External slim blu-ray drive (21 pages)

[Blu-ray Drive Asus SDRW-08U5S-U Quick Installation Manual](#)

External slim dvd-writer (21 pages)

[Blu-ray Drive Asus SDRW-S1 Quick Start Manual](#)

External usb dvd / blu-ray writer with sound card (124 pages)

Summary of Contents for Asus BW-16D1X-U

Page 1 Tiếng Việt Česky Français Latviski Русский Українська عربي Dansk Magyar Bahasa Malaysia Slovensky فارسی Deutsch Bahasa Indonesia Nederlands Slovenščina Model / нормативная модель : BW-16D1X-U V 1.5 Published August 2018 Copyright © 2018 ASUSTeK Computer Inc. All Rights Reserved. 15060-34450500...

[Page 2: Safety Information](#)

• Before moving or uninstalling the drive, remove any disc in it. If you require assistance please call ASUS Customer Service 1300 2787 88 or visit us at • Prevent liquids or any metal from getting into the device, If this situation occurs, contact your <http://support.asus.com>.

[Page 3: Asus Recycling/Takeback Services](#)

ASUS Recycling / Takeback Services ASUS recycling and takeback programs come from our commitment to the highest standards for protecting our environment. We believe in providing solutions for our customers to be able to responsibly recycle our products, batteries and other components as well as the packaging...

[Page 4: Package Contents](#)

(Intel above is recommended) • Use HDCP compatible display and VGA card to get High

Definition digital output. ASUS BW-16D1X-U NOTES • Refer to CyberLink website <http://www.cyberlink.com> for more details. • Specifications are subject to change without notice.

Page 5 Inserting a disc that contains files • A disc icon appears on the desktop when you insert a disc. • To eject the disc, right-click the disc icon, then select Eject [Disc Name]. The Eject button does not work on Mac OS. Burning files 1.

Page 6 Подключение оптического привода к Свържете оптичното устройство с компютъра. компютеру. 1. Свържете единия край на включения в Connect the optical drive to your computer. 1. Подключите один конец поставляемого в комплекте USB 3.0 кабел с Вашия компютър. комплекте кабеля USB 3.0 к компьютеру. 2.

Page 7 Az optikai meghajtót csatlakoztassa a Menyambungkan optical drive pada komputer.
Conectarea drive-ului optic la computerul dvs. Pripojte optický mechaniku ku svojmu počítaču.
számítógéphez. 1. Sambungkan salah satu konektor kabel USB 3.0 1. Conectați un capăt al
cablului USB 3.0 inclus în 1.

[Page 8](#) 1. USB 3.0 USB3.0 2. : USB 3.0 USB3.0 USB 2.0 : USB 3.0 USB 3.0 • USB 3.0 USB ...

Page 9 устройствата). ® Windows 10 / 8.1 / 8 Click and then click 10 / 8.1 / 8 Диспетчер устройств. ASUS BW-16D1X-U Device Manager. ® Windows Щракнете върху + X, след което щракнете В Диспетчере устройств нажмете рядом с приводами 10 / 8.1 / 8 върху...

Page 10 Varmista, että järjestelmäsi havaitsee ulkoisen Σιγουρευτείτε ότι το σύστημά σας μπορεί να ανιχνεύσει Pastikan bahawa sistem anda mengesan pemacu Kontroller at systemet oppdager den eksterne optiske optisen aseman. την εξωτερική οπτική μονάδα. optik luaran. stasjonjen. Optisen aseman tunnistamisen tarkistus Για να ελέγξετε αν η μονάδα οπτικού δίσκου έχει εντοπιστεί Untuk memeriksa sama ada pemacu optik dikesan Slik kan du sjekke om den optiske stasjonjen er registrert laitehallinnalla:...

Page 11 Prepričajte se, da je vaš operacijski sistem zaznal Se till att ditt system upptäcker den externa optiska zunanji optični gonilnik. enheten. Če želite preveriti ali je optični pogon zaznan, För att kontrollera att den optiska enheten hittas använd uporabite Device Manager (Upravitelj naprav): Enhetshanteraren: ® ...

Page 12 Safely Remove the External Optical Drive. The external optical drive supports Plug & Play. To safely remove the drive: A. From the taskbar of your computer, click the Safely Remove Hardware icon (). B. On the pop-up message, click Safely Remove Hardware and Eject Media. C.

Page 13 Безопасное извлечение внешнего оптического Αφαιρέστε με ασφάλεια την εξωτερική οπτική Безопасно премахване на външно оптично Poista ulkoinen optinen asema. привода. μονάδα. устройство Ulkoinen optinen asema tukee Plug & Play Внешний оптический привод поддерживает Plug Външното оптично устройство поддържа Plug & H...

Page 14 Trygg fjerning av den eksterne optiske stasjonen. Varno odstranite zunanji optični gonilnik. Ta bort den externa optiska enheten på ett säkert Tanggalkan Pemacu Optik Luanr Dengan Selamat. Den eksterne optiske stasjonen støtter Plug & Play. Zunanji optični gonilnik podpira funkcijo »vstavi in sätt.

Page 15: Troubleshooting

0000000000 000000000000000000 000000000000 00000000000 00000000000000000000000000
 0000 00000000000000000000000000 A. 00000000000000000000 00 A. 00000000000000000000000000
 00000 B. 0000000000“000000000000”“0 0000000000“USB 0000000000 000000) 0000000000 00000“000
 0000000000 B. 00000000000000 { 0000000000000000 00 : 0000000000000000 LED 000000 00000000 USB
 3.0 0000 0000000000 } 0000000000 000000000000000000 { 0000000000000000 00000000000000 } 00000000
 00000000...

Page 16 ASUS Teknisk Hjælp. 3. Turn on your computer. společnosti ASUS. NOTE For more

technical service, contact your retailer or the ASUS Technical Support. Probleemoplossing
Törkeotsing Volg de onderstaande stappen als uw computer Kui arvuti ei suuda välist optilist
seadet tuvastada, het externe optische station niet kan detecteren.

[Page 17](#) PASTABA: Jei reikia daugiau techninės pagalbos, OPOMBA: Za izdatnejšo tehnično
podporo återförsäljare eller ASUS tekniska support. ar jūsu izplatītāju vai ar ASUS tehnisko
atbalstu. susisieki su pardavėju arba ASUS techniniu kontaktirajte vašega prodajalca ali ASUS
tehnično aptarnavimu. podpora. Menyelesaikan masalah Feilsøking...

[Page 18](#) Қосымша техникалық қызмет алу LƯU Ý: Để được hỗ trợ thêm về dịch vụ kỹ thuật,
hãy үшін сатушыға немесе ASUS компаниясының liên hệ với cửa hàng bán sản phẩm hoặc Bộ
phận hỗ техникалық қолдау қызметіне хабарласыңыз. trợ kỹ thuật của ASUS.

[Page 19](#) Turbo Drive Ex tern a l 16X B l u- R ay Wr i ter BW-16D1X-U...