



Asus Eee PC 1015B User Manual

Windows 7 edition

1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66

--	--

•

[Table of Contents](#)

•

Bookmarks

--

Quick Links

[1 Table of Contents](#)

[2 Charging Your Batteries](#)

[3 Top Side](#)

[4 Powering on Your Eee Pc](#)

[Download this manual](#)

See also: [Manual Del Usuario](#)



E6250

Eee PC

User Manual



Windows

7 Edition

Eee PC

1011/1015/R051/

R011 Series

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Asus Eee PC 1015B

[Laptop Asus 1015PX-MU17-RD Manual Del Usuario](#)

Windows 7 edition (66 pages)

[Laptop Asus Eee PC 1011CX User Manual](#)

R011 series (66 pages)

[Laptop Asus 1015PEM-PU17-BK User Manual](#)

Window 7 edition (61 pages)

[Laptop Asus Eee PC 1015 Series User Manual](#)

(58 pages)

[Netbook Asus 1015PN-PU27-BK Specifications](#)

10.1" netbook with big multimedia capabilities (2 pages)

[Laptop Asus Eee PC 1016P User Manual](#)

Windows 7 edition (62 pages)

[Laptop Asus 1018P-PU17-BK User Manual](#)

Windows 7 edition (64 pages)

[Laptop Asus 1011CX-MU27-BK Brochure & Specs](#)

Brochure (2 pages)

[Laptop Asus 1015E E-Manual](#)

(98 pages)

[Laptop Asus Eee PC 1000HA Linux Manual](#)

(44 pages)

[Laptop Asus Eee PC 1000 Series User Manual](#)

Windows xp edition (44 pages)

[Laptop Asus Eee PC 900 XP Quick Use Manual](#)

User manual (15 pages)

[Laptop Asus Eee PC 1002HA XP User Manual](#)

Windows xp edition (58 pages)

[Laptop Asus 1025C-MU17-PK User Manual](#)

Windows 7 edition (60 pages)

[Laptop Asus Eee PC X101CH User Manual](#)

Windows 7 edition (60 pages)

[Laptop Asus Eee PC 1002HA Linux User Manual](#)

User manual (80 pages)

Summary of Contents for Asus Eee PC 1015B

[Page 1](#) E6250 Eee PC User Manual ® Windows 7 Edition Eee PC 1011/1015/R051/ R011 Series...

[Page 2: Table Of Contents](#)

Configuring a wireless network connection...2-6 Local Area Network ...2-7 Browsing web pages ...2-10 Chapter 3: ASUS Update ...3-2 Updating the BIOS through the Internet ...3-2 Updating the BIOS through a BIOS file ...3-3 Bluetooth Connection (on selected models) ...3-4 Super Hybrid Engine ...3-6 Super Hybrid Engine Modes...3-6...

[Page 3](#) Graphic Switch (for 1015PN only)...3-9 OS Switch (on selected models)...3-9

[Page 4: About This User's Manual](#)

About This User's Manual You are reading the Eee PC User's Manual. This User's Manual provides information regarding the various components in the Eee PC and how to use them. The following are major sections of this User's Manual: Knowing the Parts Provides information on the Eee PC's components.

[Page 5: Safety Precautions](#)

ASUS Eee PC DO NOT place or drop objects on top and do not shove any foreign objects into the Eee DO NOT expose to strong magnetic or electrical fields.

[Page 6: Transportation Precautions](#)

SAFE TEMP: This Eee PC should only be used in environments with ambient temperatures between 5°C (41°F) and 35°C (95°F). DO NOT carry or cover a Eee PC that is powered ON with any materials that will reduce air circulation such as a carrying bag.

[Page 7: Charging Your Batteries](#)

You can send your Eee PC and diskettes through airport X-ray machines. However, it is recommended that you do not send your Eee PC or diskettes through airport magnetic detectors or expose them to magnetic wands. ASUS Eee PC...

[Page 8](#) viii Table of Contents...

[Page 9: Chapter 1: Knowing The Parts](#)

Top Side Bottom Side Front Side Right Side Left Side Keyboard Usage Touchpad Usage Chapter 1: Knowing the Parts...

[Page 10: Top Side](#)

Top Side Refer to the diagram below to identify the components on this side of the Eee PC. The top side may vary in appearance depending on models. Eee PC 1015P / 1015PE / 1015PED / 1015PD / 1015PEM / 1015PW / 1015T / 1015PN / 1015B / R051PEM Chapter 1: Knowing the Parts...

[Page 11](#) The camera cover switch allows you to open and close the protective camera cover. Slide the switch to the left to close the camera cover. Slide the switch to the right to open the camera cover. Microphone (Built-in) ASUS Eee PC...

[Page 12](#) (on selected models) When the Eee PC is turned off, pressing this button will launch Express Gate. Express Gate is an ASUS exclusive OS that provides you with quick access to the Internet and key applications without entering the Windows® OS.

[Page 13](#) Wireless/Bluetooth Indicator This is only applicable on models with built-in wireless LAN/ Bluetooth (on selected models). When the built-in wireless LAN/Bluetooth is enabled, this indicator lights. ASUS Eee PC With Adapter Without Adapter Green ON Orange ON...

[Page 14: Bottom Side](#)

Bottom Side Refer to the diagram below to identify the components on this side of the Eee PC. The bottom side may vary in appearance depending on model. Eee PC 1015P / 1015PE / 1015PED / 1015PD / 1015PEM / 1015PW / 1015PX / 1011PX / R011PX / R051PX / R051PEM Eee PC 1015PN / 1015T / 1015B Chapter 1: Knowing the Parts...

[Page 15: Front Side](#)

Memory Compartment The memory module is secured in a dedicated compartment. Front Side Refer to the diagram below to identify the components on this side of the Eee PC. Audio Speaker System Audio features are software controlled. ASUS Eee PC...

[Page 16: Right Side](#)

Right Side Refer to the diagram below to identify the components on this side of the Eee PC.
Eee PC 1015P / 1015PE / 1015PED / 1015PD / 1015PEM / 1015PN / 1015T / 1015PW / R051PEM
Memory Card Slot The built-in memory card reader can read SD/SDHC/MMC cards.

[Page 17](#) Eee PC 1015B Memory Card Slot Headphone Output Jack Microphone Jack USB Port (2.0/1.1) USB Port (3.0, on selected models/2.0/1.1) Kensington® Lock port LAN Port Eee PC 1015PX / 1011PX / R011PX / R051PX Memory Card Slot / Headphone Output / Microphone Input Combo Jack This combo jack can be used to connect the Eee PC's audio out...

[Page 18: Left Side](#)

Left Side Refer to the diagram below to identify the components on this side of the Eee PC. Eee PC 1015P / 1015PE / 1015PED / 1015PD / 1015PEM / 1015PW / 1015PX / 1011PX / R011PX / R051PX / R051PEM Eee PC 1015PN / 1015T / 1015B Power (DC) Input The supplied power adapter converts AC power to DC power...

[Page 19](#) Ensure that paper, books, clothing, cables, or other objects do not block any of the air vents or else overheating may occur. HDMI HDMI Port For Eee PC 1015PN, the HDMI function will be disabled when using the integrated graphics card. ASUS Eee PC 1-11...

[Page 20: Keyboard Usage](#)

Keyboard Usage Special Function Keys The following defines the colored hot keys on the Eee PC's keyboard. The colored commands can only be accessed by first pressing and holding the function key while pressing a key with a colored command. Some function icons appear in the Notification area after activation.

[Page 21](#) Menu with pointer icon : Activates the properties menu and is equivalent to right-clicking the touchpad/mouse on an object. ASUS Eee PC): Press to scroll up in documents or the web): Press to scroll down in documents or the web...

[Page 22: Touchpad Usage](#)

Touchpad Usage Clicking/Tapping - With the pointer over an item, press the left button or use your fingertip to touch the touchpad lightly, keeping your finger on the touchpad until the item is selected. The selected item will change color. The following 2 illustrations produce the same results. Double-clicking/Double-tapping - This is a common skill for launching a program directly from the corresponding icon you select.

[Page 23](#) Scrolling - Use two fingertips to slide up/down on the touchpad to scroll a window up/down. If your display window includes several sub-windows, move the pointer on that pane before scrolling. ASUS Eee PC 1-15...

[Page 24](#) 1-16 Chapter 1: Knowing the Parts...

[Page 25: Chapter 2: Getting Started](#)

Powering on your Eee PC First-time Startup Desktop Network Connection Chapter 2: Getting Started...

[Page 26: Powering On Your Eee Pc](#)

Powering on your Eee PC These are only quick instructions for using your Eee PC. Install the battery pack Turn ON the Eee PC • When you open the display panel, do not force it down to the table or else the hinges may break! Never lift the Eee PC by the display panel! •...

[Page 27: First-Time Startup](#)

Click Next to continue. Type your user account name and your computer's name, then click Next to continue. ASUS Eee PC Select your system settings by specifying the region you are in, the time zone you are in, and the keyboard type you use.

[Page 28](#) Read the end user license agreement and check the two boxes before I accept the license terms. Click Next to continue. Specify the time zone you are in and the local date and time. Click Next to continue. Click Use recommended settings to get the latest important

updates.

[Page 29: Desktop](#)

There are several shortcuts on the desktop. Double-click them to launch the corresponding applications and enter the specified folders. Some applications would form minimized icons in the Notification area. The actual Desktop screen may vary according to different models. ASUS Eee PC 10. The initialization is finished.

[Page 30: Network Connection](#)

Network Connection Configuring a wireless network connection Click the wireless network icon with an orange star Windows® Notification area. If the wireless network icon with an orange star does not show in the Notification area, activate the wireless LAN function by pressing connection.

[Page 31: Local Area Network](#)

Click the network icon with a yellow warning triangle Windows® Notification area and select Open Network and Sharing Center. Click Change adapter settings in the left blue pane. Right-click Local Area Connection and select Properties. ASUS Eee PC in the...

[Page 32](#) Click Internet Protocol version 4(TCP/IPv4) and click Properties. (Continue the following steps if using PPPoE) Return to the Network and Sharing Center and then click Set up a new connection or network. Click Obtain an IP address automatically and click OK. Chapter 2: Getting Started...

[Page 33](#) Password, and Connection name. Click Connect. 11. Click the network icon in the taskbar and click the connection you just created. ASUS Eee PC Select Broadband (PPPoE) and click Next. 10. Click Close to finish the configuration. 12. Enter your user name and password.

[Page 34: Browsing Web Pages](#)

Browsing web pages After you finish the network setup, click Internet Explorer on the desktop and start enjoying net surfing. Visit our Eee PC homepage (<http://eeepc.asus.com>) to obtain the latest information and register at <http://vip.asus.com> for full service of your Eee PC.

[Page 35: Chapter 3: Using The Eee Pc](#)

ASUS Update Bluetooth Connection (on selected models) Super Hybrid Engine Eee Docking Boingo (on selected models) Graphic Switch (for 1015PN only) OS Switch (on selected models) Microsoft® Office Starter 2010 Chapter 3: Using the Eee PC...

[Page 36: Asus Update](#)

ASUS Update The ASUS Update is a utility that allows you to manage, save, and update the Eee PC BIOS in Windows® environment. The ASUS Update utility allows you to: • Save the current BIOS file • Download the latest BIOS file from the Internet •...

[Page 37: Updating The Bios Through A Bios File](#)

BIOS version and click Next. Follow the screen instructions to complete the update process. The ASUS Update utility is capable of updating itself through the Internet. Always update the utility to avail all its features. Updating the BIOS through a BIOS file...

[Page 38: Bluetooth Connection \(On Selected Models\)](#)

Bluetooth Connection (on selected models) This device contains FCC ID: MSQ15PNNE047 / MSQE15NE785 / MSQE15NE762 and IC ID: 3568A-15PNNE047 / 3568A-E15NE762. Bluetooth technology eliminates the need for cables for connecting Bluetooth-enabled devices. Examples of Bluetooth-enabled devices may be Notebook PCs, Desktop PCs, mobile phones, and PDAs. To connect to a Bluetooth-enabled device: Press <Fn>...

[Page 39](#) Click Add a device to look for new devices. Enter the Bluetooth security code into your device and start pairing. ASUS Eee PC Select a Bluetooth-enabled device from the list and click Next. The paired relationship is successfully built. Click Close...

[Page 40: Super Hybrid Engine](#)

Super Hybrid Engine Super Hybrid Engine offers different power modes. The assigned instant key toggles power savings between various power saving modes. The power saving modes control many aspects of your Eee PC to maximize performance versus battery time. Applying or removing the power adapter will automatically switch the system between AC mode and battery mode.

[Page 41: Eee Docking](#)

Eee PC users can enjoy free online space. With Internet connection, you can access and share any files whenever you want and wherever you are. The ASUS WebStorage help file is accessible only when your Eee PC connects to the Internet.

[Page 42: Sharing](#)

Sharing YouCam / E-Cam (on selected models) YouCam / E-Cam provides interesting effects and useful add-ons for your webcam. Syncables The syncables desktop application makes it easier than ever to keep all your photos, music, videos, documents, bookmarks, and more in sync and up to date across all your computers.

[Page 43: Graphic Switch \(For 1015Pn Only\)](#)

Graphic Switch (for 1015PN only) The ASUS Graphic Switch utility allows you to switch the graphics card of your Eee PC between the integrated and ION graphics cards. Double-click the Graphic Switch icon on your Windows desktop to launch the utility.

[Page 44: Microsoft® Office Starter 2010](#)

Microsoft Eee PC users can enjoy Microsoft Office Starter 2010 that includes Word Starter 2010 and Excel Starter 2010 for basic word processing and spreadsheets. Do the following instructions for Office Starter 2010 first-time start-up. Click Start > All Programs > Microsoft Office 2010.

[Page 45](#) To use other Microsoft Office Starter 2010 programs in the future, click Start > All Programs > Microsoft Office Starter to select a desired program. • To activate or purchase a complete version of Microsoft Office 2010, click Start > All Programs > Microsoft Office 2010. ASUS Eee PC 3-11...

[Page 46](#) 3-12 Chapter 3: Using the Eee PC...

[Page 47: Chapter 4: System Recovery](#)

System Recovery Boot Booster Chapter 4: System Recovery...

[Page 48](#) System Recovery Disable Boot Booster in BIOS setup before you perform system recovery from USB flash disk, external optical drive or hidden partition. Ensure to connect your Eee PC to the AC power adapter before using F9 recovery to avoid recovery failure. Using recovery partition (F9 Recovery) Press <F9>...

[Page 49](#) Back to backup your important data. You will lose all your data on the selected USB storage device. Ensure to back up your important data beforehand The system backup starts and click OK when done. ASUS Eee PC...

[Page 50](#) "C" and a data partition as drive "D". Follow the onscreen instructions to complete the recovery process. Please select boot device: HDD:SM-ASUS-PHISON SSD USB:XXXXXXXXX ↑ and ↓ to move selection ENTER to select boot device to continue.

[Page 51: Boot Booster](#)

Boot Booster v02.58 (C)Copyright 1985-2005, American Megatrends, Inc. Press <F10> to save the configuration and restart Eee PC. Remember to enable Boot Booster after you complete hardware change or system recovery. ASUS Eee PC BIOS SETUP UTILITY Security Boot Exit...

[Page 52](#) Chapter 4: System Recovery...

[Page 53: Appendix](#)

Declarations and Safety Statements Copyright Information Limitation of Liability Service and Support Appendix...

[Page 54: Declarations And Safety Statements](#)

Declarations and Safety Statements Federal Communications Commission Statement This device complies with FCC Rules Part 15. Operation is subject to the following two conditions: • This device may not cause harmful interference, and • This device must accept any interference received, including interference that may cause undesired operation.

[Page 55](#) 802.11b: 0.022 W/kg 802.11g: 0.026 W/kg 802.11n (20M): 0.020 W/kg Eee PC 1015PN / 1015T / 1015B AR5B95 (AW-NE785H) Max. SAR Measurement (1g) 802.11b: 0.024 W/kg 802.11g: 0.026 W/kg 802.11n (20M): 0.026 W/kg 802.11n (40M): 0.025 W/kg ASUS Eee PC...

[Page 56: Declaration Of Conformity](#)

BCM4313 (AW-NB047H) Max. SAR Measurement (1g) 802.11b: 0.01600 W/kg 802.11g: 0.00986 W/kg 802.11n (20M): 0.00734 W/kg Declaration of Conformity (R&TTE directive 1999/5/EC) The following items were completed and are considered relevant and sufficient: • Essential requirements as in [Article 3] •...

[Page 57](#) Country Code selection feature to be disabled for products marketed to the US/CANADA. This Class [B] digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe [B] est conforme à la norme NMB-003 du Canada. ASUS Eee PC...

[Page 58: Ce Mark Warning](#)

Department of Energy helping us all save money and protect the environment through energy efficient products and practices. All ASUS products with the ENERGY STAR logo comply with the ENERGY STAR standard, and the power management feature is enabled by default.

[Page 59: Wireless Operation Channel For Different Domains](#)

11 Aude 24 Dordogne 32 Gers 41 Loir et Cher 55 Meuse 60 Oise 64 Pyrénées Atlantique 66 Pyrénées Orientales ASUS Eee PC Ch01 through CH11 Ch01 through Ch14 Ch01 through Ch13 02 Aisne 03 Allier 08 Ardennes 09 Ariège...

[Page 60: UI Safety Notices](#)

67 Bas Rhin 71 Saône et Loire 84 Vaucluse 90 Territoire de Belfort 94 Val de Marne This requirement is likely to change over time, allowing you to use your wireless LAN card in more areas within France. Please check with ART for the latest information (www.art-telecom.fr) Your WLAN Card transmits less than 100mW, but more than 10mW.

[Page 61: Power Safety Requirement](#)

3Kg must use approved power cords greater than or equal to: H05VV-F, 3G, 0.75mm or H05VV-F, 2G, 0.75mm REACH Notice Complying with the REACH (Registration, Evaluation, Authorisation, and Restriction of Chemicals) regulatory framework, we published the chemical substances in our products at ASUS REACH website at <http://csr.asus.com/english/REACH.htm>. ASUS Eee PC...

[Page 62: Takeback Services](#)

Declaration ASUS follows the green design concept to design and manufacture our products, and makes sure that each stage of the product life cycle of ASUS product is in line with global environmental regulations. In addition, ASUS disclose the relevant information based on regulation requirements.

[Page 63](#) Använd samma batterityp eller en ekvivalent typ som rekommenderas av apparattillverkaren. Kassera använt batteri enligt fabrikantens instruktion. (Swedish) VAROITUS! Paristo voi räjähtää, jos se on virheellisesti asennettu. Vaihda paristo ainoastaan laitevalmistajan suosittelemaan tyyppiin. Hävitä käytetty paristo valmistajan ohjeiden mukaisesti. (Finnish) ASUS Eee PC A-11...

[Page 64](#) ATTENTION! Il y a danger d'explosion s'il y a remplacement incorrect de la batterie.

Remplacer uniquement avec une batterie du même type ou d'un type équivalent recommandé par le constructeur. Mettre au rebut les batteries usagées conformément aux instructions du fabricant.

[Page 65: Copyright Information](#)

KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL ASUS, ITS DIRECTORS, OFFICERS, EMPLOYEES OR AGENTS BE LIABLE FOR ANY INDIRECT, SPECIAL,...

[Page 66: Limitation Of Liability](#)

Warranty Statement. This limit also applies to ASUS' suppliers and its reseller. It is the maximum for which ASUS, its suppliers, and your reseller are collectively responsible. UNDER NO CIRCUMSTANCES IS ASUS LIABLE FOR ANY OF THE FOLLOWING: (1) THIRD-PARTY CLAIMS AGAINST YOU FOR DAMAGES;...

This manual is also suitable for:

1015px-mu17-wt1015px-pu17-bk1015px-pu17-wtEee pc 1015pnEee pc 1015t1015b-mu17-rd ... [Show all](#)