

Boot Booster - Asus Eee PC T101MT User Manual

Windows 7 edition

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67



•

Table of Contents

•

Bookmarks



Boot Booster

The Boot Booster item in BIOS setup helps shorten your Eee PC bootup time. However, you **MUST** disable this BIOS item before you change any

Eee PC components or perform system recovery (from USB flash disk, external optical drive or hidden partition). Follow the instructions below

to disable Boot Booster:

Start the system and press <F2> on bootup to show the POST

1.
screen. Press <F2> again to enter the BIOS setup.

If you fail to see the POST screen or enter the BIOS setup by doing the instruction above, restart the system and try pressing <F2> repeatedly on bootup.

Set Boot Booster to [Disabled]

2.

Boot Device Priority

Boot Settings Configuration

OnBoard LAN Boot ROM

Boot Booster

Press <F10> to save the configuration and restart Eee PC.

3.

Remember to enable Boot Booster after you complete hardware change or system recovery.

4-6

Chapter 4: Support DVD & System Recovery

Boot

[Disabled]

[Disabled]

Specifies the Boot Device Priority sequence.

A virtual floppy disk drive (Floppy Drive B:) may appear when you set the CD-ROM drive as the first boot device.

Select Screen

←→

Copyright 1985-2009, American Megatrends, Inc.

ManualsLib.com

Select Item

↑↓

Enter Go to Sub Screen

F1

General Help

F10

Save and Exit

ESC

Exit

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1
...
51
52
53
54
55
56
57
58

Quick Links:

[Top Side](#)

[Powering on Your Eee Pc](#)

Related Manuals for Asus Eee PC T101MT

[Netbook Asus T101MT-BU37-BK Specification](#)

Touch netbook 10.1" multi-touch tablet (2 pages)

[Laptop Asus Eee PC T91 User Manual](#)

Windows xp edition (68 pages)

[Laptop Asus Eee PC 4G \(701\) User Manual](#)

Asus eee pc user's manual (140 pages)

[Laptop Asus Eee PC 4G Linux Quick Use Manual](#)

(15 pages)

[Laptop Asus Eee PC 1000 Series User Manual](#)

Windows xp edition (44 pages)

[Laptop Asus Eee PC 901 User Manual](#)

Windows xp edition (82 pages)

[Laptop Asus Eee PC 2G Surf XP Quick Use Manual](#)

(8 pages)

[Laptop Asus Eee PC 1215B User Manual](#)

Windows 7 edition (62 pages)

[Laptop Asus Lamborghini VX6 User Manual](#)

Windows 7 edition (62 pages)

[Laptop Asus 1015E E-Manual](#)

(98 pages)

[Laptop ASUS Notebook PC Hardware User Manual](#)

Notebook pc (87 pages)

[Laptop ASUS Notebook PC E-Manual](#)

Notebook pc (120 pages)

[Laptop Asus X453MA Series E-Manual](#)

(112 pages)

[Laptop ASUS NOTEBOOK PC User Manual](#)

Notebook pc (102 pages)

[Laptop Asus Eee PC 1005HAB User Manual](#)

(82 pages)

[Laptop Asus Eee PC 701SD Series User Manual](#)

Asus eee pc 701sd: user guide (80 pages)

Related Content for Asus Eee PC T101MT

[Eee PC 1002HA Linux Boot Booster](#)

Asus Eee PC 1002HA Linux

[Eee PC 1001HT Boot.booster](#)

Asus Eee PC 1001HT

[Eee PC 1000HC Boot Booster](#)

Asus Eee PC 1000HC

[Eee PC 1000HAE Boot.booster](#)

Asus Eee PC 1000HAE