





## Asus AAM6000UG-ALC User Manual

Usb adsl modem for belgacom



1

2

3

Table Of Contents

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24

--	--

•

- 

Troubleshooting

•

Bookmarks

--

[Download this manual](#)

### Quick Links





E1228

Belgacom AAM6000UG - ALC  
USB ADSL Modem

## [Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Asus AAM6000UG-ALC

### [Modem Asus AAM6000UG-ALC Troubleshooting](#)

Usb adsl modem (2 pages)

### [Modem Asus AAM6000EV User Manual](#)

Asustek computer user's manual adsl modem aam6000ev (32 pages)

### [Modem Asus AAM6000EV E User Manual](#)

Aam6000ev/e user's manual (20 pages)

### [Modem Asus ACM6000EB User Manual](#)

Acm6000eb manual (16 pages)

### [Modem Asus ACM6000EB User Manual](#)

(16 pages)

### [Modem Asus AAM6000UG User Manual](#)

Usb adsl modem for software version 9.5 (26 pages)

### [Modem Asus DSL-AC68U Quick Start Manual](#)

Dual-band 802.11ac vdsl/adsl modem router (108 pages)

### [ASUS PCE-AX58BT - AX3000 Dual-Band PCIe Wi-Fi Adapter Quick Start](#)

(article)

### [Modem Asus 4G-N16 Quick Start Manual](#)

Wireless-n300 lte modem router (148 pages)

### [Modem Asus 4G-N16 Manual](#)

Wireless-n300 lte modem router (13 pages)

### [Modem Asus CMAX6000 User Manual](#)

Wireless ax docsis 3.1 cable modem router (47 pages)

### [Modem Asus 4G-AC68U Quick Start Manual](#)

Wireless-ac1900 lte modem router (51 pages)

### [Modem Asus PCE-AC88 Quick Start Manual](#)

(2 pages)

### [Modem Asus 4G-AC53U Quick Start Manual](#)

Wireless-ac750 lte modem router (44 pages)

### [Modem Asus USB SpaceLink Client Quick Start Manual](#)

(6 pages)

### [Modem Asus WL-600g Quick Start Manual](#)

All-in-1 wireless adsl2/2+ home gateway (227 pages)

## Summary of Contents for Asus AAM6000UG-ALC

[Page 1](#) E1228 Belgacom AAM6000UG – ALC USB ADSL Modem User s Manual...

[Page 2](#) Copyright Information No part of this manual, including the products and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission of the manufacturer.

[Page 3](#) Safety Statements This device complies with FCC Rules Part 15. Operation is subject to the following two conditions: • This device may not cause harmful interference, and • This device must accept any interference received, including inter- ference that may cause

undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

## [Page 4: Table Of Contents](#)

Contents 1 Introduction .....5 1.1 Getting Started: System Requirements .....5 1.2 Overview .....6 1.3 Features .....6 1.4 Package Contents ..... 6 2. Installation .....7 2.1 Connecting the USB ADSL Modem .....7 2.2 Windows 98SE .....8 2.3 Windows Me .....

## [Page 5: Introduction](#)

Chapter 1 - Introduction 1 Introduction Study the manual carefully to familiarize yourself with the product, installation and support materials. 1.1 Getting Started: System Requirements Before setting up and running the USB ADSL Modem, ensure that the following conditions are fulfilled: 1.

## [Page 6: Overview](#)

Chapter 1 - Introduction 1.2 Overview The USB ADSL Modem is a universal serial bus ADSL modem. The modem is designed to function with full compatibility with the latest ADSL standards. Ideal for home and small business users, the easy-to-use USB ADSL Modem offers: automatic installation, reliable connectivity and remarkable data transfer rates up to 8Mbps.

## [Page 7: Installation](#)

Chapter 2 - Installation 2.1 Connecting the USB ADSL Modem Front View Rear View ® LINE Cable Connection Diagram Connect the RJ-11 telephone cable as shown below. Outlet Microfilter Telephone LINE RJ-11 cable to Telephone Line USB cable to PC (connect after driver installation) DO NOT CONNECT THE USB CABLE UNTIL THE DRIVER INSTALLATION IS COMPLETE.

## [Page 8: Windows 98Se](#)

Chapter 2 - Installation 2.2 Windows 98SE Installing USB ADSL Modem Drivers 1. Insert the provided CD. The CD should automatically start the driver installation. If your autorun disabled, double-click "Setup.exe" in the root of the CD. 2. Click Next after reading the Welcome screen.

[Page 9](#) Chapter 2 - Installation 5. You will be asked for your Windows 98 SE setup CD. Insert the CD and enter the letter of your CD-ROM drive and the path (if necessary). 6. Restart your computer to complete your ADSL modem installation.

## [Page 10: Windows Me](#)

Chapter 2 - Installation 2.3 Windows Me Installing USB ADSL Modem Drivers 1. Insert the provided CD. The CD should automatically start the driver installation. If your autorun disabled, double-click "Setup.exe" in the root of the CD. 2. Click Next after reading the Welcome screen.

[Page 11](#) Chapter 2 - Installation 2.3 Windows Me Installing USB ADSL Modem Drivers 6. If you see the "Location Information" window, you must select your country or region and enter your telephone area code. Click Close when done. 7. "Shortcut to ADSL USB Modem Connection"...

## [Page 12: Windows 2000](#)

Chapter 2 - Installation 2.4 Windows 2000 Installing USB ADSL Modem Drivers 1. Insert the provided CD. The CD should automatically start the driver installation. If your autorun disabled, double-click "Setup.exe" in the root of the CD. 2. Click Next after reading the Welcome screen.

[Page 13](#) Chapter 2 - Installation 2.4 Windows 2000 Installing USB ADSL Modem Drivers (Cont.) 5. "Shortcut to ADSL USB Modem Connection" icon will appear on your desktop. Double-click the icon to open the connection interface. 6. Enter a username and password and click the Dial button to connect to your Internet Service Provider (ISP).

## [Page 14: Windows Xp](#)

Chapter 2 - Installation 2.5 Windows XP Installing USB ADSL Modem Drivers 1. Insert the provided CD. The CD should automatically start the driver installation. If your autorun disabled, double-click "Setup.exe" in the root of the CD. 2. Click Next after reading the Welcome screen.

[Page 15](#) Chapter 2 - Installation 2.5 Windows XP Installing USB ADSL Modem Drivers (Cont.)  
5. "Shortcut to ADSL USB Modem Connection" icon will appear on your desktop. Double-click the icon to open the connection interface. 6. Enter a username and password and click the Dial button to connect to your Internet Service Provider (ISP).

### [Page 16: Uninstalling Drivers](#)

Chapter 3 - Uninstalling Drivers 3. Uninstalling Drivers 3.1 Windows 98SE Uninstalling USB ADSL Modem Drivers 1. Click Remove Modem Driver from Windows Start menu. 2. Keep your modem connected and click OK. 3. Click OK to restart your computer and complete the uninstallation.

### [Page 17: Windows Me](#)

Chapter 3 - Uninstalling Drivers 3.2 Windows Me Uninstalling USB ADSL Modem Drivers 1. Click Remove Modem Driver from Windows Start menu. 2. Keep your modem connected and click OK. 3. Click OK to restart your computer and complete the uninstallation.

### [Page 18: Windows 2000](#)

Chapter 3 - Uninstalling Drivers 3.3 Windows 2000 Uninstalling USB ADSL Modem Drivers 1. Click Remove Modem Driver from Windows Start menu. 2. Keep your modem connected and click OK. 3. Click OK to restart your computer and complete the uninstallation.

### [Page 19: Windows Xp](#)

Chapter 3 - Uninstalling Drivers 3.4 Windows XP Uninstalling USB ADSL Modem Drivers 1. Click Remove Modem Driver from Windows Start menu. 2. Keep your modem connected and click OK. 3. Click OK to restart your computer and complete the uninstallation.

### [Page 20: Using The Modem](#)

Chapter 4 - Using the Modem 4. Using the Modem 4.1 Front Panel System Indicators The three indicator lights on the front panel illuminate or blink according to the system status as follows: POWER DATA Definition Modem not attached or computer is not ON. Driver not installed, or ADSL line is disconnected.

### [Page 21: Adsl Control And Status](#)

Chapter 4 - Using the Modem 4.2 ADSL Control and Status Access the Control and Status Application (CSA) by double-clicking the DSL icon on the bottom right of the screen. The CSA displays information about the real-time operation of the ADSL modem. DSL icon The DSL icon changes color to indicate the operational status of the ADSL modem.

### [Page 22: Troubleshooting](#)

Appendix - Troubleshooting Troubleshooting If your Internet connection is not working, the following hints may be helpful. If you still cannot make a connection to the Internet after trying the following, it is recommended that you contact your ISP for assistance. Problem 1: I cannot find the Shortcut to ADSL USB Modem Connection on the desktop.

[Page 23](#) Appendix - Troubleshooting Troubleshooting (Cont.) <Windows XP> 1. On the desktop, select Start > Programs > Accessories > Communication > New Connection Wizard 2. At the Network Connection Wizard, click Next 3. In Network Connection Type, select Connect to the Internet. Click Next. 4.

### [Page 24](#) USB ADSL Modem User's Manual...