



# Toshiba RAS-B10 Owner's Manual

Split type; r32 or r410a inverter



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19

20

•

Bookmarks

[Download this manual](#)

### Quick Links



# OWNER'S MANUAL

AIR CONDITIONER (SPLIT TYPE)  
For general public use

# TOSHIBA

Indoor unit

RAS-B10, 13, 16N4KVRG-E

Outdoor unit

RAS-10, 13, 16J2AVSG-E1



R32 or R410A

112985020 **TOSHIBA**

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba RAS-B10

[Air Conditioner Toshiba 16N3KV2-E1 Installation Manual](#)

(276 pages)

[Air Conditioner Toshiba 16N3KVP Series Owner's Manual](#)

(105 pages)

[Air Conditioner Toshiba RAS-B10 Series Installation Manual](#)

(68 pages)

[Air Conditioner Toshiba 24N3KV2 Series Owner's Manual](#)

(26 pages)

[Air Conditioner Toshiba RAS-B07 Installation Manual](#)

Air conditioner (split type) (20 pages)

[Air Conditioner Toshiba RAS-\(B\)10UFV Series Installation Manual](#)

Split type indoor unit outdoor unit (13 pages)

[Air Conditioner Toshiba RAS-B10 SERIES Installation Manual](#)

(10 pages)

[Air Conditioner Toshiba RAS-05, RAS-07 Installation Manual](#)

Inverter (274 pages)

[Air Conditioner Toshiba RAS-B07G3KVSG-E Service Manual](#)

Indoor/outdoor unit, r32 or r410a inverter (146 pages)

[Air Conditioner Toshiba RAS-10 Owner's Manual](#)

18ufv series, 18sav series (19 pages)

[Air Conditioner Toshiba RAS-107 Owner's Manual](#)

Air conditioner (18 pages)

[Air Conditioner Toshiba RAS-10 Owner's Manual](#)

(12 pages)

[Air Conditioner Toshiba RAS-10 Owner's Manual](#)

Split type (8 pages)

[Air Conditioner Toshiba RAS-10SKVP2 series Owner's Manual](#)

Split type (6 pages)

[Air Conditioner Toshiba RAS-10 NAH Series Owner's Manual](#)

(5 pages)

[Air Conditioner Toshiba RAS-10 Series Owner's Manual](#)

Indoor and outdoor unit (5 pages)

## Summary of Contents for Toshiba RAS-B10

[Page 1](#) R32 or R410A OWNER'S MANUAL ENGLISH ENGLISH AIR CONDITIONER (SPLIT TYPE)  
For general public use Indoor unit RAS-B10, 13, 16N4KVRG-E Outdoor unit RAS-10, 13,  
16J2AVSG-E1 1129850201...

### [Page 2: Precautions For Safety](#)

PRECAUTIONS FOR SAFETY Read the precautions in this manual carefully before This appliance  
is filled with R32. operating the unit. ● Keep this manual where the operator can easily find it. ●  
Read the precautions in this manual carefully before operating the unit. ●...

[Page 3](#) PRECAUTIONS FOR SAFETY ● Do not use any refrigerant different from the one

specified (R32) for complement or replacement. Otherwise, abnormally high pressure may be generated in the refrigeration cycle, which may result in a failure or explosion of the product or an injury to your body. ●...

[Page 4](#) INDOOR UNIT DISPLAY REMOTE CONTROL 1 Infrared signal emitter 1 ECO (White) 2 Start/Stop button 2 Wi-Fi access (White) 3 Mode select button 3 PURE (White) 4 Temperature button 4 Timer (White) 5 Fan speed button 6 Menu select button 5 Operation Mode - Cool (Blue) 7 Set louver Up-Down button...

[Page 5](#) MENU SETUP 9.1 LOUVER SWING and HADA CARE FLOW OPERATION Comfortable air flow can select from feature. MENU For select more setting of Air conditioner such as Louver select Hi Power, OFF Timer and other use MENU button Louver swing operation: ●...

[Page 6](#) Hi-P 9.2 SILENT OPERATION (Outdoor Unit) 9.3 Hi POWER OPERATION To automatically control room temperature and airflow for faster cooling or Keep outdoor unit operating silently to ensure either yourself or neighborhood heating operation (except in DRY and FAN ONLY mode) will have a tight sleep in nighttime.

[Page 7](#) 9.5 FIREPLACE OPERATION 9.6 TIMER OFF OPERATION Keep indoor unit's fan blowing continuously during thermo off, to circulate To set the timer OFF when the air conditioner is operating. heat from other sources over the room. There are three setting parameters: 1.

[Page 8](#) PURE MANUAL DEFORST OPERATION 9.7 PLASMA ION OPERATION To defrosting the heat exchanger of the outdoor unit during Heating operation Capture efficiency of floating impurities in the air is accelerated by plasma ion Press and hold : for 5 seconds , then remote control display will contaminates such as bacteria, odor, smoke, dust and virus are caught and MENU deactivated by Plasma Ion.

## [Page 9: Maintenance](#)

TEMPORARY OPERATION MAINTENANCE In case of the misplaced or discharged remote control Firstly, turn off the circuit breaker. ● Pressing the RESET button, the unit can start Indoor Unit and Remote Control or stop without using the remote control. ● Clean the indoor unit and the remote control with a wet cloth when needed. ●...

[Page 10](#) Android : Version 5.0 or later. About Toshiba Home AC Control 1. Toshiba Home AC Control can control AC operation by Smartphone or tablet (mobile device) via internet connection. 2. Everywhere control, control software run on Cloud system and mobile device can set and monitor AC operation via internet connection.

[Page 11](#) Open application and select Log in. Enter user name and Login successful. password. Add Wireless adapter for control by Toshiba Home AC Control application. Wireless adapter Build-in Active Wireless adapter by remote controller and Auto login. Select "Add AC (Adapter)" from both display above.

[Page 12](#) Add Wireless adapter for control by Toshiba Home AC Control application. AC (adapter) connect Active Wireless adapter by Remote controller Press and hold MODE button 5 seconds Wireless LED mark will blink MODE when AP mode active MENU WPS mode...

[Page 13](#) Toshiba Home AC Control application Home screen Weekly schedule Setting Menu Add AC Sub menu all AC All AC On/Off · Add Group · Delete Group Group AC On/Off · Operation Setting Each AC On/Off Sub menu group · Select AC ·...

[Page 14](#) Mode and Condition setting. Enter operation mode of All AC Enter operation mode of Group AC Enter operation mode of each AC Mode select for Toshiba Home AC Control application. Provide for 5 operation modes Auto Cool Heat Fan only...

[Page 15](#) Setting in operation mode. Tab for select AC Weekly schedule OFF-ON timer set 0.5-12hrs. Mode select OFF-ON Timer set Temperature set Indoor temperature Outdoor temperature ON timer set from Off mode only Fan speed set Louver set Special feature Off mode...

[Page 16](#) Group operation. Maximum 3 groups 1 Group maximum = 10 units. Add group Add AC in group Delete AC in group...

[Page 17](#) Weekly schedule set. Day select Monday - Sunday Weekly schedule of all AC unit  
Weekly schedule of all AC unit Time select Weekly schedule set for each unit Mode select Select  
program for active by tick at select box Weekly schedule cancel. Weekly schedule not set  
Weekly schedule...

[Page 18](#) Energy monitoring Select Room for Energy monitoring Select Energy monitoring  
Energy monitoring display Set cost calculate and currency Select Energy monitoring display  
Export data and send by Email...

[Page 19](#) In case of have some problem can check from Help menu. Note : “ The Wireless  
Adapter must be installed, maintained, repaired and removed by a qualified installer or qualified  
service person.” “Contact dealer and/or service center when equipment is malfunction.”...

This manual is also suitable for:

Ras-b1316n4kvrg-eRas-10Ras-1316j2avsg-e1Ras-b10n4kvrg-e ... [Show all](#)