



Asus P527 Firmware Update

1
2
3
4
5
6
7
8
9

--


•

Bookmarks

--

[Download this manual](#)

Quick Links

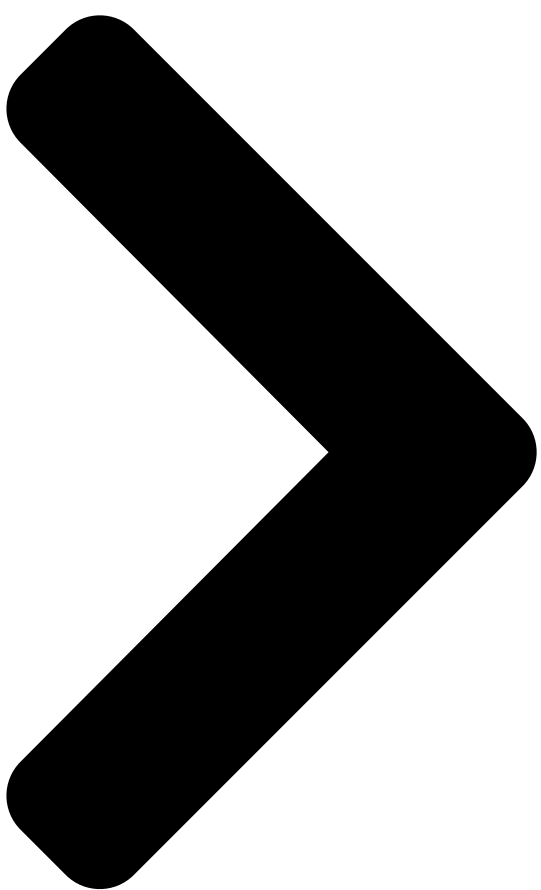

FUU_SOP

☐Notices☐

◎Summary☐

Welcome to use ASUS P527 update updating Firmware. You would use this updating

program to update the latest newly version of ASUS P527 internal firmware. So, this

will enhance the ASUS P527 cellphone's stability and make its performance better. Read the following introduction carefully before updating.

◎Updating program supports following operation system☐

Windows 2000□Windows XP□Windows Vista edition

◎Attention□

1. In order to maintain the computer's stability and avoid updating failures, don't operate many programs simultaneously.

2. The previous data couldn't be preserved after updating newly edition firmware.

Please use the additional backing program to back up your data.

3. Don't update other languages' or regions' firmware edition to your PDA cellphone.

4. Don't remove USB cable before updating finished.

5. You should back up all the encrypted data on SD card before updating, because the

file on encrypted SD card can't be opened after updating.

◎Procedure:

1. Firstly, check the power left if it is up 50%, and keep cellphone was turned on.

2. Synchronize device to PC with USB.

3. Check PC installing the [ActiveSync 4.5] (windows 2000, XP) or [WMDC] (windows vista) and make sure it's in connection status.

4. Click [update] button to upgrade.

5. If it failed to upgrade, please keep USB connect to PC and re-execute firmware, following expert mode to upgrade.

[Next Page](#)

1
2
3
4
5

Related Manuals for Asus P527

[Cell Phone Asus 90A-S5G1007T User Manual](#)

User manual (174 pages)

[Cell Phone Asus P527 Quick Start Manual](#)

Asus p527: quick start (39 pages)

[PDA Asus P527 - Smartphone - GSM Service Manual](#)

Service manual (35 pages)

[Cell Phone Asus P525 User Manual](#)

Asus cell phone user manual (134 pages)

[Cell Phone Asus P525 Quick Start Manual](#)

(25 pages)

[Cell Phone Asus P526 User Manual](#)

Asus cell phone user manual (122 pages)

[Cell Phone Asus P526 Service Manual](#)

Asus p526 cell phone service manual (12 pages)

[Cell Phone Asus P526 Service Manual](#)

Repair lv3 4 sop (113 pages)

[Cell Phone Asus P535 Quick Start Manual](#)

(27 pages)

[Cell Phone Asus P505 Service Manual](#)

P505 (29 pages)

[Cell Phone Asus P550 User Manual](#)

Asus p550 user manual in traditional chinese (140 pages)

[Cell Phone Asus P550 User Manual](#)

(60 pages)

[Cell Phone Asus P565 Troubleshooting Manual](#)

(97 pages)

[Cell Phone Asus P565 User Manual](#)

User manual (190 pages)

[Cell Phone Asus P552w User Manual](#)

User manual (186 pages)

[Cell Phone Asus P552W Manual](#)

Level 3,4 (117 pages)

Summary of Contents for Asus P527

[Page 1](#) ©Summary Welcome to use ASUS P527 update updating Firmware. You would use this updating program to update the latest newly version of ASUS P527 internal firmware. So, this will enhance the ASUS P527 cellphone's stability and make its performance better.

[Page 2](#) I. Install ASUS P527 updating procedure application. Installing. Finish installation.

[Page 3](#) II. Execute upgrade procedure. 1. Turn on device. 2. Synchronize device to PC with USB 3. Make sure synchronization is successful. Status: [Connected] 4. ASUS P527 updating procedure's main window looks like as below, click [update] button.

[Page 4](#) <Note1□If appear the below information, make sure cellphone synchronize to PC successfully.> <Note2□Make sure power is above 50%, or update wouldn't go on.>...

[Page 5](#) 5. Confirm firmware. Cellphone firmware version is different according to different BootCode. The updating procedure will auto run. Before [update] button change into [Finish], please don't pull out USB in case of fail.

[Page 6](#) . Updating procedure then will be shown on cellphone. 7. Please wait for 5-7 minutes. 8. Updating finish, Click [Finish]...

[Page 7](#) III. Saving update if failed with above method. 1. If it failed to update, please don't remove battery. 2. Re-turn on cellphone, Set Keylock and press [OK], then press reset to restart cellphone to show like as below. 3. Connect cellphone to PC with USB. Set Keylock Push (OK □)

[Page 8](#) 4. Execute ASUS P527 updating procedure, click [Expert Mode].

[Page 9](#) 5. Start saving update. 6. Wait for 5-7 minutes until expert mode update finish. 7. Cellphone will restart automatically.