



# Table Of Contents - Toshiba ST-B10 Series Maintenance Manual



1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126

• PAGE

OF 126 GO

•

- 

Troubleshooting



•

## Bookmarks





## 1. UNPACKING

1- 1

1.1

Procedure

1

1.2

Checks

. 1- 2

1.3

1-

[Tapes](#)

.....  
... 1- 2

1.4

[Notes for Installation](#)

..... 1- 2

[2. INSTALLATION PROCEDURE FOR OPTIONAL EQUIPMENT](#)..... 2- 1

2.1

[Removing/Attaching the Top Cover](#)..... 2- 2

2.2

[Installing the Hard Disk Drive \(HDD\)](#)..... 2- 4

[3. MAIN UNIT REPLACEMENT](#)..... 3- 1

3.1

[Replacing the Main Board](#)..... 3- 1

3.2

[Replacing the LVDS Display Card](#)..... 3- 4

3.3

[Replacing the PS Unit](#)..... 3- 8

3.4

[Replacing the Fan Motor](#)..... 3-11

3.5

[Replacing the Panel Card](#)..... 3-15

[4. BIOS SETUP](#)..... 4- 1

4.1

[General](#)

4- 1

4.2

[Basic Operation and Keys Used](#)..... 4- 1

4.3

[BIOS Setup Screen Configuration and Default Setting](#)

..... 4- 6

4.4

[Notes and](#)

[Restrictions](#).....

4-28

[Appendix-1 BIOS Error Message](#)

[List](#).....

4-31

[5. DIAGNOSTIC TEST OPERATION](#)

..... 5- 1

5.1

[Outline](#).....

..... 5- 1

5.2

[Serviceman Diagnostic Test Program Setup](#)

[Procedure](#).....

5- 2

5.3

[ST-B10 Diagnostic](#)

[Menu](#).....

5- 5

5.4

[Serviceman Diagnostic Test Program](#)

..... 5- 6

[6. PERIODIC MAINTENANCE](#)

..... 6- 1

6.1

[Procedure of Periodic Maintenance](#)

..... 6- 1

[7.](#)

[TROUBLESHOOTING](#).....

..... 7- 1

**TABLE OF CONTENTS**

E018-12017

Page

[Previous Page](#)  
[Next Page](#)

1  
2  
3  
4  
5  
6  
7



## Related Manuals for Toshiba ST-B10 Series

[Touch terminals Toshiba ST-B10 SERIES Quick Installation Manual](#)

Pos terminal (6 pages)

[Touch terminals Toshiba ST-7000-C Series Owner's Manual](#)

Pos terminal (18 pages)

[Touch terminals Toshiba ST-A20 SERIES Owner's Manual](#)

Pos terminal (26 pages)

[Touch terminals Toshiba ST-71 SERIES Owner's Manual](#)

Pos terminal (25 pages)

[Touch terminals Toshiba ST-A10 SERIES Owner's Manual](#)

(24 pages)

[Touch terminals Toshiba ST-70 SERIES Owner's Manual](#)

Tec pos terminal (22 pages)

[Touch terminals Toshiba 4818-T10 User Manual](#)

(42 pages)

[Touch terminals Toshiba 4818-T10 Service Manual](#)

(22 pages)

[Touch terminals Toshiba 4818-ET1 User Manual](#)

(42 pages)

[Touch terminals Toshiba 4818-T10 Operating System Installation Manual](#)

(3 pages)

[Touch terminals Toshiba TFTST-76T-5A SERIES Owner's Manual](#)

Flat display unit (24 pages)

[Touch terminals Toshiba ST-7000 Series Owner's Manual](#)

Pos terminal (16 pages)

[Touch terminals Toshiba TEC POS ST-5600 Series Owner's Manual](#)

(22 pages)

## Related Content for Toshiba ST-B10 Series

[4818-T10 Contents](#)

[Toshiba 4818-T10](#)