

Design Mode - Toshiba S5ES Series Service Manual

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50

•

[Table of Contents](#)

•

Bookmarks



1. ENTERING TO DESIGN MODE

1) When in Service mode (see page 8), press CALL button on the remote control once.

S

When QA10 is initialized, items "OPT" ,"OPT1" and "OPT2" of DESIGN MODE are set to the data of the representative model of this chassis family.

Therefore, because ON-SCREEN specification remains in the state of the representative of model, this model is required to reset the data of items "OPT" ,"OPT1" and "OPT2" according to current on-serviced model.

DESIGN MODE

2. SELECTING THE ADJUSTING ITEMS

Every pressing of CH \updownarrow button in the design mode changes the adjustment items in the order of table-3. (s button for reverse order)


Refer to table-3 for data of design mode.

(See SETTING & ADJUSTING DATA on page 14)

3. ADJUSTING THE DATA

Pressing of ; -/+ buttons will change the value of data.

All manuals and user guides at all-guides.com

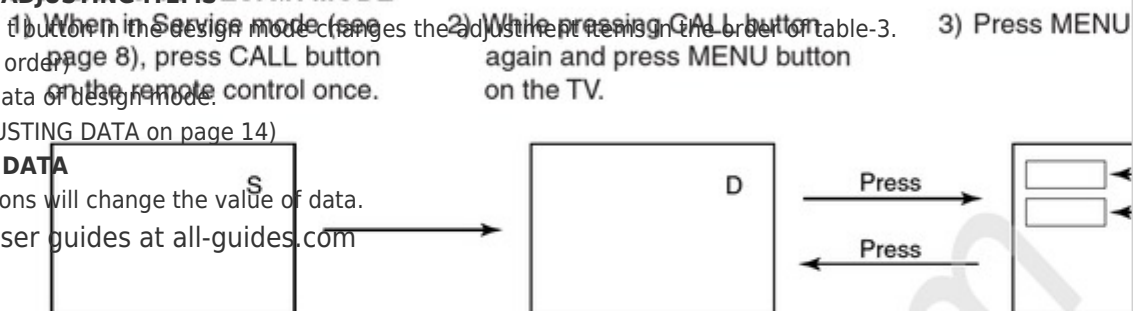

DESIGN MODE

2) While pressing CALL button again and press MENU button on the TV.

D

(Design mode)

- 11 -

3) Press MENU button on TV.

ITEM

Press

DATA

Press

(Adjustment mode)

1. ENTERING TO DESIGN MODE

1) When in Service mode (see page 8), press CALL button on the remote control once.

2) While pressing CALL button again and press MENU button on the TV.

3) Press MENU

DESIGN MODE

[Table of Contents](#)

Next Page

1
...
8
9
10
11
12
13
14
15

Quick Links:

[Circuit Block Diagram](#)

Related Manuals for Toshiba S5ES Series

[TV Toshiba S5ES Series Service Manual](#)

(46 pages)

[TV Toshiba 29CZ5DE Service Manual](#)

S5es series (50 pages)

[TV Toshiba 29CZ6DA Owner's Manual](#)

Color television (20 pages)

[TV Toshiba CPBRO2005Eu Catalog](#)

Home cinema catalogue 2005-6 (21 pages)

[TV Toshiba Stasia 17WL46 Catalogue](#)

Television plasma, lcd, projector, dvd video (9 pages)

[TV Toshiba 32SL863B Owner's Manual](#)

SI86* digital series, ul86* digital series (102 pages)

[TV Toshiba 22BL704B Owner's Manual](#)

Digital series (48 pages)

[TV Toshiba 32BV801B User Manual](#)

Digital series (45 pages)

[TV Toshiba 32BV501B User Manual](#)

Digital series (49 pages)

[TV Toshiba 42VL963B Owner's Manual](#)

VI96 digital series (92 pages)

[TV Toshiba 32SL753B Owner's Manual](#)

SI75* digital series, wI75* digital series, rw75* digital series (78 pages)

[TV Toshiba 46SV685DB Owner's Manual](#)

Sv6 digital series (62 pages)

[TV Toshiba 29CJZ5SR Service Manual](#)

(52 pages)

[TV Toshiba 43 UF3D Series Operating Instructions Manual](#)

(29 pages)

[TV Toshiba 40VL20 Series Owner's Manual](#)

Led lcd tv (60 pages)

[TV Toshiba 43VJ33P Service Manual](#)

(78 pages)

Related Content for Toshiba S5ES Series

[21CSZ2R Design Mode](#)

Toshiba 21CSZ2R

[28ZH37P Design Mode](#)

Toshiba 28ZH37P

[21SZ5E1 Design Mode](#)

Toshiba 21SZ5E1

[32Z23B Design Mode](#)

Toshiba 32Z23B

[14V2E Design Mode](#)

Toshiba 14V2E

[21VZ5E Design Mode](#)

Toshiba 21VZ5E

[36JW9UA Design Mode](#)

Toshiba 36JW9UA

[13A20 Design Mode](#)

Toshiba 13A20

This manual is also suitable for:

[29cz5de29cz5t29cz6si](#)