



# Names And Functions Of Controls - Toshiba S5ES Series Service Manual



1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50

---

•

[Table of Contents](#)

•

## Bookmarks







## NAMES AND FUNCTIONS OF CONTROLS

### TV Front and Remote control

j  
i  
h  
TV  
a  
q  
b  
c  
q

 
 
## NAMES AND FUNCTIONS OF CONTROLS

Model 29CZ5DE is used in this manual for illustration purpose.

### TV Front and Remote control

Main power on/off



Remote sensor

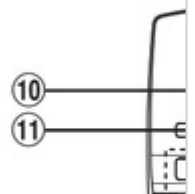

# NAMES AND FUNCTIONS OF CONTROLS

Model 29CZ5DE is used in this manual for illustration purpose.
  
## TV Front and Remote control

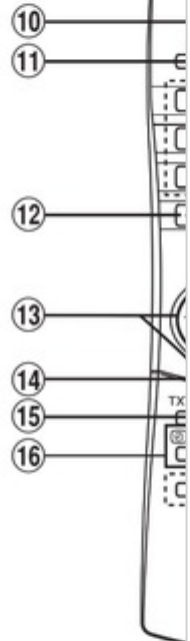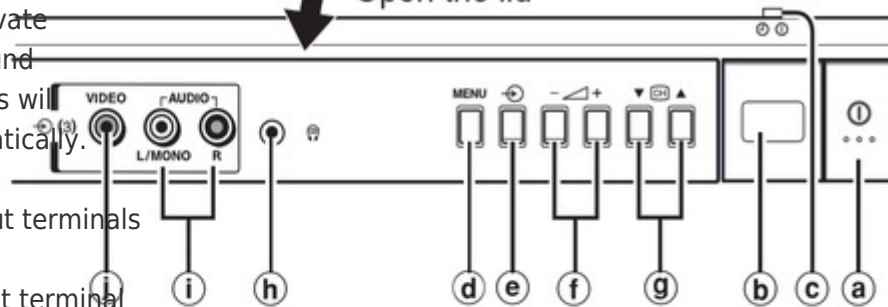

- r Power indicator (red)
- Timer-ON indicator (green)
- d MENU Turn on menu display
- e Input source selection
- a
- f
- ; +
- Volume down/up, Menu selection or item adjust
- g
- s Channel down/up,
- tc
- Menu item selection
- h
- Stereo headphones jack
- L
- (Ø3.5mm) for private listening. The sound from the speakers will be cut off automatically.
- i
- AUDIO Audio input terminals
- j
- VIDEO Video input terminal

All manuals and user guides at all-guides.com  
 Model 29CZ5DE is used in this manual for illustration purpose.

TV			Remote Control				
(a)	Ⓚ	Main power on/off	(1)	Ⓚ	Power on/standby	(10)	Ⓜ/Ⓜ
(b)		Remote sensor	(2)	Ⓜ	Sound Mute, press again or $\triangle$ -/+ to restore the sound.	(11)	Ⓜ
(c)	Ⓚ	Power indicator (red)	(3)	0~9	Number buttons	(12)	-/--
	Ⓚ	Timer-ON indicator (green)	(4)	Ⓚ	Input source selection, Timer-ON position setting	(13)	$\triangle$ -/+
(d)	MENU	Turn on menu display	(5)	MENU	Turn on menu display	(14)	Ⓜ
(e)	Ⓚ	Input source selection	(6)	CH $\blacktriangle$ / $\blacktriangledown$	Channel up/down, Menu item selection	(15)	TXT/TV
(f)	$\triangle$ -/+	Volume down/up, Menu selection or item adjust	(7)	Ⓜ	Sound menu	(16)	Ⓜ/EX
(g)	$\blacktriangledown$ CH $\blacktriangle$	Channel down/up, Menu item selection	(8)	CALL/Ⓜ	On-screen on/off, Turn off the screen		Ⓜ
(h)	Ⓜ	Stereo headphones jack (Ø3.5mm) for private listening. The sound from the speakers will					Ⓜ

Timer-ON position setting  
 Switch the active teletext page of the double window mode  
 5 MENU Turn on menu display  
 6  
 Channel up/down,  
**CH s/t**

## NAMES AND FUNCTIONS OF CONTROLS

Model 29CZ5DE is used in this manual for illustration purpose.

Menu item selection

### TV Front and Remote control

7  
 Sound menu  
 8  
 8  
 On-screen on/off,  
**CALL/i**

Turn off the menu,  
 Teletext initial/index

9  
 Teletext colored buttons  
 Red/Green/Yellow/Blue

- 15 -

!

"

#

\$

%

&

(

b

c

a

### Remote Control

!

ml/ll

; -/+

to

"

#

-/--

\$

; -/+

%

 
 
& TXT/TV Teletext/TV selection

(

y/x



Open the lid

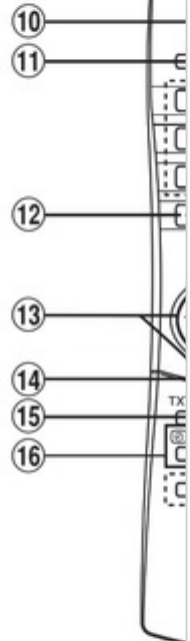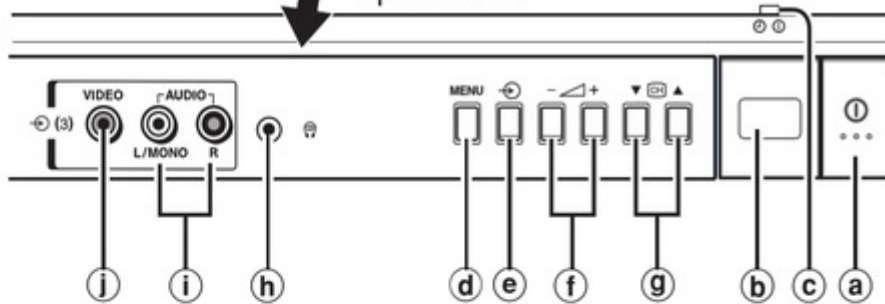

TV			Remote Control				
a	⏻	Main power on/off	1	⏻	Power on/standby	10	⏻/⏻
b	📶	Remote sensor	2	🔇	Sound Mute, press again or $\triangle$ -/+ to restore the sound.	11	📶
c	🔴	Power indicator (red)	3	0~9	Number buttons	12	-/--
	🟢	Timer-ON indicator (green)	4	📶	Input source selection, Timer-ON position setting	13	$\triangle$ -/+
d	MENU	Turn on menu display	5	MENU	Turn on menu display	14	📶
e	📶	Input source selection	6	CH $\triangle$ / $\nabla$	Channel up/down, Menu item selection	15	TXT/TV
f	$\triangle$ - / +	Volume down/up, Menu selection or item adjust	7	🔊	Sound menu	16	📶/EX
g	$\nabla$ CH $\triangle$	Channel down/up, Menu item selection	8	CALL/📶	On-screen on/off, Turn off the menu		📶
h	🎧	Stereo headphones jack (Ø3.5mm) for private listening. The sound from the speakers will					

^

?

V

1

2

3

4

5

6

7

8

9


# NAMES AND FUNCTIONS OF CONTROLS

 Model 29CZ5DE is used in this manual for illustration purpose.

## TV Front and Remote control



Open the lid

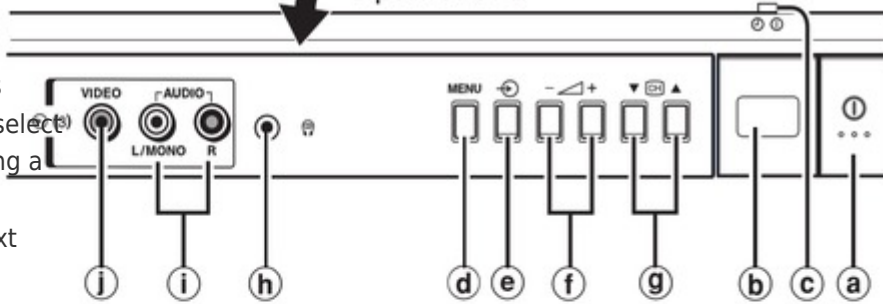

10

11

12

13

14

15

16

- Stereo/bilingual selection
- Double-window on/off
- Digit selection
- Volume down/up, Menu selection or item adjust
- Picture menu
- Teletext functions
  - Time display, To select a page while viewing a normal picture
  - To enlarge teletext display size
  - To reveal concealed text
  - To hold a wanted page

TV

Remote Control

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
12  
13  
14  
15  
16  
17  
18  
19

Quick Links:

[Circuit Block Diagram](#)

## Related Manuals for Toshiba S5ES Series

[TV Toshiba S5ES Series Service Manual](#)

(46 pages)

[TV Toshiba 29CZ5DE Service Manual](#)

S5es series (50 pages)

[TV Toshiba 29CZ6DA Owner's Manual](#)

Color television (20 pages)

[TV Toshiba CPBRO2005Eu Catalog](#)



Home cinema catalogue 2005-6 (21 pages)

[TV Toshiba Stasia 17WL46 Catalogue](#)

Television plasma, lcd, projector, dvd video (9 pages)

[TV Toshiba 32SL863B Owner's Manual](#)

SI86\* digital series, ul86\* digital series (102 pages)

[TV Toshiba 22BL704B Owner's Manual](#)

Digital series (48 pages)

[TV Toshiba 32BV801B User Manual](#)

Digital series (45 pages)

[TV Toshiba 32BV501B User Manual](#)

Digital series (49 pages)

[TV Toshiba 42VL963B Owner's Manual](#)

VI96 digital series (92 pages)

[TV Toshiba 32SL753B Owner's Manual](#)

SI75\* digital series, wl75\* digital series, rw75\* digital series (78 pages)

[TV Toshiba 46SV685DB Owner's Manual](#)

Sv6 digital series (62 pages)

[TV Toshiba 29CJZ5SR Service Manual](#)

(52 pages)

[TV Toshiba 43 UF3D Series Operating Instructions Manual](#)

(29 pages)

[TV Toshiba 40VL20 Series Owner's Manual](#)

Led lcd tv (60 pages)

[TV Toshiba 43VJ33P Service Manual](#)

(78 pages)

## Related Content for Toshiba S5ES Series

[42WH18P Location Of Controls](#)

Toshiba 42WH18P

[STAR SIGHT CN35F90 Location Of Controls](#)

Toshiba STAR SIGHT CN35F90

[2132DS Tv Front \(Controls And Connections\)](#)

Toshiba 2132DS

[42H82 Location Of Controls](#)

Toshiba 42H82

[CZ19M21 Operation Of Controls \(Tv Set\)](#)

Toshiba CZ19M21

[CF32F50 Location Of Controls](#)

Toshiba CF32F50

[CN27D90 Location Of Controls \(Tv Set\)](#)

Toshiba CN27D90

[CF36G40 Location Of Controls \(Tv Set\)](#)

Toshiba CF36G40

This manual is also suitable for:

[29cz5de29cz5t29cz6si](#)